

# Wireless Headphone--PCEWHWHP

## Key Operating Instructions:

### 1. “ O ”

Turn on/off key, Long press three seconds to power on/off

Wireless call status, Short press to receive calls, Long press to refuse, press twice to redial

Wireless playback status, Short press to play/pause

Insert the TF card, Short press to play/pause

FM status, tap to automatically search for stations

### 2.“ ⏮ ”

In Wireless mode, Short press: Previous; Long press: Volume -

In MP3 Mode, Short press: Previous; Long press: Volume -

FM status, Short press for the last frequency point, Long press for volume -

### 3.“ ⏭ ”

In Wireless state, Short press: Next; Long press: Volume +

In MP3 Mode, Short press: Next; Long press: Volume +

FM status, Short press for the next frequency point, Long press for volume +

### 4.“ M ”

Short press for Mode Switching, wireless /MP3/FM

Long press the M button to turn on/off the LED light


## LED Indicator:

Wireless status: blue and red light flash in pairing status. After pairing, the blue light flashes slowly

MP3 status: blue light flashes slowly when playing

FM status: blue light flashes slowly when the radio is on

Charging status: the red light is on steadily when charging, and the red light w

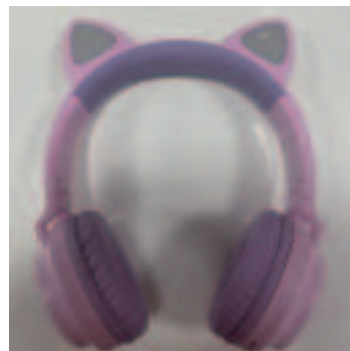

## Wireless Operating Instructions:

1.Long press O button for three seconds to power on, it is Wireless of the default

2.The blue/red light twinkles fast, Wireless into pairs.

3.When your mobile phone searches the Wireless product, the Wireless name is Cat ear Headphones

4.When your mobile phone searches the Wireless product and connects successfully, if it displays need put into the password, the password is 0000

5.The blue light will continuous flash 2 times on each 5 seconds after Wireless connects successfully

6.When you open your mobile phone of music player, you can listen to the music, this product can control the next song and previous song by Wireless, play and pause, answer the phone and red

## MP3 Operating Instructions:

1.Long press O button for 3 seconds to power on

2.Insert TF card that the MP3 will play automatically. Short press M key: switch to MP3 mode.

3.Short press O key: MP3 play/pause

4.Short press ⏭ /⏮ next/previous song

5.Long press ⏭ /⏮ Volume +/-

## FM Operating Instructions:

1.Long press O button three seconds to power on

2.Short press M: FM mode

3.FM status, Short press O to automatically search all stations that can be received at one time

4.Short press ⏭ /⏮ select stations that have been searched

5.Long press ⏭ /⏮ Volume +/-

## LINE External Audio Input Instructions:

- 1.1.Power on mode, insert the Audio cable will turn to AUX LINE IN mode.
- 2.Support mobile phone/MP4/MP3/CD/PC,etc

## Functional Parameter:

USB charge: DC 5V IN

FM frequency: 87.5-108MHz

Wireless frequency: 2.402-2.480GHz

Wireless range: 10 meters

Frequency response: 20 KHZ - 20 KHZ

Output power: 35mW

SNR: 88dB

Charging time: <2hours

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment