



Bluetooth Stereo Headphone
Operation Manual DG-4345
RF ID: 820255
KCC ID: 2A7RHA-SB-F

NOTE
Thank you for purchasing the Bluetooth Stereo Headphones. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Bluetooth Stereo Headphone
- USB Charging Cable
- Operation Manual

KEY FEATURES

- Compatible with Bluetooth-enabled devices
- Built-in rechargeable battery
- Volume control via remote control

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquid to prevent against electric shock, explosion and/or fire to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Ready to electrical equipment should only be performed by a qualified electrician. improper repair may place the user at risk of injury.

Do not puncture or harm the external surface of the product in any way.

Keep the unit free from dust, etc.

Do not use the unit for anything other than its intended use or purpose. Doing so may damage the device.

The products are not to be kept out of reach of children.

Do not use the headset or excessive levels as this may damage hearing.

Do not expose batteries, battery pack, or batteries to excessive heat, such as direct sunlight, or open flame.

When the battery is low, the LED will flash red for 30 seconds and blue warning beep. When this happens, charge your headset.

TURNING HEADSET ON/OFF
Power On: Move ON/OFF switch to ON position and the LED flashes blue.

Power Off: Move ON/OFF switch to OFF position and headset will turn off.

PAIRING THE HEADPHONES

1. Ensure the headphones are turned off. If they are not, please turn off the headphones first before pairing.
2. Move ON/OFF switch to ON position and the LED flashes blue.
3. Place the headphones and the Bluetooth device to which you want to pair it while the operating distance. We recommend keeping the two devices no further than 10m apart.
4. Press Bluetooth is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
5. Once you have activated Bluetooth on your device, select the headphone "DG-4345" from the list of available Bluetooth devices.
6. Please note, pairing mode on the headphones will last for two minutes. If no device is paired after two minutes, the earphones will automatically return to standby mode.
7. If pairing is unsuccessful, turn off the headphones first and repeat following the above-stated steps. Once you have paired the earphones with a device, the headphones will remember the device and will pair automatically when the device's Bluetooth is activated again in range. You do not need to repeat any previously completed devices.

CHARGING THE HEADPHONES
The headphones come with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the headphones.

Connect the USB cable to a computer USB port and the USB plug to the charging jack of the headset. The red LED light will illuminate while the headphones are charging.

A full charge of the battery takes around 4 hours. When the battery is fully charged, the LED light will turn off.

Utterly. Disconnected the headset of this part. The headset will then be ready for use.

When the battery is low, the LED will flash red for 30 seconds and blue warning beep. When this happens, charge your headset.

TURNING HEADSET ON/OFF
Power On: Move ON/OFF switch to ON position and the LED flashes blue.

Power Off: Move ON/OFF switch to OFF position and headset will turn off.

PAIRING THE HEADPHONES

1. Ensure the headphones are turned off. If they are not, please turn off the headphones first before pairing.
2. Move ON/OFF switch to ON position and the LED flashes blue.
3. Place the headphones and the Bluetooth device to which you want to pair it while the operating distance. We recommend keeping the two devices no further than 10m apart.
4. Press Bluetooth is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
5. Once you have activated Bluetooth on your device, select the headphone "DG-4345" from the list of available Bluetooth devices.
6. Please note, pairing mode on the headphones will last for two minutes. If no device is paired after two minutes, the earphones will automatically return to standby mode.
7. If pairing is unsuccessful, turn off the headphones first and repeat following the above-stated steps. Once you have paired the earphones with a device, the headphones will remember the device and will pair automatically when the device's Bluetooth is activated again in range. You do not need to repeat any previously completed devices.

CHARGING THE HEADPHONES
The headphones come with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the headphones.

Connect the USB cable to a computer USB port and the USB plug to the charging jack of the headset. The red LED light will illuminate while the headphones are charging.

A full charge of the battery takes around 4 hours. When the battery is fully charged, the LED light will turn off.

back you want to listen to on your device to listen via earphones. Should you encounter any problems while streaming, please refer to your device's user manual.

MANUAL KEY FUNCTIONS
Your headphones are equipped with a few shortcut keys. Please note the following functions:

1. Answering/Call
When a call comes in, you will hear a ring tone and the headset will flash red and green. Press the Multifunction Button to answer the call. The LED indicator light will turn green to indicate the call is connected. Press the volume control buttons to adjust volume on your call.
2. Rejecting a Call
When a call comes in, to reject the call, press the Multifunction Button twice in quick succession to reject the call.
3. Endless Call
During talking, press the Multifunction Button again to end or disconnect the call.
4. Redialing
Press the Multifunction Button twice in rapid succession to redial the last disconnected number.
5. Volume Control
When listening to music or on a call, you can adjust volume by pressing the left or right button accordingly.

AUTOMATIC PAIRING
After powering off your headset, press and hold the Multifunction Button. Release the button when the light flashes green. Don't press and hold until you see the light flash green and red.

At the time, if the headset does not complete pairing with any equipment in range, it will automatically enter device search status. Next time your device turns on, it will automatically be paired with the headset. If this does not happen, you may have to repeat you device.

Follow instructions in "PAIRING THE HEADPHONES" to pair.

RECONNECTING
After the headset and your device disconnected, the

headset will enter standby status. The indicator light will flash red. Press the Multifunction Button and the headset will automatically reconnect.

PAIRING TO YOUR COMPUTER
If your computer is equipped with Bluetooth, use the Bluetooth software to connect to your headphones. If you are unsure about this, please refer to your computer's operation manual or contact your computer's manufacturer for more details.

If your computer does not have built-in Bluetooth, you can use a Bluetooth USB receiver (not included here) and install the VIB Bluetooth driver software.

INSTALLING THE BLUETOOTH DRIVER

1. Insert your Bluetooth USB receiver into your computer.
2. Select the headset on the pop-up mode.
3. Start the VIB Bluetooth software on your computer.
4. Click "Refresh Equipment" in "View Menu" to start searching for Bluetooth devices in range.
5. Find and select "DG-4345" on the device list. Right click, using your mouse and select "Connection". Two options will appear: A. Bluetooth High quality audio service (for listening to music). B. Bluetooth headset service (for VIB Call). After making the appropriate selection, the computer will require a PIN code to connect. Enter "0000" to pair.
6. If the headset is not in use for a long period of time, place it in a dry, cool location. The headset will need to be charged every 2 months to maintain battery life.

CALL AND MAINTENANCE

- Do not expose the unit to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.
- Do not use excessive cleaning agents to clean the unit.
- Do not expose the unit to extremely high or low temperatures or it will shorten the life of the electronic device, deplete the battery, and/or distort audio playback.
- Do not dispose of the unit in the fire as it may explode or catch fire.
- Do not expose the unit to contact with sharp objects as it will cause scratch and damage.
- Do not enter the unit into high speed process, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

In the event that the unit does not function properly, please fill in the form where we was purchased.

SPECIFICATIONS

Bluetooth:	3.0
Frequency:	2.4GHz/2.340GHz
Transmitter:	Class 1
Operating Range:	Up to 10m (30ft)
Frequency Response:	20Hz-20kHz
Impedance:	16Ω

a. Check whether the volume is at a minimum.
b. Delete all paired Bluetooth devices from your device and pair the headset again.
c. Your headset's modeling and/or operation notes: a. Make sure the device is within effective operating distance and no obstacles are blocking the signal. If anything is blocking the signal, the sound may distort or be interrupted by the headset.
b. The constant beeping may be due to the battery warning.
c. Some mobile devices do not support Bluetooth communication and do not support Bluetooth music streaming.

BATTERY MAINTENANCE

1. Do not play with battery life, turn off the headset when not in use.
2. If the headset is not in use for a long period of time, place it in a dry, cool location. The headset will need to be charged every 2 months to maintain battery life.

CALL AND MAINTENANCE

- Do not expose the unit to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.
- Do not use excessive cleaning agents to clean the unit.
- Do not expose the unit to extremely high or low temperatures or it will shorten the life of the electronic device, deplete the battery, and/or distort audio playback.
- Do not dispose of the unit in the fire as it may explode or catch fire.
- Do not expose the unit to contact with sharp objects as it will cause scratch and damage.
- Do not enter the unit into high speed process, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

In the event that the unit does not function properly, please fill in the form where we was purchased.

SPECIFICATIONS

Bluetooth:	3.0
Frequency:	2.4GHz/2.340GHz
Transmitter:	Class 1
Operating Range:	Up to 10m (30ft)
Frequency Response:	20Hz-20kHz
Impedance:	16Ω

Speaker Power Rating: 10W
Battery: Built-in Lithium Ion
Battery Capacity: 120mAh
Input: DC5V, 500mA
Charge Time: Up to 4 hours
Play Time: Up to 10 hours
Standby Time: Up to 120 hours

WARRANTY INFORMATION
The condition of the warranty and our responsibility under the warranty are as follows:

Supplier's warranty is non-transferable. And the warranty is effective to the original purchaser only.

*The manufacturer does not provide the date of original purchase of the unit with a dated receipt.

*The warranty is not applicable if the product has been subjected to physical abuse, improper installation, modification, or repair by unauthorized third party.

*The manufacturer's disclaimer of liability shall be limited to the repair or replacement of the product as its sole obligation.

*Specifically exempt from any warranty are irreplaceable consumable components subject to normal wear and tear such as earbuds, diaphragms, and other accessories.

*A supplier will not take any responsibility if the failure of the unit is due to the user's misuse or damage.

*Modification and repair of the unit should be done by authorized and qualified service personnel. Center or returned to the manufacturer.

*The warranty does not cover any accessories that are not included in the product, and you may also have other rights which vary under local laws.

conditions for repair, damage or defect determined later than 12 months after the purchase date, proof of a manufacturing defect must be submitted for repair under warranty.

2) The warranty does not cover batteries and other parts which are considered consumables, or in that break easily such as glass or plastic or defects caused on normal wear and tear. There is no warranty obligation in the event of changed differences compared to the original appearance and wear/tear provided there have no negligible effect on the product's fitness for use. In the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.

3) The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. VIBE® reserves the right to exchange the product for a replacement product of equal value if the product sent in cannot be repaired within a reasonable time or if a reasonable cost. The user cannot be made for repairs to be carried out on-site. Parts that have been replaced or exchanged become our property.

4) The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved by our product.

5) Warranties that have been activated do not cease the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts shall be the same as the warranty period for the entire product.

6) Any other further claims are excluded, especially those for replacement due to damage caused to the outside of the product, provided there is no obligatory legal liability.

Accepting a warranty claim:

1) To make use of the warranty service for hardware

issues, you must contact the VIBE® Service Center by email at support@vibe.com

2) VIBE® will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and will be asked to send the product to VIBE®.

NOTE: VIBE® will only accept pieces that have an RMA number.

Please observe the following when sending the product:

- 1) Send the product bubble packaged with cartons and insurance paid. Do not enclose any accessories with the product (cables, chargers, manuals, etc.) unless the VIBE® Service Center specifies otherwise.
- 2) Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
- 3) You must enclose a copy of the order slip as proof of purchase.

Once VIBE® has received the product, it will meet its warranty obligation in accordance with the warranty conditions and will return the product to the sender with cartons and insurance paid.

Service outside of warranty
VIBE® can relate any service claim made that is not covered by the warranty.

If VIBE® agrees to provide a service outside the warranty, the customer will be involved for all repair and transport costs. VIBE® will not accept any packages that have not been approved by VIBE® by means of an RMA (Return Material Authorization).

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.