




# Gateway®

Quick Start Guide

Model: GWNN11744




**1 Plug Power Adapter Into Wall Outlet**

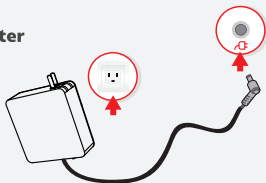

**2 Plug Power Adapter Into Laptop**





**3 Press and Release the Power Button**

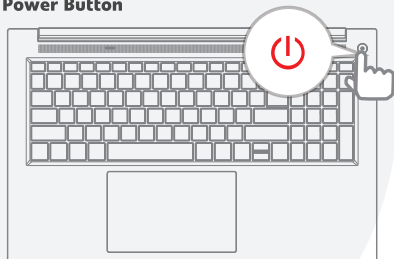

**4 Follow the on screen Windows prompts to finish setting up**

- 1 Power Button
- 2 Touchpad
- 3 Camera
- 4 Camera Shutter
- 5 Charging port
- 6 HDMI
- 7 USB 3.0 Ports
- 8 Type-C (Full Function)
- 9 Micro SD Slot
- 10 Headphone Port
- 11 USB 2.0 Port
- 12 Kensington Lock

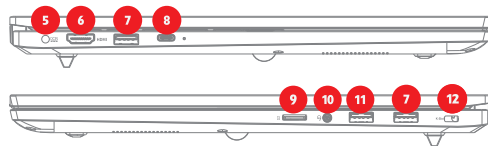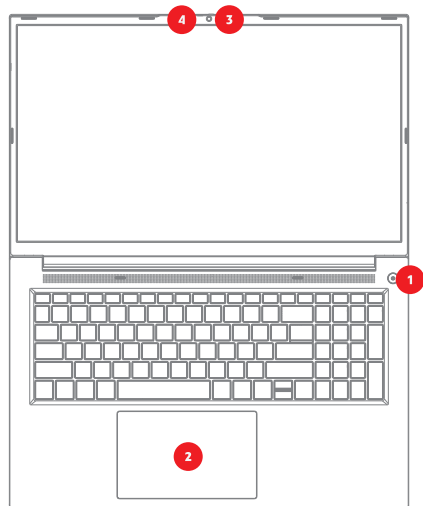

**Caution:** The AC adapter included with your PC was specifically designed and approved for your model. Utilization of an after-market adapter may damage either the notebook or other devices connected to it. If damage is determined to have been caused by utilization of an unauthorized power supply, it will not be protected under warranty. For our FAQ, please visit [www.gatewayusa.com/support.html](http://www.gatewayusa.com/support.html). Gateway and the Gateway Logo are the registered trademarks of Acer Inc. and are used under license from Acer America Corporation.

[www.gatewayusa.com](http://www.gatewayusa.com) | Customer Service: [support@gatewayusa.com](mailto:support@gatewayusa.com)

## What's in the box

- |                 |                     |
|-----------------|---------------------|
| 1 Laptop        | 3 Quick Start Guide |
| 2 Power Adapter | 4 Warranty Book     |