

DOUBLE SIDED PRINT

FUNCTIONS & ACTIONS

FUNCTION		ACTION
BLUETOOTH CALLING	CALLER ID	WHEN RECEIVING AN INCOMING CALL, THE NUMBER WILL BE READ ALOUD.
	ANSWER A CALL (DUAL MODE)	PRESS THE MULTIFUNCTION BUTTON ON EITHER SIDE WHILE RECEIVING A CALL.
	ANSWER A CALL (SINGLE MODE)	PRESS AND HOLD THE MULTIFUNCTION BUTTON DURING A CALL.
	END A CALL (DUAL MODE)	PRESS EITHER SIDE'S MULTIFUNCTION BUTTON ONCE DURING A CALL.
	REJECT/IGNORE A CALL	PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER SIDE FOR 1-2 SECONDS.
	END A CALL (SINGLE MODE)	PRESS THE MULTIFUNCTION BUTTON ONCE DURING A CALL.
	LAST NUMBER CALLBACK	TO REDIAL THE LAST NUMBER IN YOUR SMARTPHONE'S CALL HISTORY, DOUBLE-CLICK THE MULTIFUNCTION BUTTON ON THE RIGHT OR LEFT EARBUD. THE NUMBER WILL AUTOMATICALLY DIAL.
MUSIC & AUDIO	PLAY OR PAUSE	PRESS THE MULTIFUNCTION BUTTON ONCE EARBUDS ARE PAIRED TO A DEVICE.
	VOLUME & PLAYLIST CONTROLS	USE YOUR PAIRED DEVICE (SUCH AS A SMARTPHONE OR TABLET) TO CONTROL.

SAFETY PRECAUTIONS/WARNINGS

IF YOU HAVEN'T USED YOUR EARBUDS IN A WHILE OR PLAN TO GO LONG PERIODS OF TIME WITHOUT USING THEM, BE SURE TO CHARGE THE UNIT ONCE A MONTH TO PREVENT DAMAGE TO THE LITHIUM-ION BATTERIES OVER TIME. DO NOT ATTEMPT TO PIERCE, STRIKE, OR APPLY STRONG PRESSURE WITH SHARP OR HEAVY OBJECTS. STRONG IMPACT OR SHOCKS COULD CAUSE IRREVERSIBLE DAMAGE TO THE UNIT.

AVOID PROXIMITY TO HIGH FREQUENCIES AND STRONG MAGNETIC DEVICES WHEN POSSIBLE. DROPPING OR MISHANDLING THE EARBUDS MAY CAUSE IRREPARABLE DAMAGE TO THE UNIT AND ITS BATTERIES. DO NOT EXPOSE TO OR SUBMERGE IN WATER.

KEEP EARBUDS AWAY FROM HEATING APPLIANCES AND SOURCES OF ELECTRICAL NOISE, SUCH AS FLUORESCENT LAMPS OR MOTORS. KEEP HANDS DRY AND CLEAN WHEN TOUCHING THE EARBUDS AND BUTTONS.

KEEP THE EARBUDS AWAY FROM SMALL CHILDREN AT ALL TIMES OR ENSURE STRICT SUPERVISION BY AN ADULT AT ALL TIMES. THE UNIT CONTAINS SMALL PARTS AND MAY POSE A CHOKING HAZARD.

DO NOT EXPOSE THE EARBUDS OR ANY ELECTRICAL PARTS TO EXTREMELY HIGH OR EXTREMELY LOW TEMPERATURES OR HIGH PRESSURE. DO TO EXPOSE THE EARBUDS OR CASE TO FIRE, DIRECT SUNLIGHT, DUST, HIGH LEVELS OF HUMIDITY, OR OTHER HOT LOCATIONS. THIS MAY CAUSE THE BATTERY TO GENERATE HEAT, IGNITE, OR EXPLODE. USING THE EARBUDS OR CHARGING CASE IN THIS MANNER MAY ALSO RESULT IN A LOSS OF PERFORMANCE IN A SHORTENED LIFE EXPECTANCY.

DO NOT ATTEMPT TO DISASSEMBLE OR MODIFY THE TW2 EARBUDS EARBUDS OR CASE IN ANY WAY. IMMEDIATELY DISCONTINUE USE IF THE UNIT HAS ANY VISIBLY EXPOSED PARTS OR APPEARS MALFUNCTIONAL IN ANY WAY. IF THIS DOES OCCUR, ISOLATE THE EARBUDS IN A SAFE PLACE AND CONTACT THE GENTER CUSTOMER SUPPORT TEAM AT HELLO@AFHIND.COM.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.



© 2019 AFH INDUSTRIES INC. ALL RIGHTS RESERVED. GENTER IS A REGISTERED TRADEMARK OF AFH INDUSTRIES INC. OTHER TRADEMARKS AND TRADE NAMES ARE THOSE OF THEIR RESPECTIVE OWNERS. MANUFACTURED AND SERVICED BY AFH INDUSTRIES INC. 110 WEST 54TH STREET, 7TH FLOOR, NEW YORK, NY 10001 FOR PATENTS: GENTER.COM/PATENTS | CONTENTS AND COLORS MAY VARY FROM ILLUSTRATED. THE BLUETOOTH WORD MARK AND LOGOS ARE OWNED BY THE BLUETOOTH SIG. INC. *FOR AGES 12+. THIS IS NOT A TOY. | MADE IN CHINA

GENTER

TW2

TRUE WIRELESS EARBUDS



 
#TW2_USER MANUAL

Includes: 1x Pair-TW2 * 1x Portable Charging case * 1x Micro-USB Charging Cable



TW2 ERGONOMIC IN-EAR DESIGN

1. MULTIFUNCTION BUTTON
2. MICROPHONE
3. CHARGING PORT

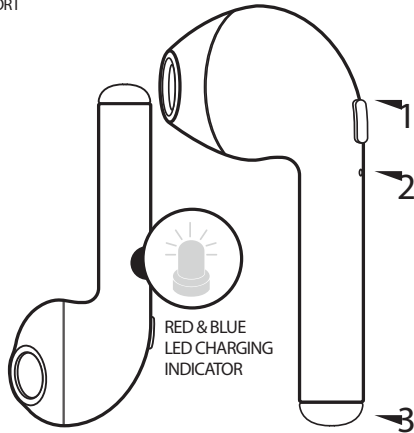

RED & BLUE LED CHARGING INDICATOR

TECHNICAL SPEC

BLUETOOTH 5.0	Playtime: 2 Hours (Music at 80% volume)	Standby Time: Up to 100 Hours	Charges Provided (Case Power): Up to 4
Battery Type: Rechargeable Lithium-ion	Input: 5V/800mAh	Earbud Battery Life: 50mAh (Each)	Frequency Response: 2.4GHz-2.485GHz

*NOTE: USING YOUR EARBUDS AT LOWER VOLUMES WILL HELP PROLONG THE BATTERY LIFE BETWEEN CHARGES

PAIRING AND POWERING OFF EARBUDS

NOTES FOR PAIRING:

- KEEP THE DISTANCE BETWEEN YOUR SMARTPHONE AND THE TW2 EARBUDS WITHIN 3 FEET (FOR PAIRING ONLY).
- THE EARBUDS MUST BE POWERED ON IN ORDER TO PAIR.
- BEFORE ATTEMPTING TO PAIR, MAKE SURE THAT YOUR SMARTPHONE OR TABLET'S BLUETOOTH FUNCTION IS ENABLED UNDER SETTINGS. SPECIFIC PAIRING PROCEDURES WILL BE DIFFERENT DEPENDING ON DIFFERENT BRANDS AND MODELS. FOR DETAILED INFORMATION ON BLUETOOTH PAIRING, PLEASE REFER TO YOUR DEVICE'S USER MANUAL.

STEP 1: PRESS AND HOLD THE MULTIFUNCTION BUTTONS ON EACH EARBUD FOR 3 SECONDS. YOU WILL SEE THE LED FLASH RED AND BLUE ON EACH SIDE, INDICATING THAT THE POWER IS ON. YOUR EARBUDS ARE NOW IN PAIRING MODE.

STEP 2: OPEN YOUR SMART DEVICE'S SETTINGS MENU AND ACTIVATE BLUETOOTH PAIRING. YOUR SMART DEVICE (TABLET, SMARTPHONE, ETC.) WILL PERFORM A SEARCH FOR LOCAL DEVICES. AFTER A FEW SECONDS YOU'LL SEE "TW2" APPEAR ON THE LIST.

STEP 3: SELECT THIS OPTION. ONCE THIS HAPPENS, YOUR TW2 EARBUDS ARE READY TO USE.*

*YOU MAY WISH TO ONLY USE ONE EARBUD (SINGLE MODE) INSTEAD OF USING THE PAIR TOGETHER (DUAL MODE). WHEN THIS IS THE CASE, SIMPLY TURN ON THE EARBUD YOU WISH TO USE AND FOLLOW THE SAME STEPS WHILE KEEPING THE OTHER EARBUD TURNED OFF. YOU WILL HAVE THE SAME GENERAL FUNCTIONALITY.

TO TURN YOUR EARBUDS OFF, PRESS AND HOLD THE MULTI-FUNCTION BUTTON ON EITHER EARBUD FOR 3 SECONDS UNTIL EARBUD IS POWERED OFF. REPEAT THE PROCESS FOR THE SECOND EARBUD TO POWER IT OFF AS WELL.

AUTO-PAIRING

 
ONCE YOU HAVE SUCCESSFULLY PAIRED YOUR EARBUDS TO A BLUETOOTH-ENABLED DEVICE, THAT DEVICE WILL REMEMBER AND RECOGNIZE YOUR EARBUDS FOR AUTOMATIC RE-PAIRING. THIS MEANS THAT THE NEXT TIME YOU WISH TO USE YOUR EARBUDS WITH THAT SMART DEVICE, PAIRING WILL HAPPEN AUTOMATICALLY AND WITHOUT THE NEED FOR YOU TO REVISIT YOUR DEVICE'S BLUETOOTH DISPLAY SCREEN.

POWERING OFF EARBUDS:

POWER OFF EACH INDIVIDUAL EARBUD: PRESS AND HOLD THE MULTI-FUNCTION BUTTON ON EITHER EARBUD FOR 3 SECONDS UNTIL EARBUD IS POWERED OFF. REPEAT THE PROCESS AS WELL FOR THE SECOND EARBUD TO POWER IT OFF.

POWER OFF BOTH EARBUDS BY CHARGE CASE: DOCK BOTH EARBUDS INSIDE THE CHARGING CASE, NOW PRESS THE CHARGING CASE'S POWER BUTTON ONCE TO POWER OFF BOTH EARBUDS.


400mAh CHARGING CASE

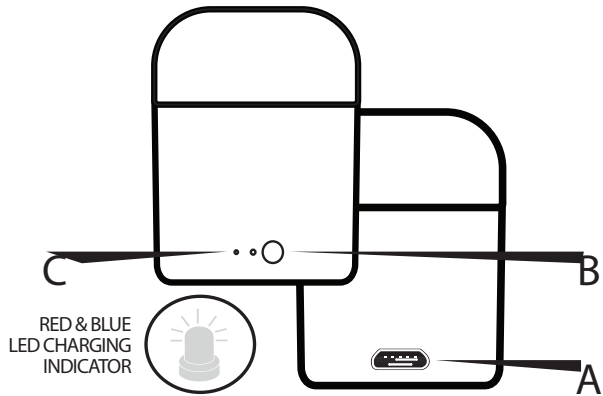


A MICRO-USB CHARGING PORT
B POWER BUTTON
C LED INDICATOR

Battery Type: Rechargeable Lithium-ion	Charges Provided (Case Power): Up to 4	Charging Case Battery: Output: 5V/500mAh	Impedance: 32Ω
--	--	--	----------------

 CHARGING YOUR EARBUDS & CASE*

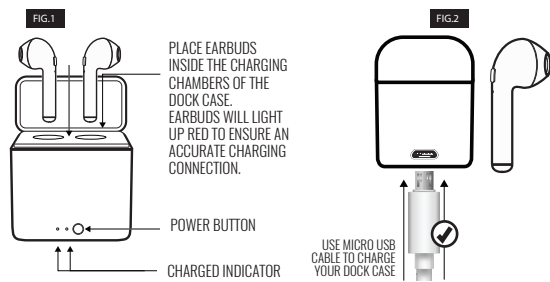

 NOTE: THE EARBUDS WILL REQUIRE UP TO 1 HOUR DOCKED IN THEIR CHARGING CASE TO RECHARGE THEIR BATTERIES. WHEN FULLY POWERED, THE PORTABLE CASE WILL PROVIDE THE EARBUDS WITH UP TO 4 ADDITIONAL CHARGES.

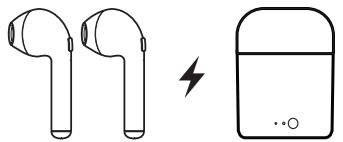

1. INSERT THE EARBUDS INTO THEIR CORRESPONDING CHARGING PORTS IN THE CASE, RESPECTIVELY MARKED L AND R (FIG1).
2. PRESS EACH EARBUD FIRMLY INTO ITS SLOT UNTIL YOU FEEL A "CLICK" TO INDICATE THAT IT IS SECURE. CLOSE THE CASE.
3. INSERT THE INCLUDED MICRO-USB CHARGING CABLE INTO THE BACK OF THE CHARGING CASE AND CONNECT TO A POWER SOURCE (SUCH AS A POWER BANK, AC WALL ADAPTER, ETC.) (FIG2).
4. YOU WILL SEE THE EARBUDS FLASH RED TO INDICATE THAT AUTOMATIC CHARGING HAS BEGUN. THE CASE'S EXTERIOR LED WILL GLOW A STEADY BLUE.
5. WHEN THEY HAVE FINISHED CHARGING, ALL LEDS WILL TURN OFF TO INDICATE THAT THE EARBUDS AND CASE ARE FULLY CHARGED.