

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



Rain/Moisture Warning

- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Do not submerge in water.
- Do not open this product or attempt to repair the unit yourself should it not be working.

Rating Label Definitions



The product is in compliance of energy efficiency.



This symbol indicates that information could be exchanged between wireless devices such as personal digital assistants (PDAs), mobile phones, laptops, computers, printers and digital cameras via a secure, low-cost, globally available short-range radio frequency band. The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc.

90-Day Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may return it to the authorized service center for repair or exchange within ninety (90) days from your original date of purchase.

TO OBTAIN WARRANTY SERVICE:

- Go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Customer Service Dept. 36
c/o Southern Telecom
400 Kennedy Drive
Sayreville NJ 08872

Should have any questions or problems concerning this product, please visit our website at SouthernTelecom.com and click on **Product Support**.

Warranty Service Not Provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

SHARPER IMAGE®

2018 Sharper Image® name and logo are registered trademarks. Manufactured, marketed, and distributed under license by Southern Telecom, Inc. Brooklyn, NY 11220. © Sharper Image. All Rights Reserved.

All other trademarks and trade names are those of their respective owners.

Printed in China
Designed in USA
v2, 10-2018

SHARPER IMAGE®

Wireless Bluetooth Earbuds



User Manual
XO-9656


Before You Begin...

- CAUTION**
- **THIS IS NOT A TOY, Please keep away from children**
 - Keep away from water and extreme temperatures
 - Low power may cause poor Bluetooth connection or sound distortion
 - Do not overcharge the battery

Questions & Customer Support
For questions, troubleshooting or any other assistance, please visit our website at **SouthernTelecom.com** and click on **Product Support**.

- In the Box**
- **XO-9656 - True Wireless Earbuds** (x1)
 - Charging Case (x1)
 - Micro-USB Charging Cable (x1)
 - User Manual (x1)

- Location of Controls**
(Earbuds)
1. **[Multi]** Button:
(Long Press) Power ON/OFF
(Quick Press) Play/pause music, skip tracks, answer/end phone calls
(Double Quick Press) Redial last phone number called, reject phone call
 2. Earbud LED Indicator
 3. Microphone
 4. Charging Port
- (Charging Case)*
5. Earbud Charging Port
- (Bottom of Charging Case)*
6. Charging Case LED Indicator
 7. Micro-USB Charging Port

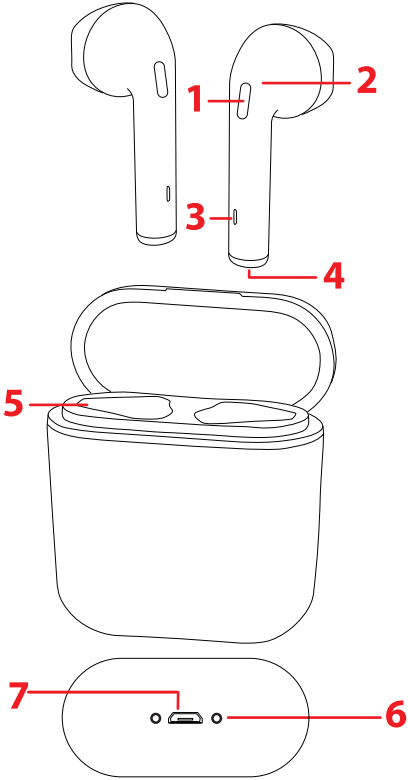

Getting Started

Charging the Case
Insert the small connector of the supplied micro-USB charging cable into the micro-USB charging port on the bottom of the charging case. Insert the large connector into the USB port on a computer, a USB charging device, or **5V USB adapter** (*not included*) and plug into a wall socket.

The charging case's LED indicator will **blink GREEN** while charging and **turn solid GREEN** when fully charged.

Charging the Earbuds
Open the lid of the charging case and insert the earbuds firmly into the case's earbud charging ports. The earbuds will automatically begin charging. The earbuds' LED indicators will **turn solid RED** when they are charging and turn OFF when fully charged.

NOTE: When the earbuds are low on power, a voice will be heard indicating that they need to be charged.

Powering ON/OFF

- Power the earbuds ON or OFF by long pressing both earbuds' **[Multi]** buttons for 2 seconds.
- Insert the earbuds back into the charging case to automatically power them OFF and begin charging.

NOTE: You must be paired to a Bluetooth device to listen to music and answer/end phone calls. Please consult the **Pairing the Earbuds** section of this user manual.

Pairing the Earbuds (Bluetooth)

1. Power the earbuds ON. The LED indicators on both earbuds will **flash RED and BLUE**.
2. If you are using the earbuds for the first time, you will need to pair them to each other. Double quick press the **[Multi]** button on the left earbud. When successfully paired, a voice will be heard, and the earbuds' LED indicators will turn OFF. The left earbud will be the main earbud.
3. On your Bluetooth device, go to **Settings > Bluetooth** and set your device to search for Bluetooth devices. When it appears, select **XO-9656** from the list of found devices.
4. Once successfully paired, a voice will be heard, and both earbuds' LED indicators will remain OFF.

After you have paired the earbuds to each other the first time, you will not need to pair them again.

Phone Calls

NOTE: Phone calls will only be heard on the main earbud, the left earbud, and the following commands will only work with the left earbud.

- Quick press the **[Multi]** button to answer an incoming call.
- Quick press the **[Multi]** button again to end the call.
- Double quick press the **[Multi]** button to redial the last phone number dialed.
- Double quick press the **[Multi]** button to reject an incoming call.

Playing Music
To enjoy music wirelessly on your earbuds, make sure they are paired to a Bluetooth-enabled device. Once paired, you can control the media playback and volume adjustment with the controls on your paired device or with the controls listed below.

- Quick press the left (main) earbud's **[Multi]** button to play/pause.
- Quick press the right (secondary) earbud's **[Multi]** button to skip tracks.