

MINISO

PRODUCT MANUAL

Wireless Earbud MS206

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly

02 Product Introduction

03 Touch Operation

04 Item list

05 Warranty Statement

5

9

12

21

24

Welcome to MINISO Wireless Earphones

Take out and pair it

When using for the first time, please remove the left and right sides. Wear headphones at the same time. When the headphone indicator light flashes white, the headphones will enter automatic pairing mode.

4

How to wear headphones correctly

1

2

5

6

Specification of Product

Model of Product: MS206  
Version: V6.0  
Effective Distance: Approx. 10m  
Speaker Diameter: φ15\*7\*2.7mm  
Impedance: 32Ω±15%  
Frequency Respinse: 20Hz-20KHz  
Microphone Sensitivity: -42dB±1dB  
Earphone Input: 5V≐35mA  
Charging Case Input: 5V≐300mA  
Charging Case Output: 5V≐70mA  
Earphone Battery Capacity: 35mAh  
Charging Case Battery Capacity: 300mAh  
Duration: Approx. 4.5 H (Earphone)  
Earphone Charging Time: Approx. 1.5 H  
Charging Time of the Charging Case: Approx. 1.5 H

Product Description

Bluetooth LED Display light

Multi function key touch position

Charging Contacts

Digital Screen

Type-c Interface

8

9

10

11

Touch Operation

Connect with Bluetooth device

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-MS206".Click the pairing name to pair.

12

Indicator Light Description

When the headset is turned on: White light flashing  
When the headset is turned off: The white light flashes three times and then goes out  
Successful pairing of left and right ears: The main ear light flashes white, and the auxiliary ear light goes out  
Bluetooth device successfully connected: no light  
Headphone Charging:The screen of the charging box Light up for 5 seconds.The white indicator light of the earphones is always on. After it is fully charged, the white indicator light goes off.  
Charging of the Charging case: The digital display screen of the charging case flashes, and after being fully charged, the digital display screen of the charging case always shows 100.

13

Once Press

Music mode

Phone mode

Play/Pause  
Call Answer/End

15

Double Press

Music mode

Double press the right ear: Volume up  
Double press the left ear: Volume decreases

16

Long Press

Wake up voice assistant  
When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant.  
When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant  
Phone mode  
Press and hold the left (or right) ear multi-function button for two seconds: call rejection

17

Triple Press

Music mode  
Triple press on the left ear: Previous song  
Triple press on the right ear: next song

18

Clear Bluetooth pairing history

When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.  
Wireless pairing mode  
1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.  
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep".

19

Switch between game mode and music mode

Game mode  
Press and hold the multi-function button on the right ear for 2 seconds  
Music mode  
Press and hold again for 2 seconds  
Note 1: When using one earphone, you cannot switch between game mode and music mode.  
Note 2: The factory setting defaults to music mode

20

Item list

Headphones \*1

Charging case \*1

21

Warranty statement

MINISO product warranty card

Product number		SN number	
User info	name	Purchase date	
	telephone		
	address		
	Invoice number		
Sales unit information	name	(stamp)	
	address		
	telephone		

22

23

24

Warranty Policy

Disclaimer:  
This manual does not come with any form of warranty,position expression or other implication. The products, specifications and information mentioned inthis manual are for reference only, and the content will be updated on the website at any time without prior notice.  
Warranty statement:  
The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.  
If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

26

Guidelines for safe and effective use

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.  
Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.  
Safety matters:  
Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.  
Children:Do not let children play with Bluetooth headsets.Some of the small parts are detachable and may be swallowed and cause danger.

27

Important safety tips

Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.  
This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun/heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age.  
If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type.  
battery usage.  
After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.  
During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional leg, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.  
When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

28

Enjoy the company of MINISO

Copyright©2025 MINISO Group affiliated companies and its licensors. All rights reserved

29

25

The above guarantee does not apply to the following situations  
1. The validity period of the three guarantees has exceeded;  
2. Altering of the warranty cards and product code do not match the product itself;  
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;  
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;  
5. Zippers and tower buckles are damaged due to excessive force;  
6. Off-time or tear caused by overloading;  
7. Any damage caused by sharp objects;  
8. Products with signs of burn damage or water logging;  
9. Damage caused by unauthorized dismantling and modification;  
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.  
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.  
The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.  
MINISO Product service policy  
If you encounter a problem, please contact our customer service to solve it.  
Customer Service Email: customercare@yheim.net

25

正面

背面