



X210



X210i

User Manual X210 & X210i

Software Version: 1.8.0

Release Date: 2018/11/15



Directory

Directory.....	I
1 Picture.....	VI
2 Table.....	X
3 FCC Statement.....	1
4 Safety Instruction.....	2
5 Overview.....	3
5.1 Overview.....	3
5.2 Packing Contents.....	4
5.2.1 Packing Contents.....	4
6 Install Guide.....	5
6.1 Use PoE or external Power Adapter.....	5
6.2 Desktop Installation.....	6
6.2.1 Desktop Installation.....	6
7 Appendix Table.....	8
7.1 Appendix I - Icon.....	8
7.2 Appendix II – Keyboard character query table.....	11
7.3 Appendix III –LED Definition.....	13
8 Introduction to the User.....	14
8.1 Instruction of Keypad.....	14
8.1.1 Instruction of Keypad.....	14
8.2 Using Handset / Hands-free Speaker / Headphone.....	16
8.3 Idle Screen.....	17
8.4 Phone Status.....	18
8.5 Web Management.....	19
8.6 Network Configurations.....	20
8.7 SIP Configurations.....	21
9 Basic Function.....	24
9.1 Making Phone Calls.....	24
9.2 Answering Calls.....	26
9.2.1 Talking.....	27
9.2.2 Make / Receive Second Call.....	27
9.3 End of the Call.....	29
9.4 Redial.....	29

9.5 Dial-up Query.....	30
9.6 Auto-Answering.....	30
9.7 Callback.....	32
9.8 Mute.....	33
9.8.1 Mute the Call.....	33
9.8.2 Ringing Mute.....	34
9.9 Call Hold/Resume.....	35
9.10 DND.....	35
9.11 Call Forward.....	38
9.12 Call Transfer.....	40
9.12.1 Blind transfer.....	40
9.12.2 Semi-Attended transfer.....	41
9.12.3 Attended transfer.....	41
9.13 Call Waiting.....	42
9.14 Conference.....	43
9.14.1 Local Conference.....	43
9.14.2 Network Conference.....	45
9.15 Call Park.....	45
9.16 Pick Up.....	47
9.17 Anonymous Call.....	48
9.17.1 Anonymous Call.....	48
9.17.2 Ban Anonymous Call.....	49
9.18 Hotline.....	50
9.19 Emergency Call.....	51
10 Advance Function.....	53
10.1 BLF (Busy Lamp Field).....	53
10.1.1 Configure the BLF Functionality.....	53
10.1.2 Use the BLF Function.....	54
10.2 BLF List.....	55
10.3 Record.....	56
10.3.1 Local Record (USB flash disk)	57
10.3.2 Server Record.....	58
10.3.3 SIP INFO Record.....	58
10.4 Agent.....	59
10.5 Intercom.....	61
10.6 MCAST.....	62
10.7 SCA (Shared Call Appearance)	63
10.8 Message.....	66

10.8.1 SMS.....	66
10.8.2 MWI (Message Waiting Indicator)	67
10.9 SIP Hotspot.....	68
11 Phone Settings.....	72
11.1 Basic Settings.....	72
11.1.1 Language.....	72
11.1.2 Time & Date.....	73
11.1.3 Screen.....	74
11.1.4 Ring.....	76
11.1.5 Voice Volume.....	76
11.1.6 Greeting Words.....	77
11.1.7 Reboot.....	77
11.2 Phone book.....	77
11.2.1 Local contact.....	77
11.2.2 Black list.....	81
11.2.3 Cloud Phone Book.....	82
11.3 Call Log.....	83
11.4 Function Key.....	85
11.5 Wi-Fi.....	87
11.6 Headset.....	87
11.6.1 Wired Headset.....	87
11.6.2 Bluetooth Headset.....	88
11.6.3 EHS Headset.....	89
11.7 Advanced.....	90
11.7.1 Line Configurations.....	90
11.7.2 Network Settings.....	91
11.7.3 Set The Secret Key.....	95
11.7.4 Maintenance.....	97
11.7.5 Firmware Upgrade.....	101
11.7.6 Factory Reset.....	103
12 Web Configurations.....	104
12.1 Web Page Authentication.....	104
12.2 System >> Information.....	104
12.3 System >> Account.....	104
12.4 System >> Configurations.....	104
12.5 System >> Upgrade.....	105
12.6 System >> Auto Provision.....	105
12.7 System >> Tools.....	105

12.8 System >> Reboot Phone.....	105
13 Network >> Basic.....	106
13.1 Network >> Service Port.....	106
13.2 Network >> VPN.....	107
13.3 Network >> Advanced.....	107
13.4 Line >> SIP.....	107
13.5 Line >> SIP Hotspot.....	112
13.6 Line >> Dial Plan.....	113
13.7 Line >> Action Plan.....	116
13.8 Line >> Basic Settings.....	116
13.9 Line >> RTCP-XR.....	117
13.10 Phone settings >> Features.....	117
13.11 Phone settings >> Media Settings.....	121
13.12 Phone settings >> MCAST.....	122
13.13 Phone settings >> Action.....	123
13.14 Phone settings >> Time/Date.....	123
13.15 Phone settings >> Tone.....	124
13.16 Phone settings >> Advanced.....	124
13.17 Phonebook >> Contact.....	125
13.18 Phonebook >> Cloud phonebook.....	125
13.19 Phonebook >> Call List.....	127
13.20 Phonebook >> Web Dial.....	128
13.21 Phonebook >> Advanced.....	128
13.22 Call Logs.....	128
13.23 Function Key >> Function Key.....	128
13.24 Function Key >> Side Key.....	129
13.25 Function Key >> Softkey.....	129
13.26 Function Key >> Advanced.....	131
13.27 Application >> Manage Recording.....	131
13.28 Security >> Web Filter.....	131
13.29 Security >> Trust Certificates.....	132
13.30 Security >> Device Certificates.....	133
13.31 Security >> Firewall.....	133
13.32 Device Log >> Device Log.....	135
14 Trouble Shooting.....	136
14.1 Get Device System Information.....	136
14.2 Reboot Device.....	136
14.3 Reset Device to Factory Default.....	136

14.4 Screenshot.....	136
14.5 Network Packets Capture.....	137
14.6 Get Log Information.....	137
14.7 Common Trouble Cases.....	138

1 Picture

Picture 1	- Device installation.....	6
Picture 2	- Gooseneck MIC installation.....	6
Picture 3	- Connecting to the Device.....	7
Picture 4	- Instruction of Keypad.....	14
Picture 5	- Screen layout/default home screen.....	17
Picture 6	- Scroll icon.....	18
Picture 7	- The Phone status.....	19
Picture 8	- WEB phone status.....	19
Picture 9	- Landing page.....	20
Picture 10	- Phone line SIP address and account information.....	22
Picture 11	- Phone display name and port.....	22
Picture 12	- Web SIP registration.....	23
Picture 13	- Default line.....	24
Picture 14	- Enable voice channel dialing.....	25
Picture 15	- Open the voice channel and dial the number.....	25
Picture 16	- Call number.....	26
Picture 17	- Answering calls.....	26
Picture 18	- Talking interface.....	27
Picture 19	- The second call interface.....	28
Picture 20	- Two way calling.....	28
Picture 21	- Redial set.....	30
Picture 22	- Line 1 enables auto-answering.....	31
Picture 23	- The line has enabled auto-answering.....	31
Picture 24	- Web page to start auto-answering.....	32
Picture 25	- Set the callback key on the phone.....	32
Picture 26	- Set the callback key on the web page.....	33
Picture 27	- Mute the call.....	34
Picture 28	- Ringing mute.....	34
Picture 29	- Call hold interface.....	35
Picture 30	- Enable DND.....	35
Picture 31	- DND setting interface.....	36
Picture 32	- DND timer.....	36
Picture 33	- DND Settings.....	37
Picture 34	- Line DND.....	37
Picture 35	- Select the line to set up call forwarding.....	38
Picture 36	- Select call forward type.....	39

Picture 37	- Enable call forwarding and configure the call forwarding number.....	39
Picture 38	- Set call forward.....	40
Picture 39	- Transfer interface.....	41
Picture 40	- Semi-Attended transfer.....	41
Picture 41	- Attended transfer.....	42
Picture 42	- Call waiting setting.....	42
Picture 43	- Web call waiting setting.....	43
Picture 44	- Web call waiting tone setting.....	43
Picture 45	- Local conference setting.....	44
Picture 46	- Local conference (1)	44
Picture 47	- Local conference (2)	44
Picture 48	- Network conference.....	45
Picture 49	- Phone set call park.....	46
Picture 50	- WEB set call park.....	46
Picture 51	- Phone pick up setting.....	47
Picture 52	- WEB pick up setting.....	48
Picture 53	- Enable anonymous call.....	48
Picture 54	- Enable Anonymous web page call.....	49
Picture 55	- Anonymous call log.....	49
Picture 56	- Anonymous calls are not allowed on the phone.....	50
Picture 57	- Page Settings blocking anonymous call.....	50
Picture 58	- Phone hotline setting interface.....	51
Picture 59	- Hotline set up on webpage.....	51
Picture 60	- Set up an emergency call number.....	52
Picture 61	- Dial the emergency number.....	52
Picture 62	- Web page configuration BLF function key.....	53
Picture 63	- Phone configuration BLF function key.....	54
Picture 64	- Configure the BLF List functionality.....	56
Picture 65	- BLF List number display	56
Picture 66	- WEB local recording.....	57
Picture 67	- Web server recording.....	58
Picture 68	- Web SIP info recording.....	59
Picture 69	- Configure the agent account in normal mode.....	59
Picture 70	- Configure the proxy account-hotel Guest mode.....	60
Picture 71	- Agent logon page.....	61
Picture 72	- Web Intercom configure.....	61
Picture 73	- Multicast Settings Page.....	62
Picture 74	- Register BroadSoft account.....	63

Picture 75	- Set BroadSoft server.....	64
Picture 76	- Enable SCA.....	64
Picture 77	- Set Private Hold Function Key.....	65
Picture 78	- SMS icon.....	66
Picture 79	- New Voice Message Notification.....	67
Picture 80	- Voice message interface.....	68
Picture 81	- Configure voicemail number.....	68
Picture 82	- Register SIP account.....	69
Picture 83	- SIP hotspot server configuration.....	70
Picture 84	- SIP hotspot client configuration.....	70
Picture 85	- Phone language setting.....	72
Picture 86	- Language setting on Web page.....	72
Picture 87	- Set time & date on phone.....	73
Picture 88	- Set time & date on webpage.....	73
Picture 89	- Set screen parameters on phone.....	75
Picture 90	- Page screen Settings.....	75
Picture 91	- Phone screen saver.....	76
Picture 92	- Phone book screen.....	78
Picture 93	- Local Phone book	78
Picture 94	- Add New Contact.....	79
Picture 95	- Group List.....	80
Picture 96	- Browsing Contacts in a Group.....	80
Picture 97	- Add Contacts in a Group.....	81
Picture 98	- Add Blacklist.....	81
Picture 99	- Web Blacklist.....	82
Picture 100	- Cloud phone book list.....	82
Picture 101	- Downloading Cloud Phone book.....	83
Picture 102	- Browsing Contacts in Cloud Phone book.....	83
Picture 103	- CallLog.....	84
Picture 104	- Filter call record types.....	84
Picture 105	- DSS LCD key Page Configuration Screen.....	85
Picture 106	- DSS LCD Screen Configuration.....	86
Picture 107	- DSS settings.....	86
Picture 108	- WIFI settings.....	87
Picture 109	- Headset function settings.....	88
Picture 110	- Bluetooth Settings Screen.....	88
Picture 111	- EHS Headset setting.....	89
Picture 112	- SIP address and account information.....	90

Picture 113	- Configure Advanced Line Options.....	90
Picture 114	- Network mode Settings.....	91
Picture 115	- DHCP network mode.....	91
Picture 116	- PPPoE network mode.....	92
Picture 117	- Static IP network mode.....	92
Picture 118	- IPv6 Static IP network mode.....	93
Picture 119	- The phone configures the web server type.....	95
Picture 120	- Set the Menu password.....	96
Picture 121	- Keypad lock password.....	96
Picture 122	- Set the keypad lock password	96
Picture 123	- Phone keypad lock password input interface.....	97
Picture 124	- Web keyboard lock password Settings.....	97
Picture 125	- Page auto provision Settings.....	98
Picture 126	- Phone auto provision settings.....	98
Picture 127	- Web page firmware upgrade.....	101
Picture 127	- Firmware upgrade information display.....	101
Picture 129	- Firmware upgrade.....	103
Picture 130	- Service Port Settings.....	106
Picture 131	- Dial plan settings.....	113
Picture 132	- Custom setting of dial - up rules.....	114
Picture 133	- Dial rules table (1).....	115
Picture 134	- Dial rules table (2).....	115
Picture 135	- Tone settings on the web.....	124
Picture 136	- Web cloud phone book Settings.....	127
Picture 137	- IP Camera List.....	131
Picture 138	- Web Filter settings.....	131
Picture 139	- Web Filter Table.....	132
Picture 140	- Certificate of settings.....	132
Picture 141	- Device certificate setting.....	133
Picture 142	- Network firewall Settings.....	133
Picture 143	- Firewall Input rule table.....	135
Picture 144	- Delete firewall rules.....	135
Picture 145	- Screenshot.....	137
Picture 146	- Web capture.....	137

2 Table

Table 1	- Keypad Icons.....	8
Table 2	- Status Prompt and Notification Icons.....	8
Table 3	- DSSkey Icons.....	9
Table 4	- Look-up Table of Characters.....	11
Table 5	- DSS KEY LED State.....	13
Table 6	- Instruction of Keypad.....	14
Table 7	- Talking mode.....	27
Table 8	- BLF Function key subtype parameter list.....	54
Table 9	- Agency mode.....	60
Table 10	- Intercom configure.....	61
Table 11	- MCAST Parameters on Web.....	62
Table 12	- LED Status of SCA.....	65
Table 13	- SIP hotspot Parameters.....	69
Table 14	- Time Settings Parameters.....	74
Table 15	- QoS & VLAN.....	93
Table 16	- Auto Provision.....	99
Table 17	- Firmware upgrade.....	101
Table 18	- Service port.....	106
Table 19	- Line configuration on the web page.....	107
Table 20	- Phone 7 dialing methods.....	113
Table 21	- Dial - up rule configuration table.....	114
Table 22	- IP camera.....	116
Table 23	- Set the line global configuration on the web page.....	116
Table 24	- VQ RTCP-XR Settings.....	117
Table 25	- General function Settings	117
Table 26	- Voice settings.....	121
Table 27	- Multicast parameters.....	122
Table 28	- Time&Date settings.....	123
Table 29	- Function Key configuration.....	129
Table 30	- Softkey configuration.....	129
Table 31	- Network Firewall.....	134
Table 32	- Trouble Cases.....	138

3 FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4 Safety Instruction

Please read the following safety notices before installing or using this unit. They are crucial for the safe and reliable operation of the device.

- Please use the external power supply that is included in the package. Other power supply may cause damage to the phone and affect the behavior or induce noise.
- Before using the external power supply in the package, please check the home power voltage. Inaccurate power voltage may cause fire and damage.
- Please do not damage the power cord. If power cord or plug is impaired, do not use it because it may cause fire or electric shock.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- This phone is design for indoor use. Do not install the device in places where there is direct sunlight. Also do not put the device on carpets or cushions. It may cause fire or breakdown.
- Avoid exposure the phone to high temperature or below 0°C or high humidity.
- Avoid wetting the unit with any liquid.
- Do not attempt to open it. Non-expert handling of the device could damage it. Consult your authorized dealer for help, or else it may cause fire, electric shock and breakdown.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.
- When lightning, do not touch power plug, it may cause an electric shock.
- Do not install this phone in an ill-ventilated place. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

5 Overview

5.1 Overview

The new Fanvil X210 and X210i IP Phone is a high-end enterprise desktop phone which comes with an intelligent DSS Key-mapping LCD to increase enterprise users' productivity at a cost-effective price.

The new DSS key design with 3 dynamic intelligent color displays can replace the traditional expansion board function. The main screen of the device smart display can dynamically display 10 Side DSS keys that can be customized by the user, and the two secondary screens can dynamically display 3 pages. Each page can display the setting contents of 32 DSS keys, and a total of 106 DSS key mappings that can be customized by the user. Every DSS key has a LED indication in green, red color to reflect the key state. Page turning shortcut allows users to quickly switch to the specified page. X210 and X210i is the most economic choice for SMB office and enterprise supervisors.

Evolved from Fanvil's X6 enterprise IP phones, X210 pushes its high-end cost-effective enterprise IP phone to another level. X210 inherits all enterprise features from Fanvil's X-Series enterprise phones, such as HD voice in handset, headset, and full-duplex speakerphone modes, PoE, Fast/Gigabit Ethernet, QoS, secure transmission, auto-provisioning, and more.


X210i is a visualization paging console phone for industry customer. It is equipped with a gooseneck microphone and supports HD hands-free calling. With intelligent programmable DSS buttons, you can set up a one-click call function to improve communication efficiency. It is compatible with the standard SIP protocol and can be used as a monitoring center or host for office manager with functions such as make calls for external & internal phones, two-way intercom, monitoring, and broadcasting. The X210i improves the management efficiency and emergency response capabilities.

X210 and X210i is a great office productivity appliance for enterprise users. The old DSS key label is inconvenient and not environmental friendly. X210's intelligent DSS Key-mapping LCD provides users the flexibility to change DSS key definition and display through easy configuration. Meanwhile, with its intelligent design of the DSS key/LCD, it can be multiplied as expansion modules to save space and cost. X210 and X210i will provide the best user experience to advance enterprise users."

In order to help some users who are interested to read every detail of the product, this user manual is provided as a user's reference guide. Still, the document might not be up to date with the newly release software, so please kindly download updated user manual from Fanvil website, or contact with Fanvil support if you have any question using X210 and X210i.

5.2 Packing Contents


5.2.1 Packing Contents

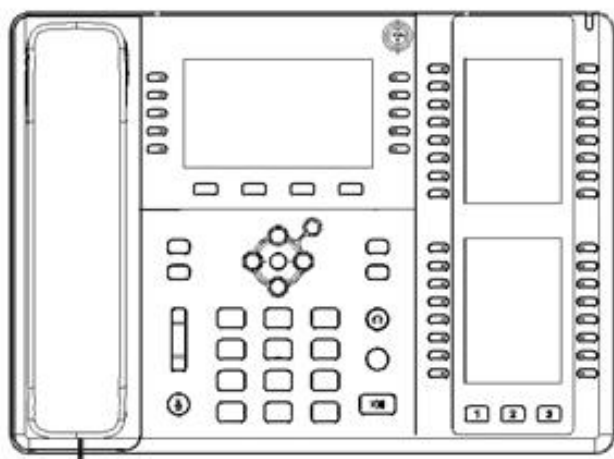


Phone



Handset

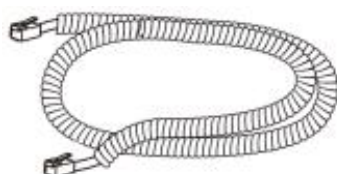

Receiver cable

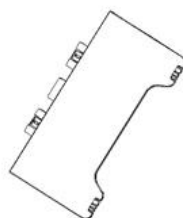

Stand



Network cable



Power adapter (Optional)



Gooseneck Microphone (X210i only)

6 Install Guide

6.1 Use PoE or external Power Adapter

X210 and X210i, called as 'the device' hereafter, supports two power supply modes, power supply from external power adapter or over Ethernet (PoE) complied switch.

X210 and X210i PoE power supply maximum power support to Class 3 (6.49-12.95W).

PoE power supply saves the space and cost of providing the device additional power outlet. With a PoE switch, the device can be powered through a single Ethernet cable which is also used for data transmission. By attaching UPS system to PoE switch, the device can keep working at power outage just like traditional PSTN telephone which is powered by the telephone line.


For users who do not have PoE equipment, the traditional power adaptor should be used. If the device is connected to a PoE switch and power adapter at the same time, the power adapter will be used in priority and will switch to PoE power supply once it fails.

Please use the power adapter supplied by Fanvil and the PoE switch met the specifications to ensure the device work properly.

6.2 Desktop Installation


6.2.1 Desktop Installation

The device supports desktop use. If the phone is placed on the desktop, please follow the instructions in the picture below to install the phone.

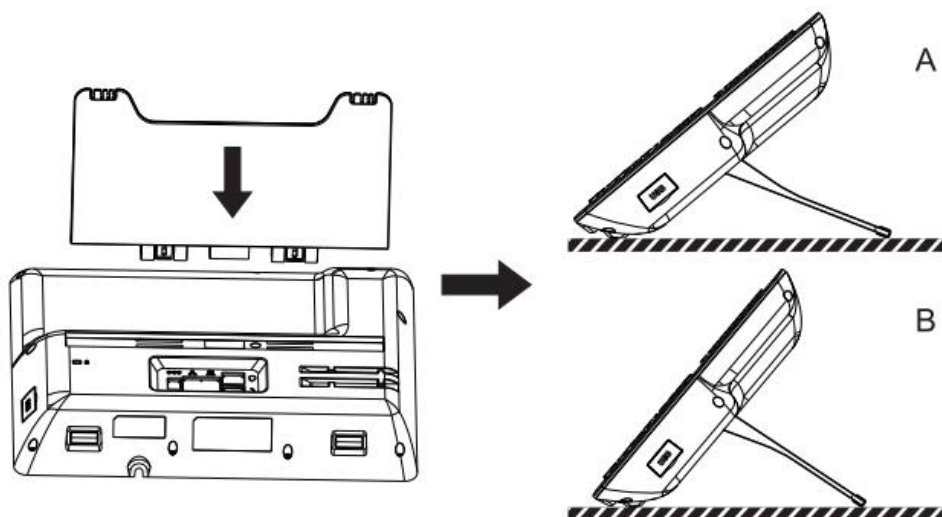

Picture 1 - Device installation


After aligning the gooseneck microphone with the port, load it and tighten the nut.

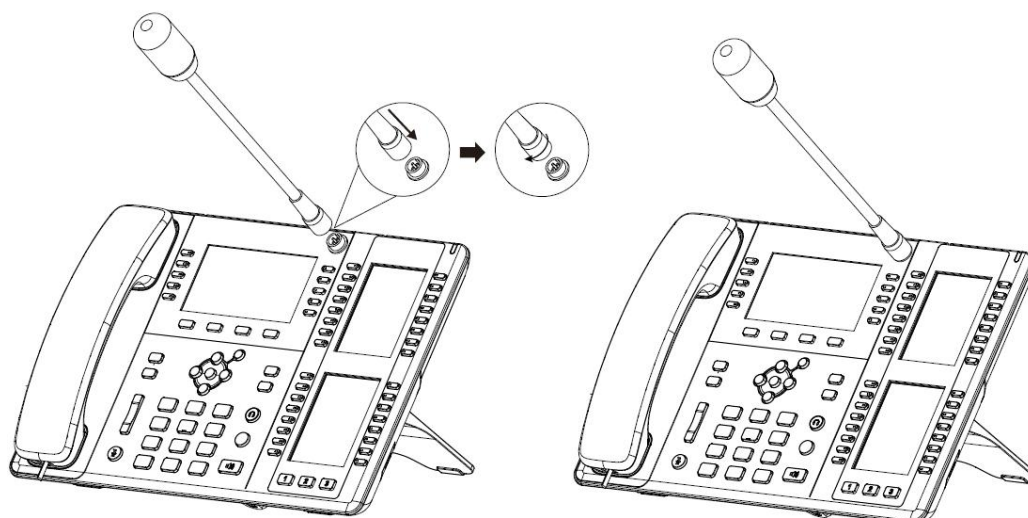

Picture 2 - Gooseneck MIC installation

Please connect power adapter, network, PC, handset, and headphone to the corresponding ports as described in below picture.

- ① USB port: connect USB device (U disk, WIFI adapter)
- ② Power port: connect the power adapter.
- ③ Network port: connecting local area network or internet.
- ④ PC port: the network port connect to the computer.
- ⑤ Headset port: connect headset.
- ⑥ Handset port: connect IP Phone handset.

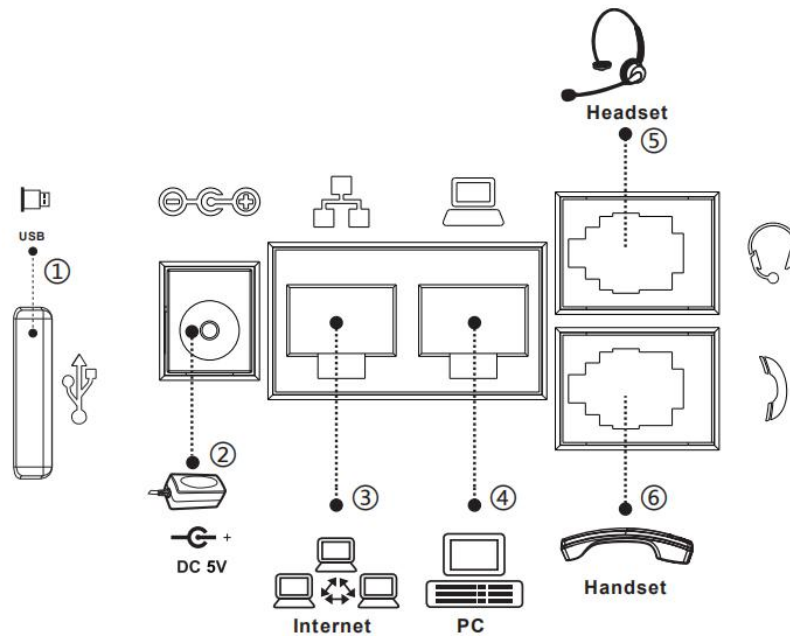

Picture 3 - Connecting to the Device


7 Appendix Table

7.1 Appendix I - Icon

Table 1 - Keypad Icons

	Transfer
	Hold
	Volume up
	Volume down
	Mute Microphone (During Call)
	Return
	Contact
	MWI
	Handset
	Redial
	Hands-free (HF) speaker

 Table 2 - Status Prompt and Notification Icons

	Call out
	Call in
	Call Hold
	Network Disconnected
	Open VLAN
	Open VPN
	Keypad Locked
	Missed calls
	SMS
	New voice message waiting

	Do-Not-Disturb activated on Phone
	Do-Not-Disturb inactivated on Phone
	Call forward activated
	Auto-answering activated
	Hands-free (HF) Mode
	Headphone (HP) Mode
	Handset (HS) Mode
	Mute Microphone
	The Voice quality of calling
	The Voice encryption of calling
	Connecting WIFI
	Open Bluetooth
	Open SIP Hotline

Table 3 - DSSkey Icons

Function Icon	Sidekey Icon	Translate	Instruction
		BLF/NEW CALL	The new call
		BLF/BXFER	Blind transfer
		BLF/AXFER	Attend transfer

		BLF/CONF	Conference
		BLF/DTMF	BLF/DTMF
		Presence	Presence
		MWI	Voice message
		Speed Dial	Speed Dial
		Intercom	Intercom
		Call Park	Call Park
		Call forward	Call forward
		Key Event	Function key
		URL/Action URL	Network function key
		BLF List	BLF List
		Multicast	Multicast
		Memory Key None	Memory Key subtype None
		None	Undefined DSS function key
		Line	SIP Line
		DTMF	DTMF

7.2 Appendix II – Keyboard character query table

Table 4 - Look-up Table of Characters

Mode Icon	Text Mode	Key Button	Characters Of Each Press
	Numeric		1
			2
			3
			4
			5
			6
			7
			8
			9
			0
			*
			#
	Lower Case Alphabets		@:;()<>
			a b c
			d e f
			g h i
			j k l
			m n o
			p q r s
			t u v
			w x y z
			(space)
			.,*/+:-!_ =
			# ^!&\$%

	Upper Case Alphabets	1	@::()<>
		2	A B C
		3	D E F
		4	G H I
		5	J K L
		6	M N O
		7	P Q R S
		8	T U V
		9	W Z Y X
		0	(space)
		*	.,*/+:-_ =
		#	# ^!&\$%
	Mixed type input	1	1
		2	2 a b c A B C
		3	3 d e f D E F
		4	4 g h I G H I
		5	5 j k l J K L
		6	6 m n o M N O
		7	7 p q r s P Q R S
		8	8 t u v T U V
		9	9 w z y x W Z Y X
		0	0
		*	.,*/+:-_ =
		#	# ^!&\$%

7.3 Appendix III –LED Definition


Table 5 - DSS KEY LED State

Type	LED Light	State
Line Key	Off	Line inactive
	Green On	Line ready (Registered)
	Green Blinking	Ringing
	Red Blinking	Line is trying to register
	Red Blinking	Line error (Registration failure)
	Red On	Dialing/Line in use (Talking)
	Yellow Blinking	Call holding
BLF	Green On	Subscription number is idle.
	Red On	Subscription number is busy.
	Red On	Subscription number is dialing.
	Off	Subscription number is unavailable.
Presence	Green On	Subscription number is idle.
	Red On	Subscription number is busy.
	Red On	Subscription number is dialing.
	Off	Subscription number is unavailable.
DND	Red On	Enable DND
	Off	Disable DND
MWI	Green Blinking	New voice message waiting
	Off	No new voice message

8 Introduction to the User

8.1 Instruction of Keypad

8.1.1 Instruction of Keypad

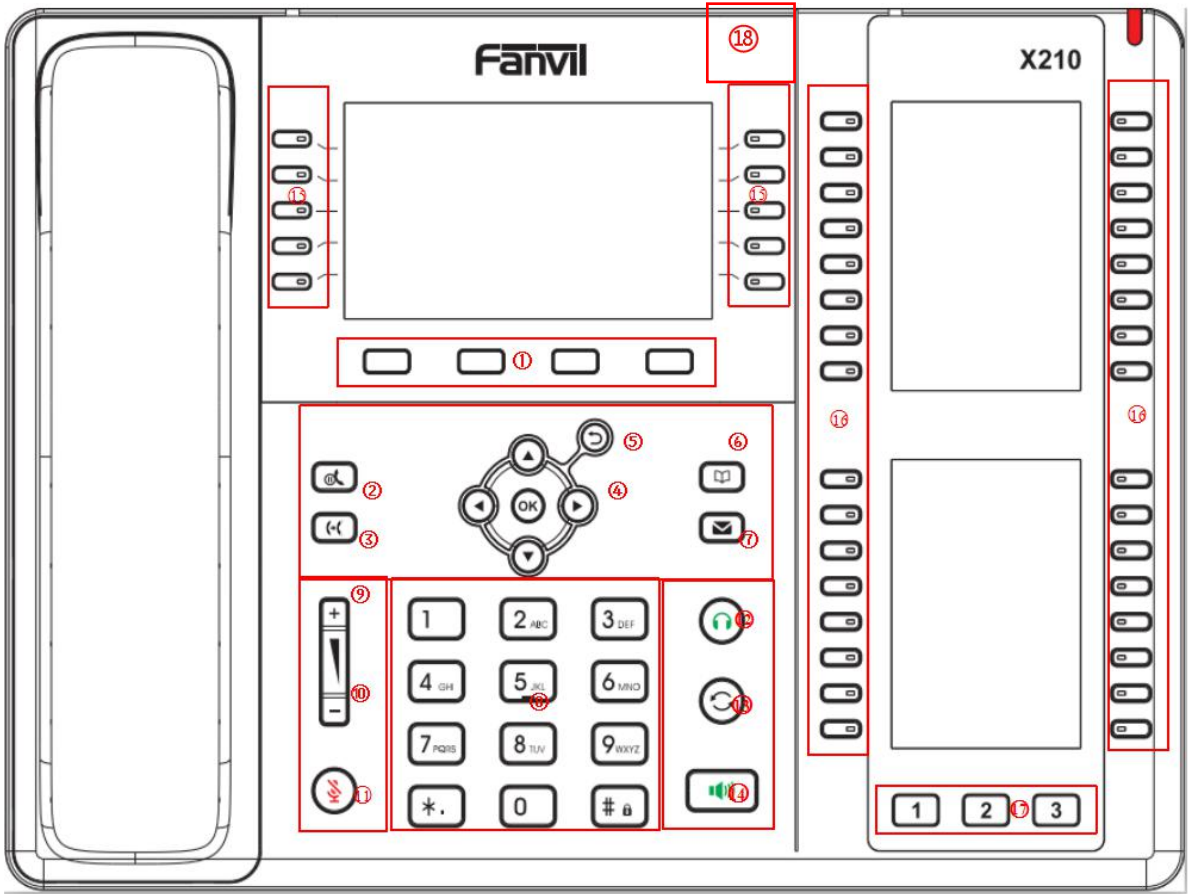

Picture 4 - Instruction of Keypad

The above picture shows the keypad layout of the device. Each key provides its own specific function. User should refer to the illustration in this section about the usage of each key and the description in this document about each function.

Table 6 - Instruction of Keypad

Number	The keypad names	Instruction
--------	------------------	-------------

①	Function Menu Key	These four keys provide the corresponding menu function on the screen.
②	Hold Key	Press the "Hold" key during the call, the user can hold the call, and press it again to cancel the holding and restore the normal call state.
③	Transfer Key	By pressing the "Transfer" key, the user can transfer the current call to another number.
④	Navigate and OK Keys	The user can press the up/down navigation key to change the line or move the cursor in the screen list. On some Settings and text editing pages, the user can press the left/right navigation key to change options or move the cursor in the screen list to the left/right. OK key: Default is equivalent to soft button confirmation, user can customize the function.
⑤	Return Key	The user can return to the previous menu by pressing the return key, and the function of dialing the phone or in the call is to reject or hang up.
⑥	Contact Key	Press the "Contact" key, the user can enter the address book interface and select the contact person to call.
⑦	Voice Mail Key	Press the "voice mail" button, and the user enters the interface of SMS and voice mail list.
⑧	DTMF Key	These 12 standard phone keys provide standard phone button functionality. At the same time, certain long key presses can be triggered to provide special functions. #- Long presses this key to open the keyboard lock configuration.
⑨	Volume Down Key	In the standby state, ring and ring configuration interface, press this button to reduce the ring volume; Press this button to lower the volume on the call or volume adjustment screen.
⑩	Volume Up Key	In the standby state, ring and ring configuration interface, press this button to increase the ring volume; Press this button to increase the volume on the call or volume adjustment screen.
⑪	Mute Key	During a call, the user can press this key to mute the microphone.
⑫	Headset Key	Users can press this key to open the headset channel

⑬	Redial Key	Press the Redial key to redial the last number dialed
⑭	Hands-free Key	The user can press this key to open the audio channel of the speakerphone.
⑮	Side DSS Key	Long press the side DSS key to enter the function key setting interface and set the required functions
⑯	DSS Shortcut Key	Long press the DSS shortcut key to enter the setting interface and set the required functions
⑰	Page Switch Key	Press the "page switch" key, the user can switch to the first, second and third screen function key page.
⑱	Gooseneck MIC Port (Only X210i)	Connect gooseneck microphone

8.2 Using Handset / Hands-free Speaker / Headphone

■ Using Handset

To talk over handset, user should lift the handset off the device and dial the number, or dial the number first, then lift the handset and the number will be dialed. User can switch audio channel to handset by lifting the handset when audio channel is opened in speaker or headphone.

■ Using Hands-free Speaker

To talk over hands-free speaker, user should press the hands-free button then dial the number, or dial the number first then press the hands-free button. User can switch audio channel to the speaker from handset by pressing the hands-free button when audio channel is opened in handset.

■ Using Headphone

To use headphone, by default, user should headset button which is defined by DSS key to turn on the headphone. Same as handset and hands-free speaker, user can dial the number before or after headphone turned on.

■ Using Line Keys(Defined by DSS Key)

User can use line key to make or answer a call on specific line. If handset has been lifted, the audio channel will be opened in handset. Otherwise, the audio channel will be opened in hands-free speaker or headphone.

8.3 Idle Screen



Picture 5 - Screen layout/default home screen

The image above shows the default standby screen, which is the user interface most of the time.

The upper half of the home screen shows the status of the device, information and data that can be edited (such as voice messages, missed calls, auto answer, do not disturb, lock status, network connection status, etc.).

The lower half of the area is the function menu key, which is also the first layer of function menu keys, through which users can operate the phone.

Users can restore the phone to the default standby screen interface by picking up and dropping the handle.

The left and right part of the area shows default configuration of Side key, which dynamically displays the configuration of SIP information, message, headset, etc., which can be customized by users.

The icon description is described in [6.1 appendix I](#).

In some screens, there are many items or long text to be displayed which could not fit into the screen. They will be arranged in a list or multiple lines with a scroll bar. If user sees a scroll bar, user can use up/down navigator buttons to scroll the list. By long-pressed the navigator keys, user can scroll the list or items in a faster speed.



Picture 6 - Scroll icon

8.4 Phone Status

The phone status includes the following information about the phone:

- Network Status:
 - VLAN ID
 - IPv4 or IPv6 status
 - IP Address
 - Network Mode
- The Phone Device Information:
 - Mac Address
 - Phone Mode
 - Hardware Version number
 - Software Version number
 - Phone Storage (RAM and ROM)
 - System Running Time
- SIP Account Information:
 - SIP Account
 - SIP Account Status (register / uncommitted / trying / time out)
- TR069 Connect Status (Displays only in the phone interface state)


The user can view the phone status through the phone interface and the web interface.

- Phone interface : When the phone is in standby mode, press **[Menu]** >> **[Status]** and select the option to view the corresponding information, as shown in the figure:



Picture 7 - The Phone status

- WEB interface: Refer to [7.5 Web management](#) to log in the phone page, enter the [System] >> [Information] page, and check the phone status, as shown in the figure:

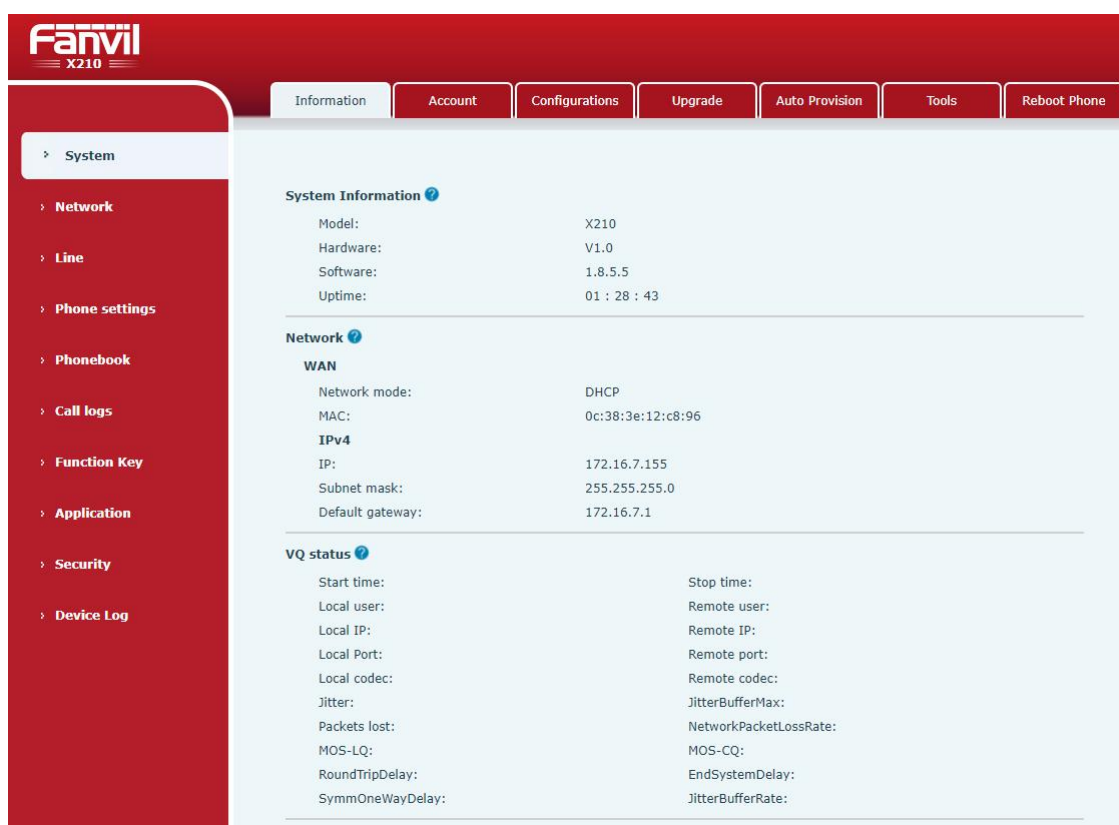

Picture 8 - WEB phone status

8.5 Web Management

Phone can be configured and managed on the web page of the phone. The user first needs to enter the IP address of the phone in the browser and open the web page of the phone. The user can

check the IP address of the phone by pressing **[Menu]** >> **[Status]**.



Picture 9 - Landing page

Users must correctly enter the user name and password to log in to the web page. The default user name and password are "admin". For the specific details of the operation page, please refer to page [11 Web configuration](#).

8.6 Network Configurations

The device supports two kinds of network connection modes: wired network connection and wireless network connection. This section describes the wired network connection. For wireless network connection, refer to [10.5 wi-fi](#).

The device relies on IP network connection to provide service. Unlike traditional phone system based on a circuit switched wire technology, IP devices are connected to each other over the network and exchange data in packet basis based on the devices' IP address.

To enable this phone, you must first correctly configure the network configuration. To configure the network, users need to find the phone function menu button **[Menu]** >> **[Advanced Settings]** >> **[Network]** >> **[Network]**.

The default password for advanced Settings is "123".

NOTICE! If user saw a  'WAN Disconnected' icon flashing in the middle of screen, it means the network cable was not correctly connected to the device's network port. Please check the cable is connected correctly to the device and to the network switch, router, or modem.

The device supports three types of networks, IPv4/IPv6/IPv4&IPv6

There are three common IP configuration modes about IPv4

- Dynamic Host Configuration Protocol (DHCP) – This is the automatic configuration mode by getting network configurations from a DHCP server. Users need not to configure any parameters manually. All configuration parameters will be getting from DHCP server and applied to the device. This is recommended for most users.
- Static IP Configuration – This option allows user to configure each IP parameters manually, including IP Address, Subnet Mask, Default Gateway, and DNS servers. This is usually used in an office environment or by power users.
- PPPoE – This option is often used by users who connect the device to a broadband modem or router. To establish a PPPoE connection, user should configure username and password provided by the service provider.

The device is default configured in DHCP mode.

There are three common IP configuration modes about IPv6

- DHCP – This is the automatic configuration mode by getting network configurations from a DHCP server. Users need not to configure any parameters manually. All configuration parameters will be getting from DHCP server and applied to the device. This is recommended for most users.
- Static IP configuration - this option allows users to manually configure each IP parameter, including IP address, mask, gateway, and primary and secondary domains. This usually applies to some professional network user environments.

Please see 10.7.2.1 network Settings for detailed configuration and use.

8.7 SIP Configurations

A line must be configured properly to be able to provide telephony service. The line configuration is like a virtualized SIM card. Just like a SIM card on a mobile phone, it stores the service provider and the account information used for registration and authentication. When the device is applied with the configuration, it will register the device to the service provider with the server's address and user's authentication as stored in the configurations.

The user can conduct line configuration on the interface of the phone or the webpage, and input the corresponding information at the registered address, registered user name, registered password and SIP user, display name and registered port respectively, which are provided by the SIP server administrator.

- Phone interface: To manually configure a line, the user can press the line key for a long time, or press the button in the function menu **[Menu] >> [Advanced Settings] >> [Accounts] >> [Line 1] / [Line 2] / [Line 3] /.../ [Line 18] / [Line 19] / [Line 20]** configuration, click ok to save the configuration.

NOTICE! User must enter correct PIN code to be able to advanced settings to edit line configuration. (The default PIN is 123)

The parameters and screens are listed in below pictures.



SIP1 15:42

1. Registration	Enabled
2. Server Address	192.168.7.1
3. Auth. User	6502
4. Auth. Password	*****
5. SIP User	6502

Return Left Right OK

Picture 10 - Phone line SIP address and account information



SIP1 15:43

6. Display Name	
7. Server Port	5060
8. Proxy Address	
9. Proxy User	
10. Proxy Password	

Return 123 Delete OK

Picture 11 - Phone display name and port

- WEB interface : After logging into the phone page, enter **[Line] >> [SIP]** and select **SIP1/SIP2/SIP3/.../SIP18/SIP19/SIP20** for configuration, click apply to complete registration after configuration, as shown below:

Picture 12 - Web SIP registration

9 Basic Function

9.1 Making Phone Calls

■ Default Line

The device provides twenty line services. If both lines are configured, user can make or receive phone calls on either line. If default line is configured by user, there will be a default line to be used for making outgoing call which is indicated on the top left corner. To change the default line, user can press left/right navigator buttons to switch between two lines. Enable or disable default line, user can press **[Menu] >> [Features] >> [General] >> [Default Line]** or configure from Web Interface (Web / PHONE / Features / Basic Settings).



Picture 13 - Default line

■ Dialing Methods


User can dial a number by,

- Entering the number directly
- Selecting a phone number from phonebook contacts (Refer to [10.2.1 Local contacts](#))
- Selecting a phone number from cloud phonebook contacts (Refer to [10.2.3 Cloud Phone Book](#))
- Selecting a phone number from call logs (Refer to [10.3 Call Log](#))
- Redialing the last dialed number

■ Dialing Number then Opening Audio

To make a phone call, user can firstly dial a number by one of the above methods. When the dialed number is completed, user can press **[Dial]** button on the soft-menu, or press hand-free button to turn on the speaker or headphone, or lift the handset to call out with the current line, or user can press line key(Configured by DSS Keys) to call out with

specified line.

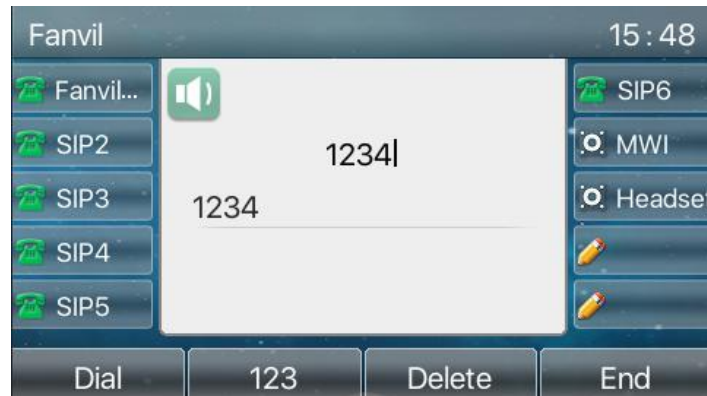

Picture 14 - Enable voice channel dialing

■ Opening Audio then Dialing the Number

Another alternative is the traditional way to firstly open the audio channel by lifting the handset, turning on the hands-free speaker or headphone by pressing hands-free button, or line key, and then dial the number with one of the above methods. When number dialed completed, user can press **[Dial]** button or **[OK]** button to call out, or the number will be dialed out automatically after timeout.



Picture 15 - Open the voice channel and dial the number

■ Cancel Call


While calling the number, user can press end the audio channel by putting back the handset or pressing the hands-free button to drop the call.



Picture 16 - Call number

9.2 Answering Calls

When there is an incoming call while the device is idle, user will see the following incoming call alerting screen.

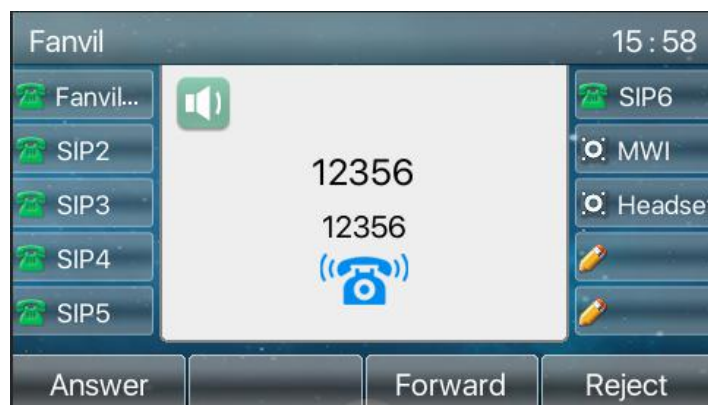

Picture 17 - Answering calls

User can answer the call by lifting the handset, open headphone or speaker phone by pressing the hands-free button, or the [Answer] button. To divert the incoming call, user should press [Divert] button. To reject the incoming call, user should press [Reject] button.

9.2.1 Talking

When the call is connected, user will see a talking mode screen as the following figure.



Picture 18 - Talking interface

Table 7 - Talking mode

Number	Name	Description
①	Voice channel	The icon shows the voice channel mode being used.
②	The current line	The line currently used by the phone.
③	Calls to end	The name or number of the person on the other end of the call.
④	Name on the other end	Name on the other end
⑤	Call duration	The duration of a call after it has been established.
⑥	Speech quality	Displays the current voice quality of the call.
⑦	HD audio	Call using G.722 voice coding calls when displayed HD voice icon.

9.2.2 Make / Receive Second Call

The device can support up to two concurrent calls. When there is already a call established, user can still answer another incoming call on either lines or make a second call on either lines.

■ Second Incoming Call

When there is another incoming call during talking a phone call, this call will be waiting

for user to answer it. User will see the call message in the middle of current screen. The device will not be ringing but playing call waiting tone in the audio channel of the current call and the LED will be flashing in green. User can accept or reject the call as same as normal incoming call. When the waiting call is answered, the first call will be put on hold automatically.




Picture 19 - The second call interface

■ Second Outgoing Call

To make a second call, user may press **[Xfer]** / **[Conf]** button to make a new call on the default line or press the line key to make new call on specific line. Then dial the number the same way as making a phone call. Another alternative for making second call is to pressing DSS Keys dial out from the configured Keys (BLF/Speed Dial). When the user is making a second call with the above methods, the first call could be placed on hold manually first or will be put on hold automatically at second dial.

■ Switching between Two Calls

When there are two calls established, user will see a dual calls screen as the following picture.

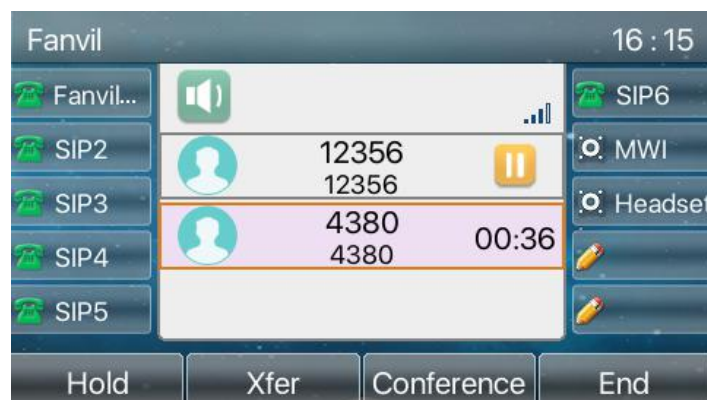

Picture 20 - Two way calling

User can press up/down navigator buttons to switch screen page, and switch call focus by pressing **[Resume]** button.

■ Ending One Call

User may hang up the current talking call by closing the audio channel or press **[End]** button. The device will return to single call mode in holding state.


9.3 End of the Call

After the user finishes the call, the user can put the handle back on the phone, press the hands-free button or Softkey **[End]** key to close the voice channel and end the call.

*Note! When the phone is in the reserved state, the user must press the **[Resume]** key to return to the call state, or put the receiver back and press the hands-free hook to end the call.*

9.4 Redial

- Redial the last outgoing number:
When the phone is in standby mode, press the redial button and the phone will call out the last number dialed.
- Call out any number with the redial key:
Enter the number, press the redial key, and the phone will call out the number on the dial.
- Press the redial key to enter the call record:
Log in the phone page, enter **[Phone Settings]** >> **[Features]** >> **[Redial Settings]**, check redial to enter the call record, press the redial button when standby to enter the call record page, and press again to call out the currently located number.

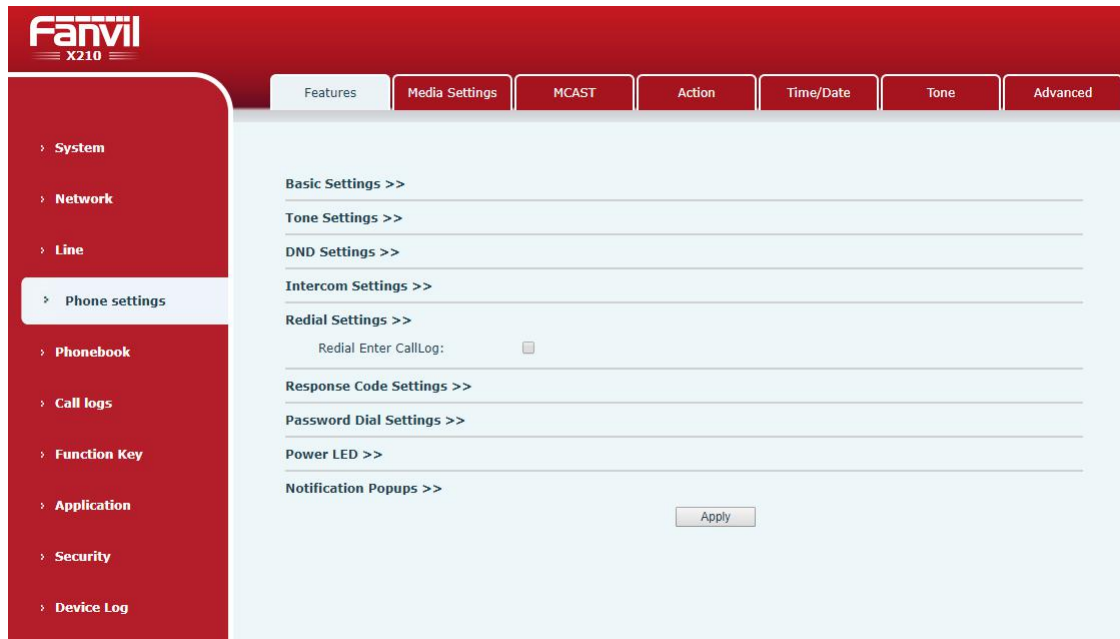

Picture 21 - Redial set

9.5 Dial-up Query

Phone default to open the dial-up inquiry function, dial-out, enter two or more Numbers, dial the interface will automatically match call records, contacts in the number list, use the navigation key up and down keys can select the number, press the call out key or time out.

9.6 Auto-Answering

User may enable auto-answering feature on the device and any incoming call will be automatically answered (not including call waiting). The auto-answering can be enabled on line basis.

The user can start the automatic answer function in the telephone interface or the webpage interface.

● Phone interface:

Press **[Menu]** >> **[Features]** >> **[Auto Answer]** button;

Press the button to select the line, use the left/right navigation key to turn on/off the auto answer option, and set the auto answer time to 5 seconds by default.

After completion, press **[OK]** key to save;

The icon in the upper right corner of the screen  indicates that auto answer is enabled.




Picture 22 - Line 1 enables auto-answering



Picture 23 - The line has enabled auto-answering

- **WEB interface:**

Log in the phone page, enter [Line] >> [SIP], select [SIP] >> [Basic settings], start auto-answering, and click apply after setting the automatic answering time.

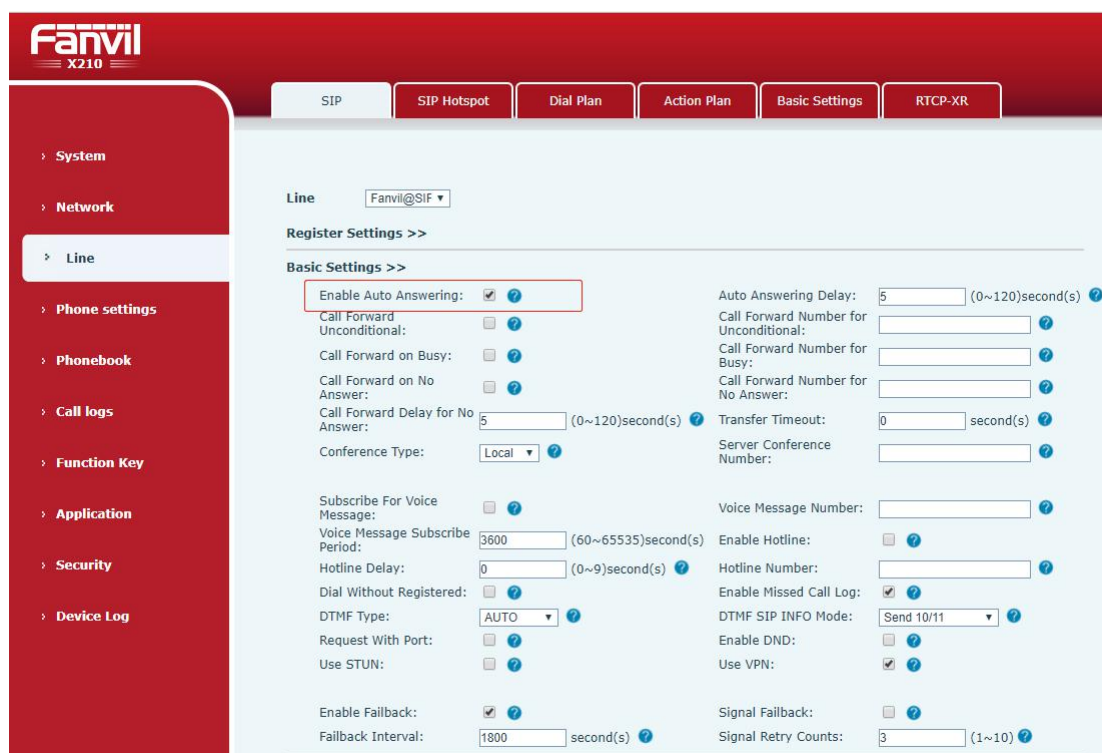


Picture 24 - Web page to start auto-answering

9.7 Callback

The user can dial back the number of the last call. If there is no call history, press the **[Callback]** button and the phone will say "can't process".

- Set the callback key through the phone interface:
Under standby, press **[Menu]** >> **[Basic Settings]** >> **[Keyboard Settings]** >> **[Function key]** or **[Keyboard Settings]** >> **[Soft function key]** choose to set up the function keys, key type, type selection function name select callback function, input the callback key name, press **[OK]** key to save.

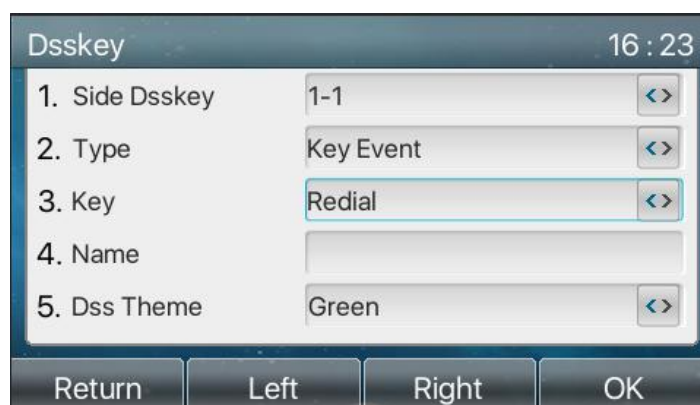

Picture 25 - Set the callback key on the phone

- Set the callback key through the web interface:
Log in the phone page, enter the [Function Key] >> [Side Key] or [Function Key] >> [Function Key] page, select the function Key, set the type as the function Key, and set the subtype as the callback, as shown in the figure:

Key	Type	Name	Value	Subtype	Line	PickUp Number	Icon Color
F 1	Line			None	210@SIP1		Default Green
F 2	Key Event			Call Back	AUTO		Default Green
F 3	Line			None	SIP3		Default Green
F 4	Line			None	SIP4		Default Green
F 5	Line			None	SIP5		Default Green
F 6	Line			None	SIP6		Default Green
F 7	Key Event			MWI	AUTO		Default Green
F 8	Key Event			Headset	AUTO		Default Green
F 9	None			None	AUTO		Default Green
F 10	None			None	AUTO		Default Green

Picture 26 - Set the callback key on the web page

9.8 Mute

You can turn on mute mode during a call and turn off the microphone so that the local voice is not heard. Normally, mute mode is automatically turned off at the end of a call. You can also turn on mute on any screen (such as the free screen) and mute the ringtone automatically when there is an incoming call. Mute mode can be turned on in all call modes (handles, headphones or hands-free).

9.8.1 Mute the Call

- During the conversation, press the mute button on the phone: the mute button on the phone will turn on the red light.
Red mute icon is displayed in the call interface, as shown in the figure:



Picture 27 - Mute the call

- Cancel mute: press  cancel mute on the phone again. The mute icon is no longer displayed in the call screen. The red light is off by mute button.

9.8.2 Ringing Mute

- Mute: press the mute button when the phone is in standby mode: 

The top right corner of the phone shows the bell mute icon , Mute button red light is always on, when there is an incoming call, the phone will display the incoming call interface but will not ring.




Picture 28 - Ringing mute

- Cancel ring tone mute: On the standby or incoming call screen, press the mute button again  or volume up  cancel ring tone mute, no longer shows mute icon in upper right corner after cancel . The phone mute icon is off

9.9 Call Hold/Resume

The user can press the [**Hold**] button to maintain the current call, and this button will become the [**Resume**] button, and the user can press the "resume" button to restore the call.

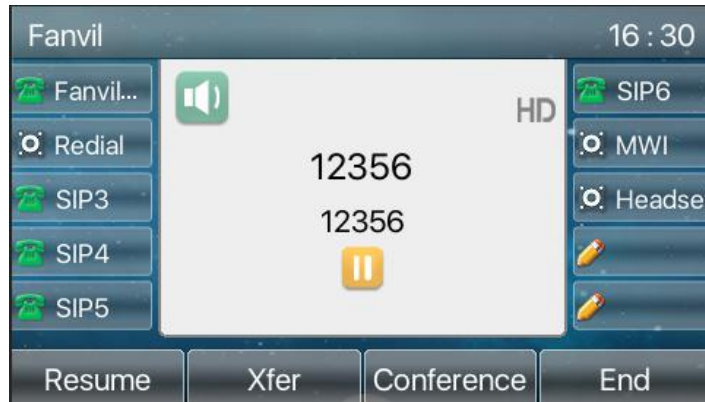

Picture 29 - Call hold interface

9.10 DND

User may enable Do-Not-Disturb (DND) feature on the device to reject incoming calls (including call waiting). The DND can be enabled on line basis.

Enable/Disable phone all lines DND, Methods the following :


- Phone interface : Default standby mode .
 - 1) Press [**DND**] button to enter the DND setting interface, select line or phone to enable DND, the icon will become red  .
 - 2) Press [**DND**] button to enter the DND setting interface and disable DND, the icon will be become blue  .



Picture 30 - Enable DND


If the user wishes to enable/disable the uninterrupted function on a specific line, the user can set the uninterrupted function on the page of configuring the line.

- 1) Press **[Menu]** >> **[Features]** >> **[DND]** button, Enter the **[DND]** editing interface.
- 2) Click the left/right navigation button to select the line to adjust the mode and state of "do not disturb", and then press the **[OK]** button to save.
- 3) The user will see the DND icon turn red, and the sip-line has enabled the mode of "DND".

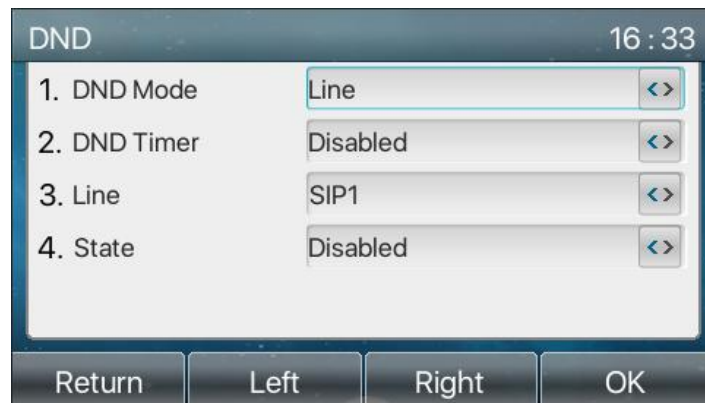


Picture 31 - DND setting interface

The user can also use the DND timer. After the setting, the DND function will automatically turn on and the DND icon will turn red in the time range.

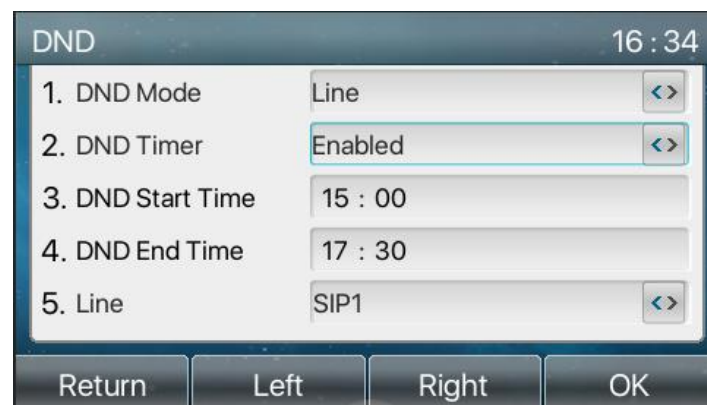


Picture 32 - DND timer

- WEB interface: Enter **[Phone setting]** >> **[Features]** >> **[DND settings]**, set the DND type (off, phone, line), and DND timing function.

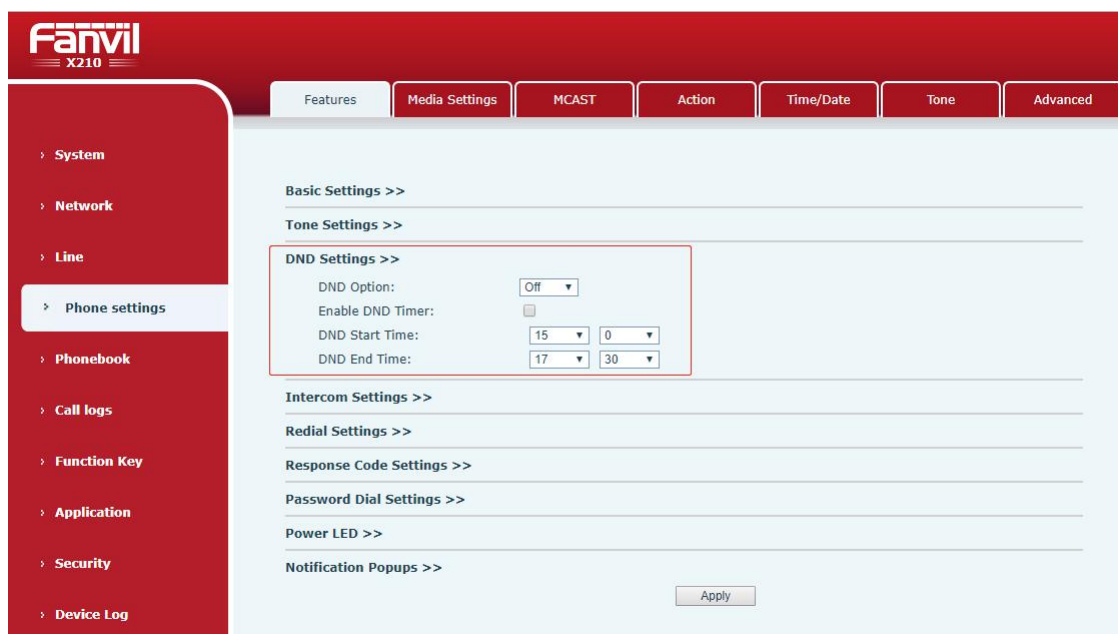

Picture 33 - DND Settings

The user turns on the DND for a specific route on the web page: Enter [Line] >> [SIP], select a [Line] >> [Basic settings], and enable DND.

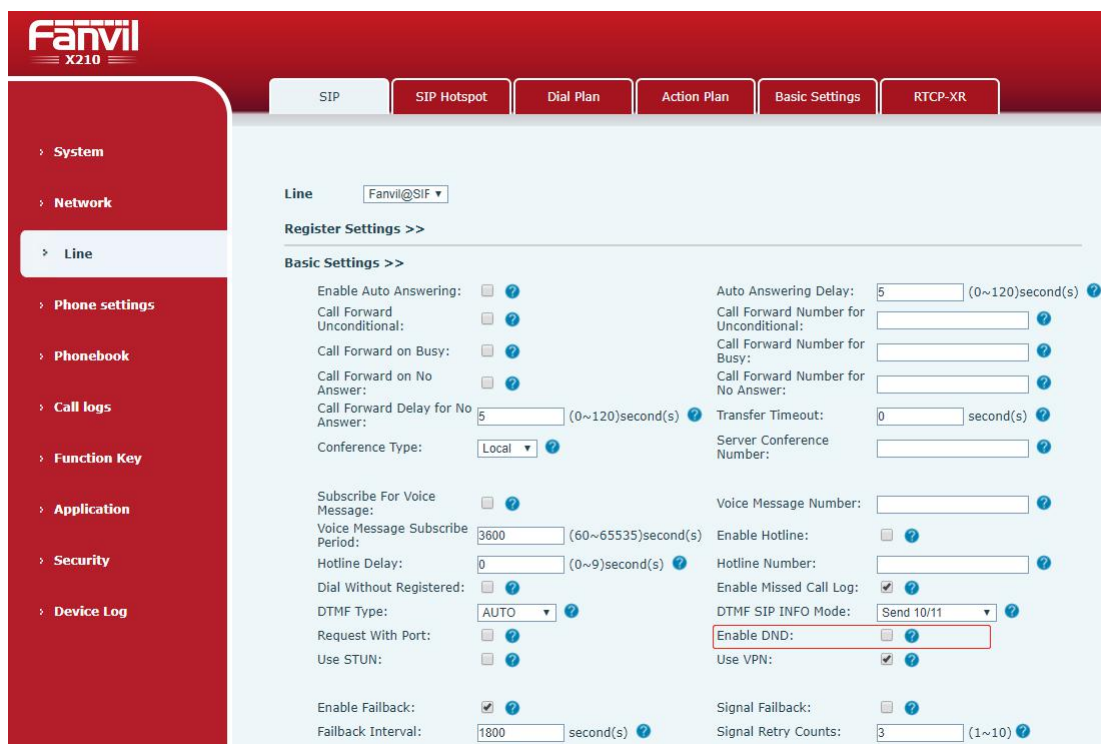

Picture 34 - Line DND

9.11 Call Forward

Call forward is also known as 'Call Divert' which is to divert the incoming call to a specific number based on the conditions and configurations. User can configure the call forward settings of each line.


There are three types,

- **Unconditional Call Forward** – Forward any incoming call to the configured number.
- **Call Forward on Busy** – When user is busy, the incoming call will be forwarded to the configured number.
- **Call Forward on No Answer** – When user does not answer the incoming call after the configured delay time, the incoming call will be forwarded to the configured number.
- Phone interface : Default standby mode
 - 1) Press **[Menu]** >> **[Features]** >> **[Call Forward]** button, select the line by up/down navigation key, press **[OK]** button to set call forward..




Picture 35 - Select the line to set up call forwarding

- 2) Select the call forward type by pressing the up/down navigation button. Click **[OK]** to configure call forwarding and delay time.

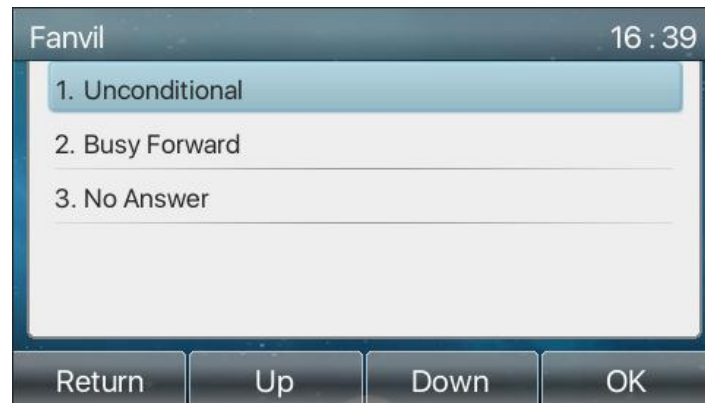

Picture 36 - Select call forward type

- 3) Select enable/disable by pressing the left/right navigation button.

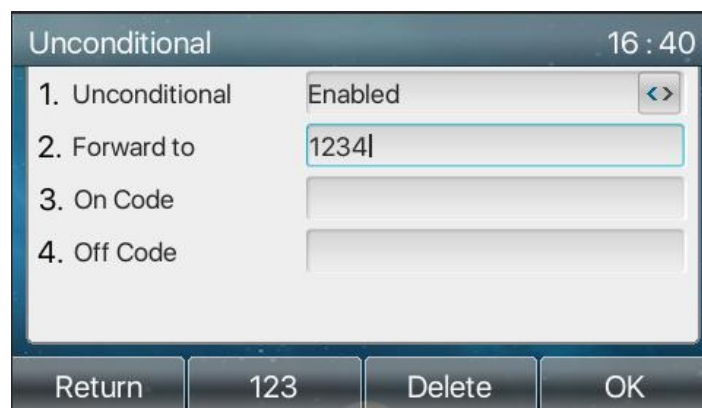

Picture 37 - Enable call forwarding and configure the call forwarding number

- 4) Browse the parameters set by the up/down navigation key and enter the required information. When finished, press the [OK] button to save the changes.
- WEB interface: Enter [Line] >> [SIP], Select a [Line] >> [Basic settings], and set the type, number and time of forward forwarding.

Picture 38 - Set call forward

9.12 Call Transfer


When the user is talking with a remote party and wish to transfer the call to another remote party, there are three way to transfer the call, blind transfer, attended transfer and Semi-Attended transfer.

- Blind transfer: Do not need to negotiate with the other side, directly transfer the call to the other side.
- Semi-Attended transfer.: When you hear the ring back, transfer the call to the other party.
- Attended transfer: When the caller answers the call, transfer the call to the caller.

Note ! For more transfer Settings, please refer to [12.6 Line >> Dial Plan](#).

9.12.1 Blind transfer


During the call, the user presses the function menu button **[Transfer]** or the transfer button on the phone , Enter the number to transfer or press the contact button or the history button to select the number, press the transfer key again or blind transfer  to a third party. After the third party rings, the phone will show that the transfer is successful and hang up.

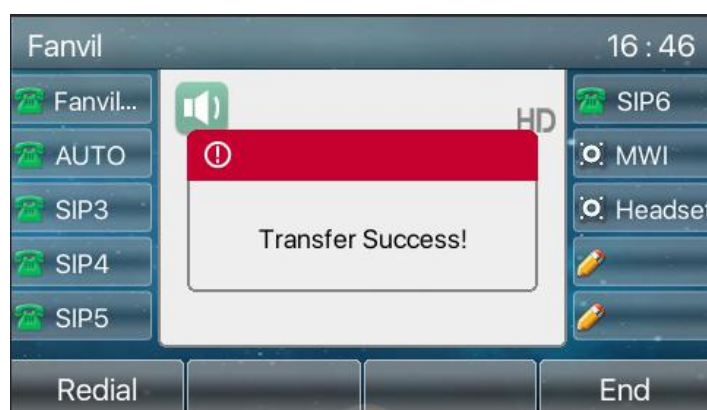

Picture 39 - Transfer interface

9.12.2 Semi-Attended transfer

During the call, the user presses the function menu button [transfer] or the transfer button  on the phone to input the number to be transferred or press the contact button or the historical record button to select the number, and then press the call button. When the third party is not answered, press the transfer on the call interface to make the semi-attendance transfer or press the end button to cancel the semi-attendance transfer.

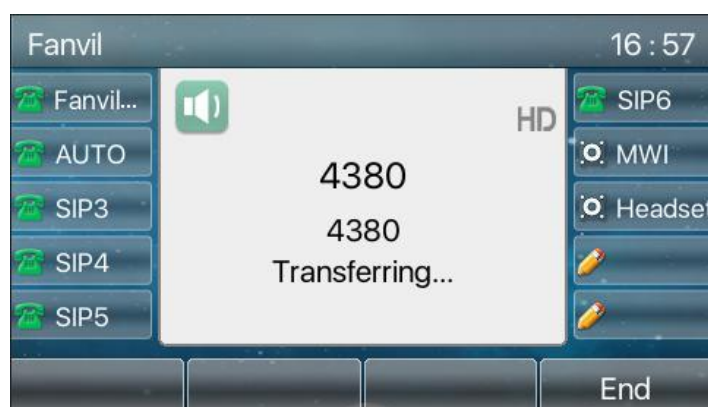

Picture 40 - Semi-Attended transfer

9.12.3 Attended transfer

Attendance transfer is also known as "courtesy mode", which is to transfer the call by calling the other party and waiting for the other party to answer the call.

Calling is the same procedure. In dual call mode, press the "transfer" button to transfer the first call to the second call.




Picture 41 - Attended transfer

9.13 Call Waiting

- Enable call waiting: new calls can be accepted during a call.
- Disable call waiting: new calls will be automatically rejected and a busy tone will be prompted.
- Enable call waiting tone: when you receive a new call on the line, the tone will beep.


The user can enable/disable the call waiting function in the phone interface and the web interface.

- Phone interface: Press **[Menu]** >> **[Features]** >> **[Call waiting]**, the navigation key left/right button to enable/disable call waiting and call waiting tone. Press **[Menu]** >> **[Features]** >> **[Call waiting]**, the navigation key left/right button to enable/disable call waiting and call waiting tone.

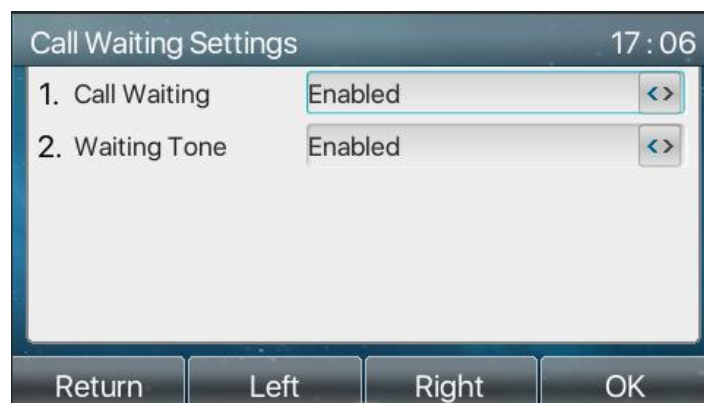


Picture 42 - Call waiting setting

- WEB interface: Enter **[Phone Settings]** >> **[Features]** >> **[Basic Settings]**, enable/disable call waiting and call waiting tone.

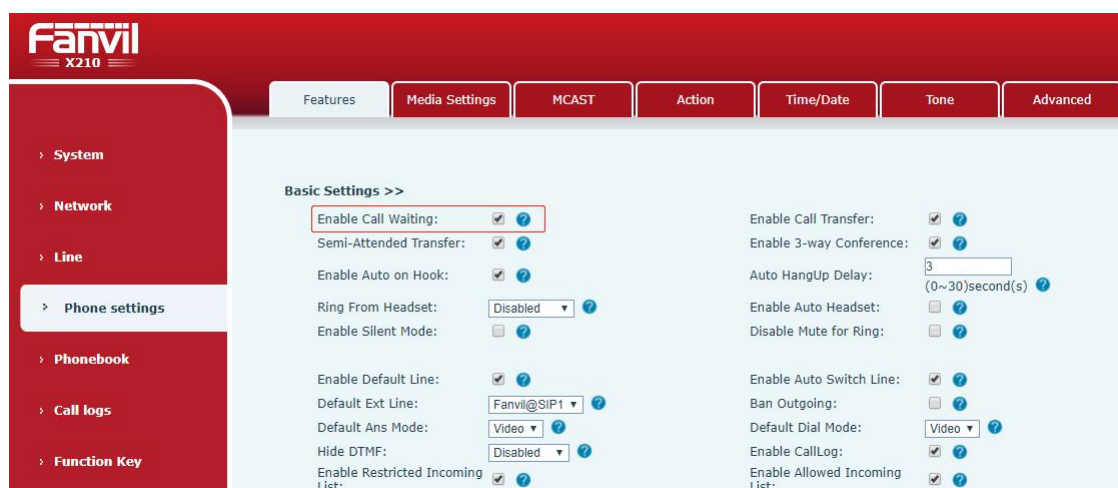

Picture 43 - Web call waiting setting

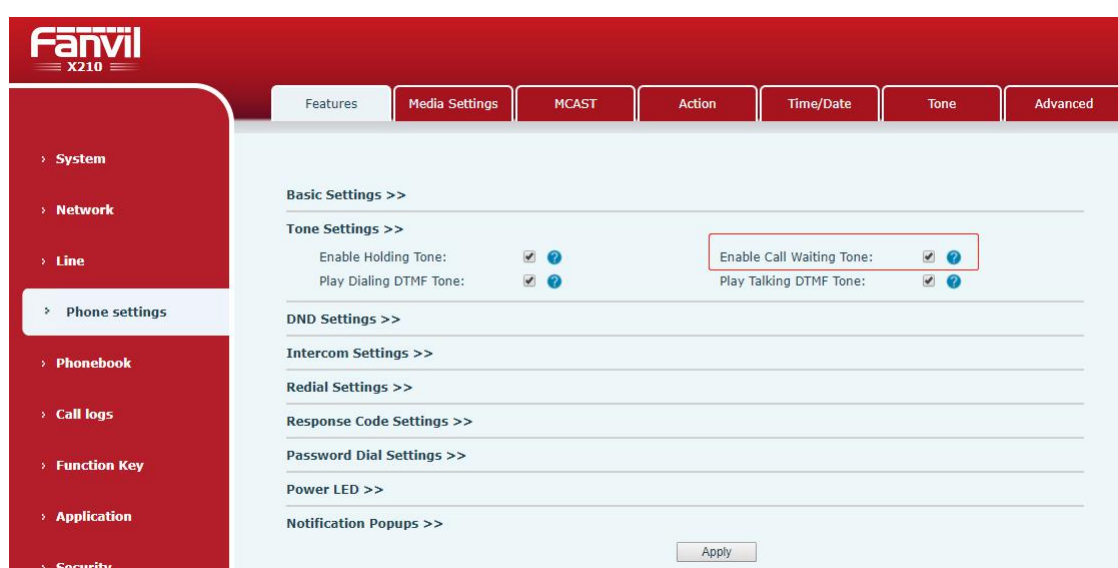


Picture 44 - Web call waiting tone setting

9.14 Conference

9.14.1 Local Conference


To conduct local conference, the user needs to log in the webpage and enter **[Line] >> [SIP] >> [Basic settings]**. The meeting mode is set as local (the default is local mode), as shown in the figure:

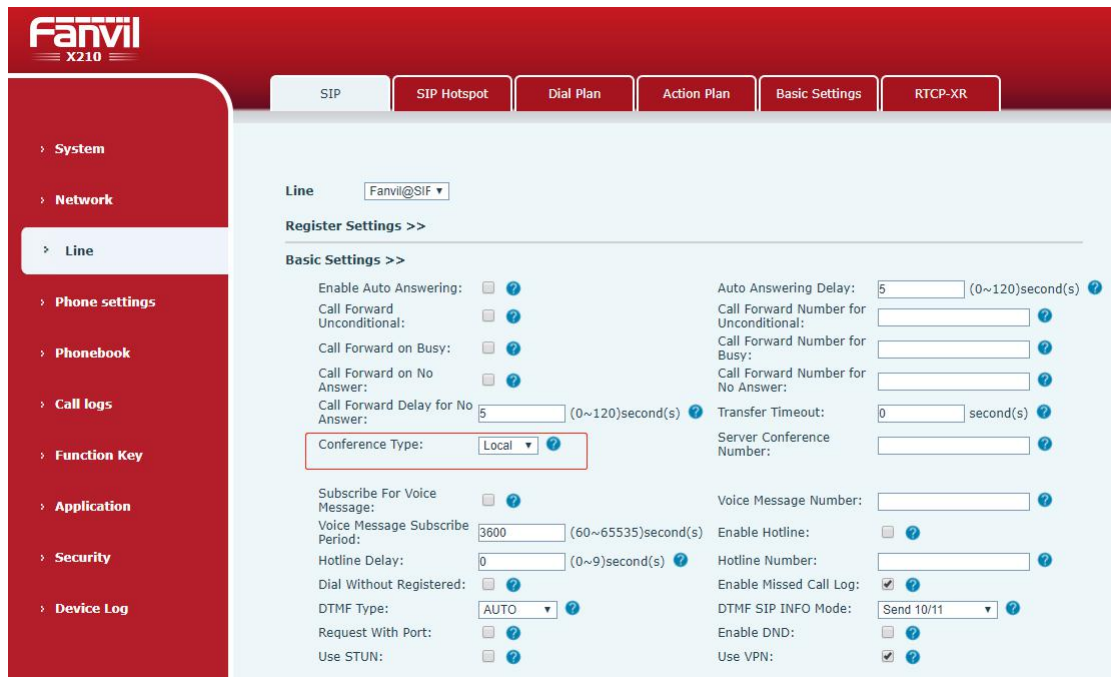

Picture 45 - Local conference setting

Two ways to create a local conference:

- 1) The device has two channels of communication. Press the conference button on the call interface. When selecting the conference number, select the other number that already exists.

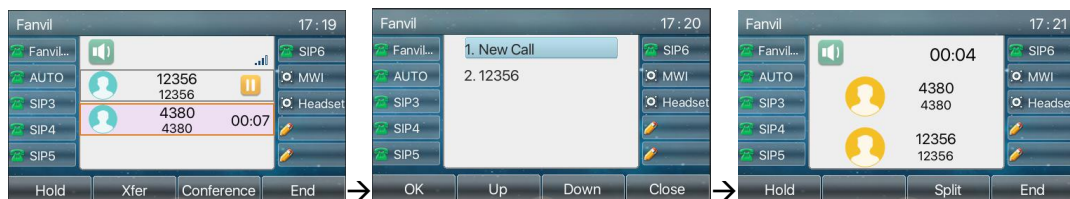

Picture 46 - Local conference (1)

- 2) If the device has a call all the way, press the conference key in the call interface, enter the number to join the meeting and press the call; After the opposite end is answered, press the conference button again to set up the local tripartite conference:



Picture 47 - Local conference (2)

Note: During the conference, press the split button to split the conference and press the

end button to end the call.

9.14.2 Network Conference

Users need server support for network conference.

Log in the web page, enter [Line] >> [SIP] >> [Basic settings], set the conference mode as server mode (default is local mode), set the server conference room number (please consult your system administrator), as shown in the figure:

The screenshot shows the Fanvil X210 web interface. The left sidebar contains a navigation menu with options: System, Network, Line, Phone settings, Phonebook, Call logs, Function Key, Application, Security, and Device Log. The main content area is titled 'SIP' and 'SIP Hotspot'. The 'Line' dropdown is set to 'Fanvil@SIP'. The 'Register Settings >>' section is expanded, showing 'Basic Settings >>'. In the 'Basic Settings', the 'Conference Type' is set to 'Server' and the 'Server Conference Number' is set to '1234'. Other settings include 'Enable Auto Answering', 'Call Forward Unconditional', 'Call Forward on Busy', 'Call Forward on No Answer', 'Call Forward Delay for No Answer', 'Auto Answering Delay', 'Call Forward Number for Unconditional', 'Call Forward Number for Busy', 'Call Forward Number for No Answer', 'Transfer Timeout', 'Subscribe For Voice Message', 'Voice Message Subscribe Period', 'Hotline Delay', 'Dial Without Registered', 'DTMF Type', 'Request With Port', 'Use STUN', 'Enable Failback', 'Failback Interval', 'Voice Message Number', 'Enable Hotline', 'Hotline Number', 'Enable Missed Call Log', 'DTMF SIP INFO Mode', 'Enable DND', 'Use VPN', 'Signal Failback', and 'Signal Retry Counts'.

Picture 48 - Network conference

Method to join a network conference:

- Multi-party call number of network conference room and enter the password then all enter the conference room.
- The two phones have established common calls. Press the conference button to invite new members to the conference. Follow the voice prompt to operate.

Note: the upper limit of the number of participants in the network conference varies according to the server.


9.15 Call Park

Call park requires server support. Consult your system administrator for support.

When you are on the call, if it is not convenient to answer the phone at this time, you can press the configured park button to hold the call; After a successful park, you can resume the call by pressing the configured park button on other devices.

Set the call park button:

- Phone interface: long press a function key to enter the function key Settings interface, or through the **[Menu] >> [Basic Settings] >> [Keyboard Settings]** enter the function keys function key Settings interface, key function key type as memory and subtypes to call park, reside values for the server calls park number, set up corresponding SIP lines.
- WEB interface: log in the phone page, enter the **[Function Key] >> [Function Key]** page, select a DSSKey, set the function key type as memory key, the subtype as call park, and the value as the call park number of the server, and set the corresponding SIP line.

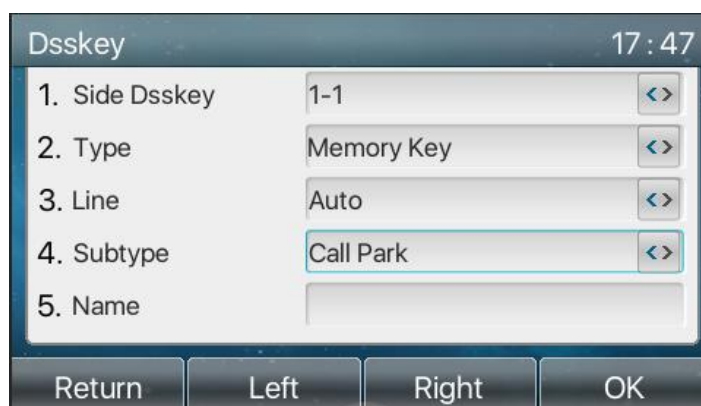

Picture 49 - Phone set call park



Picture 50 - WEB set call park

9.16 Pick Up


Pick up requires server support. Consult your system administrator for support.

You can use the Pick Up function to answer incoming calls from other users. The phone can pick up incoming calls by configuring DSSkey for BLF and setting the Pick Up code.

Phone interface: press **[Menu]** >> **[Basic Settings]** >> **[Keyboard Settings]** >> **[DSS Key Settings]**, select the function key to set.

- Set the line, function key type as memory key, subtype as BLF/NEW CALL, set subscription number, and pick up code
 - Other phones call the subscription number, and the opposite end is in the incoming ring.
 - Press the DSS key to pick up the phone.
 - The caller picks up the call and speaks to it.

WEB interface: Log in the phone webpage, enter the **[Function Key]** >> **[Function Key]** page, select a DSSkey, set the memory key type as memory key, the subtype as BLF/NEW CALL, and set the corresponding SIP line and pick up codes.

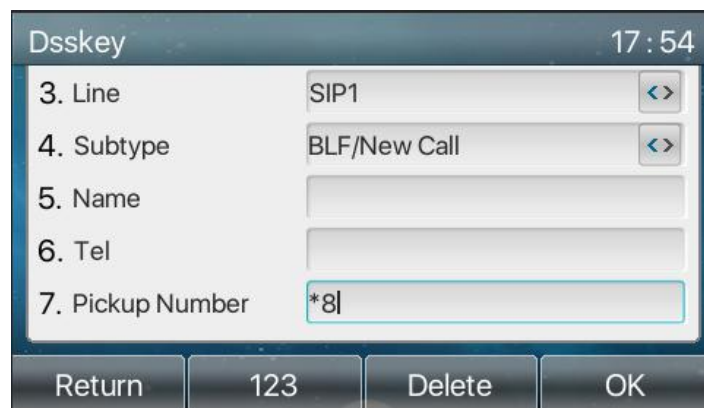

Dsskey		17:54
3. Line	SIP1	<>
4. Subtype	BLF/New Call	<>
5. Name		
6. Tel		
7. Pickup Number	*8	
Return 123 Delete OK		

Picture 51 - Phone pick up setting



Picture 52 - WEB pick up setting

9.17 Anonymous Call

9.17.1 Anonymous Call


The phone can set up anonymous calls to hide the calling number and the calling name.

- You can see anonymity in the context of [Menu] >> [Advanced Settings] >> [Accounts] >> [Advanced].
- The default is none, which is off, and RFC3323 and RFC3325 are optional.
- Select any one to open the anonymous call.




Picture 53 - Enable anonymous call

- On the web page [Line] >> [SIP] >> [Advanced Settings] can also open anonymous calls.
- Setting to enable anonymous calls also corresponds to the SIP line. That is, the setting under the SIP1 page can only take effect on the SIP1 line.

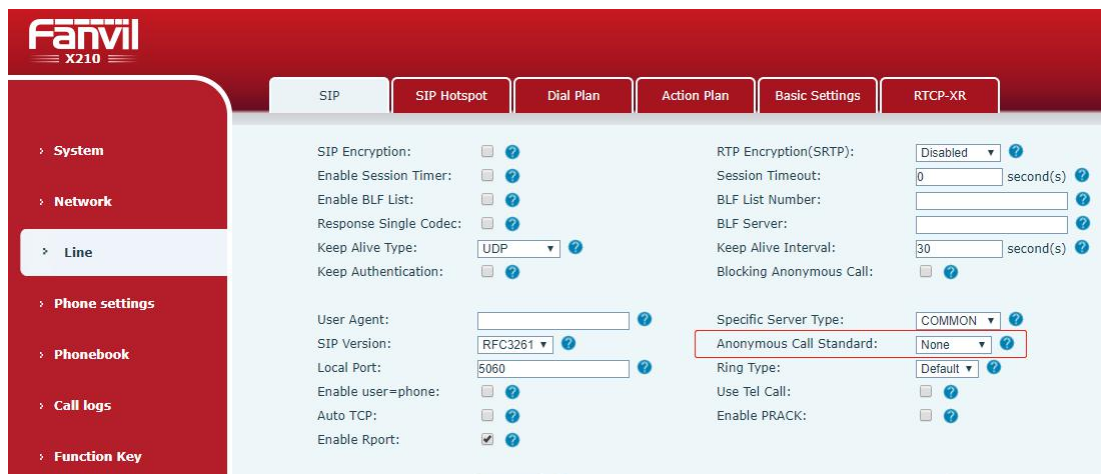

Picture 54 - Enable Anonymous web page call

The following is a transcript of an anonymous call received by the phone.

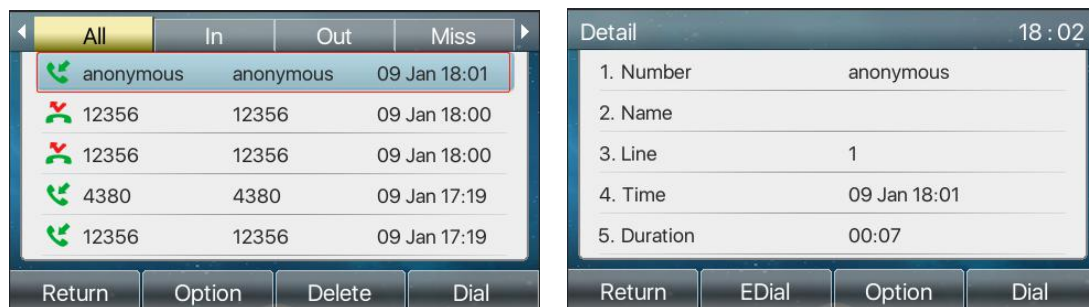


Picture 55 - Anonymous call log

9.17.2 Ban Anonymous Call


The device can be set to prohibit anonymous calls, that is anonymous calls to the number will be directly rejected.

- In the phone **[Menu]** >> **[Features]** >> **[Ban anonymous call]**, click to enter and all SIP lines will be displayed.
- Click Softkey **[Switch]** or **[<]** **[>]** to switch the SIP line and enable anonymous call.

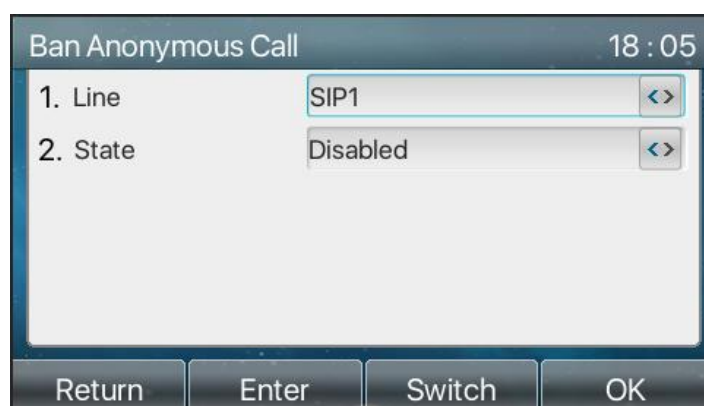

Picture 56 - Anonymous calls are not allowed on the phone

- On the web page [Line] >> [SIP] >> [Advanced Settings], also can disable anonymous calls.
- The setup to disable anonymous calls also corresponds to the SIP line. That is, the setting under the SIP1 page can only take effect on the SIP1 line.

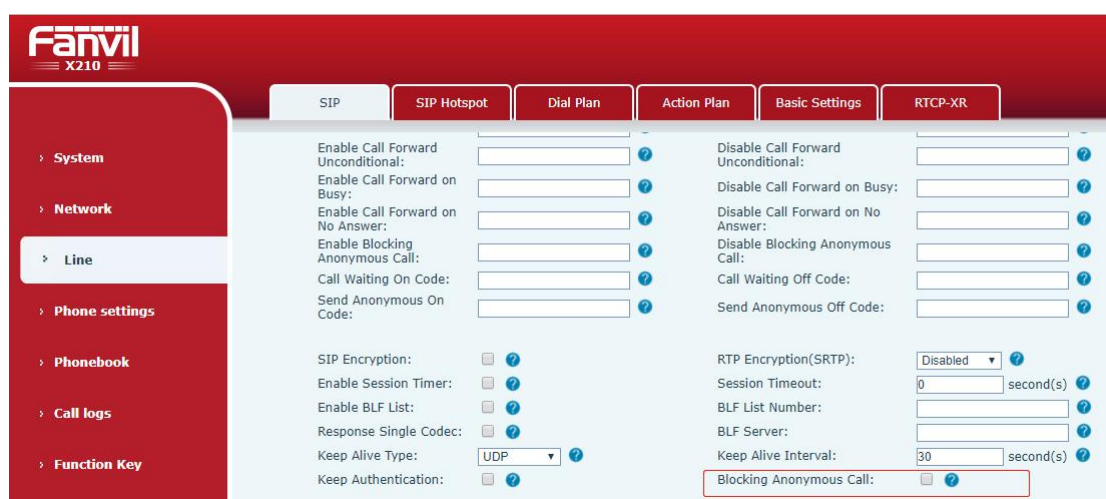

Picture 57 - Page Settings blocking anonymous call

9.18 Hotline

The device supports hotline dialing. After setting up the hotline dialing, directly pick up the handset, hands-free, earphone, etc., and the phone will automatically call according to the hotline delay time.


- In the phone [Menu] >> [Features] >> [Advanced] >> [Hotline], click to enter and all SIP lines will be displayed.
- Then set the hotline for each SIP line, which is off by default.

- Open the hotline, set the hotline number, set the delay time of the hotline.



Picture 58 - Phone hotline setting interface

- On the website [Line] >> [SIP] >> [Basic Settings], can also set up a hotline.
- The setup hotline also corresponds to the SIP line. That is, the hotline set in the SIP1 webpage can only be activated in the SIP1 line.

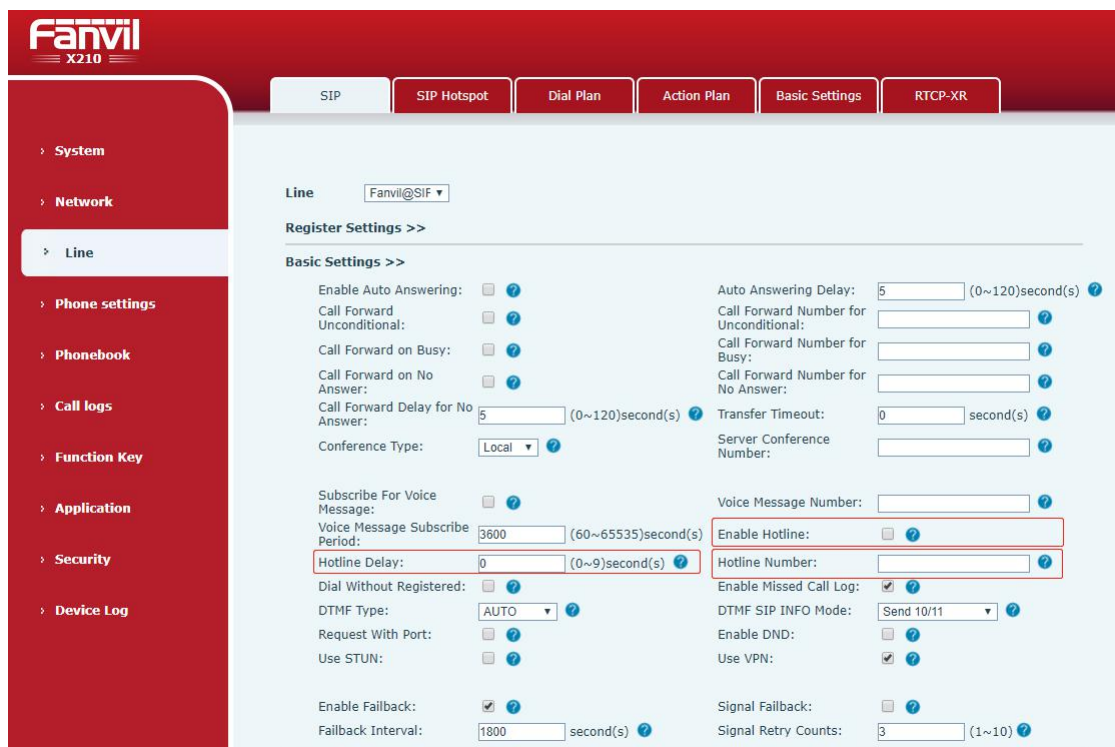


Picture 59 - Hotline set up on webpage

9.19 Emergency Call

The emergency call function is used to enable the keypad lock. Users can set the corresponding emergency call number on the phone. You can also call emergency

services when your phone is locked.

1) Configure the emergency call number: log in the phone page, enter the **[Phone Settings]** >> **[Function Settings]**>> **[Basic Settings]**page, set up the emergency call code, if you need to set up more than one emergency call code, please use ", "to separate.

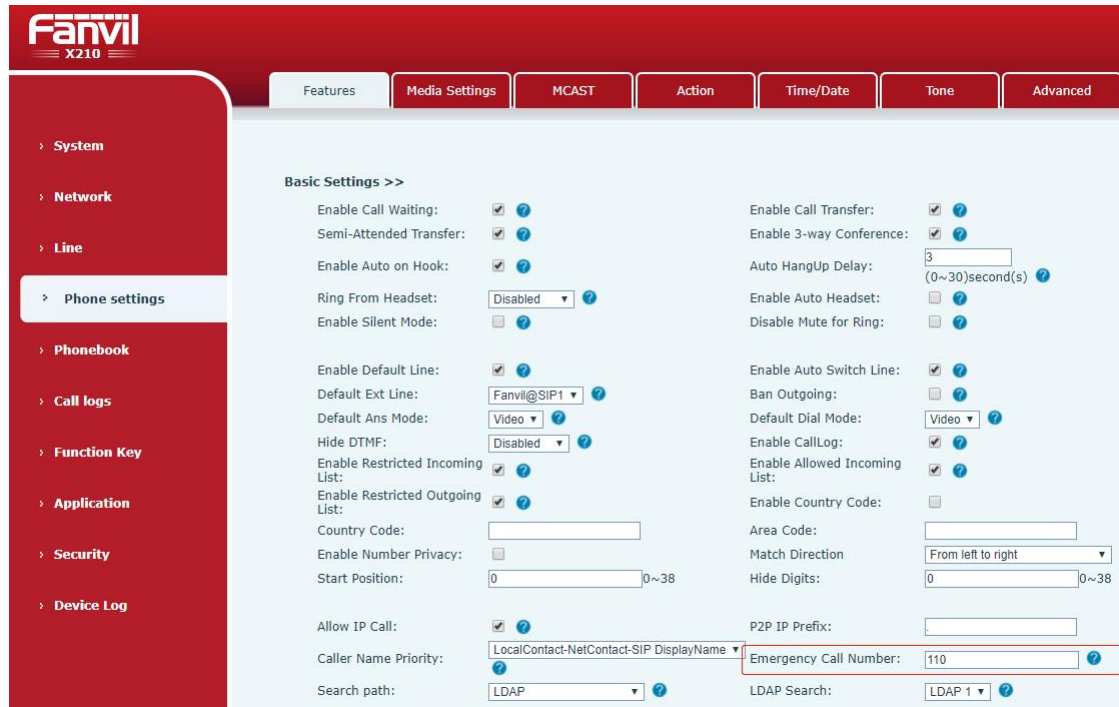

Picture 60 - Set up an emergency call number

2) When the phone set the keyboard lock, you can call the emergency call number without unlocking, as shown in the figure:



Picture 61 - Dial the emergency number

10 Advance Function

10.1 BLF (Busy Lamp Field)

10.1.1 Configure the BLF Functionality

- Page interface: log in the phone page, enter the **[Function key]** >> **[Function key]** page, select a DSS key, set the function key type as memory key, choose subtype among BLF/NEW CALL, BLF/BXFER, BLF/AXFER, BLF/CONF, set BLF/DTMF value as the number to be subscribed, set the corresponding SIP line. The pickup number is provided by the server. The specific use of reference [8.16 Pick up](#).

Key	Type	Name	Value	Subtype	Line	Media	PickUp Number	Icon Color
DSS Key 1	Memory Key		1234	BLF/NEW CAI	Fanvil@SIP1	DEFAULT		Default Green
DSS Key 2	Memory Key		1234	BLF/BXFER	Fanvil@SIP1	DEFAULT		Default Green
DSS Key 3	Memory Key		1234	BLF/AXFER	Fanvil@SIP1	DEFAULT		Default Green
DSS Key 4	Memory Key		1234	BLF/CONF	Fanvil@SIP1	DEFAULT		Default Green
DSS Key 5	Memory Key		1234	BLF/DTMF	Fanvil@SIP1	DEFAULT		Default Green
DSS Key 6	None			None	AUTO	DEFAULT		Default Green

Picture 62 - Web page configuration BLF function key

- Phone interface: long press a function key to enter the function key Settings interface, or go to the **[Menu]** >> **[Basic Settings]** >> **[Keyboard Settings]** to enter the function key **[Soft function key]** to set settings interface, key function key types of memory, a subtype of BLF/NEW CALL, BLF/BXFER, BLF/AXFER, BLF/CONF, BLF/DTMF, the values to be subscription number, and set up corresponding SIP lines.



Picture 63 - Phone configuration BLF function key

Table 8 - BLF Function key subtype parameter list

Subtype	Standby is described	Calling is described
BLF/NEW CALL	Pressing the BLF key while standby to dial the subscriber number.	When you press this BLF key while talking to another user, you create a new call along with the subscribed number.
BLF/BXFER	Pressing the BLF key while standby to dial the subscriber number.	When you press this BLF key while talking to another user, you blind transfer the call to the subscribed number.
BLF/AXFER	Pressing the BLF key while standby to dial the subscriber number.	When you press this BLF key while talking to another user, you attendance transfer the call to the subscribed number.
BLF/Conference	Pressing the BLF key while standby to dial the subscriber number.	When you press this BLF key while talking to another user, you invite the subscriber number to join the meeting.
BLF/DTMF	Pressing the BLF key while standby to dial the subscriber number.	When the BLF key is pressed while talking to another user, the phone automatically sends the DTMF corresponding to the BLF key number.

10.1.2 Use the BLF Function

The BLF, also known as a "busy light field," notifies the user of the status of the subscribed object and is used by the server to pick up the call. BLF helps you monitor the