



TWS A20

使用说明书

包装内容




充电盒 * 1 耳机 * 2副




数据线 * 1 说明书 * 1

产品概览



耳机触控区 耳机触控区

左耳机 右耳机



电量显示 充电盒指示灯

左耳机 右耳机

注意事项

- 首次使用，请务必将耳机放入充电盒内，关闭充电盒盖5秒进行激活。
- 日常使用，建议不要频繁开合充电盒盖。
- 日常使用，建议先开启蓝牙耳机，再取出耳机。

首次使用

- 首次使用时，耳机放入充电盒中，关上充电盒盖5秒后打开充电盒盖。主副耳机进入自动配对，进入与手机蓝牙配对状态。
- 打开手机（或蓝牙设备）的蓝牙开关并搜索蓝牙设备。在设备列表中找出标有“A20”点并点击连接（图1），连接成功即可使用（图2）。
- 再次使用蓝牙耳机，打开充电盒盖子自动配对，并自动连接最后一次连接的手机（或蓝牙设备）。

关机

- 耳机放入充电盒盖会自动关机。
- 新开发耳机的蓝牙连接，5分钟后蓝牙将会自动关机。

恢复出厂设置

长按当前按钮
1. 打开手机蓝牙列表删除“A20”。
2. 耳机在充电盒内，打开充电盒盖子5秒后将耳机盖盖好，耳机盒发出提示音。
3. 手机蓝牙搜索“A20”，点击开始连接，连接成功即可使用。

正确佩戴耳机

为防止漏音和听感效果，耳机上标注“R”为右耳耳机，“L”为左耳耳机。

查看充电盒当前电量

1. 电量75%以上，蓝灯常亮。
2. 电量50%以上，蓝灯常亮。
3. 电量25%以上，红灯常亮。
4. 电量25%以下，红灯闪烁。

激活语音助手

用户可在耳机上调整好音量，但下次使用时音量却变了？通过耳机调节音量，对某些手机可能无法实现。下次使用时会恢复为按照手机音量键或耳机默认音量进行播放。遇到这种情况，建议使用手机来调节音量，在下次使用时就会保持最后调节的音量大小。

警告

请勿自行拆卸耳机及充电盒，否则保修立即失效。
耳机具有一定制防水能力，但不适用于游泳，也不可接触热水。

TWS A20

Package Contents

Product overview

Cautions

- For the first time use, be sure to put the headset into the charging box, close the charging chamber cover for 5 seconds to activate.
- For daily use, it is recommended not to open and close the charging chamber cover frequently.
- For daily use, it is recommended to turn on the Bluetooth of mobile phone first, and then take out the headset.

First time using

- When the headset is used for the first time, put it into the charging box, close the cover of the charging box for 5 seconds, open the cover of the charging box, and the main and auxiliary headphones will enter the automatic pairing mode, and enter the pairing state with the Bluetooth of the mobile phone.
- Turn on the Bluetooth switch of the mobile phone (or Bluetooth device) and search for Bluetooth devices, Find "A20" in the list of Bluetooth devices and click to start connecting (Figure 1). If the connection is successful, you can use it (Figure 2).
- Use the Bluetooth headset again, open the charging box cover, pair automatically, and connect the last connected mobile phone (or Bluetooth device) automatically.

Power off

- Put the earphone into the charging box and shut it off automatically.
- Disconnect the Bluetooth connection of the headset, and the headset will turn off automatically after 5 minutes.

RESET

- Open the Bluetooth list and delete "A20".
- The earphone is in the charging chamber. Open the charging chamber cover and click to start connecting (Figure 1). If the power is more than 25%, the red light is always on.
- Use the Bluetooth headset again, open the charging box cover, pair automatically, and connect the last connected mobile phone (or Bluetooth device) automatically.

Charging instructions

- Low power in charging chamber, red light flashes. Switch to the next song: double click the music (Figure 8) right ear touch area.
- When the charging bin is fully charged, the indicator light will glow out after it is on.

View the current power of charging chamber

Open the cover of charging chamber and identify the current power of charging chamber according to the indicator light of charging chamber

- The power is more than 75%, and the blue light is always on.
- The power is more than 50%, and the red and blue lights are always on.
- The power is more than 25%, and the red light is always on.
- When the power is less than 25%, the red light flashes.

Headset control

Play / pause Music: click (Figure 7) on the headset touch area

Switch to the next song: double click the music (Figure 8) right ear touch area

Switch to the previous song: double click the left ear touch area in music

Answer a call: click the headset touch area when calling

Hang up: click the headset touch area when calling

Refuse to answer a call: press the headset touch area for a long time

Adjust the volume: when playing music or answering the phone, long press the left ear touch area to decrease the volume, long press the right ear touch area to increase the volume.

Activate voice assistant

After the headset is connected to the mobile phone, the user can normally start the voice assistant by 3 clicks on the left or right headset touch area, and then exit after 3 clicks.

Product Spec

Bluetooth version: 5.1
Support protocol: A2DP / AVRCP / HFP / HSP
Frequency range: 2402MHz ~ 2480MHz
Transmission distance: >10m
Earphone talk time (excluding charging box): about 4 hours
Earphone play time (excluding charging box): about 4 hours
Earphone standby time (including charging box): about 12 hours
Headphone playback time (including charging box): about 12 hours
Charging time: about 1 hour
Charging time of mobile phone: about 1.5 hours
Compatible system: all Bluetooth devices and mobile phones
Earphone battery capacity: 3.7V/30mAh
Battery capacity of charging chamber: 3.7V/300mAh

Warning

Do not disassemble the earphones or charging compartment by yourself, otherwise the warranty will be invalidated immediately

The earphones are waterproof to a certain extent, but they are not suitable for swimming and should not be exposed to hot water

FAQ

Why is the sound intermittent?

Bluetooth headphones are connected wirelessly, which are susceptible to electromagnetic radiation interference or signal barriers in the environment. You can try another location to try again. If this situation is continuous, please contact us.

Why can't I play songs after earphone reset?

After the earphone reset, it needs to be paired with the phone again. Please delete all "A20" in the connected phones in the Bluetooth menu of the phone, and then search for pairing again, it will be connected normally.

Why the volume on the earphone has been adjusted , but it is still changed when next time use?

Adjusting the volume through the earphones may not be synchronized for some mobile phones. It will be restored to play according to the phone volume or the default earphone volume when next time use. In this case, it is recommended to adjust the volume on mobile phone, but the volume will be maintained as the last adjusted volume when next time you use it.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.