

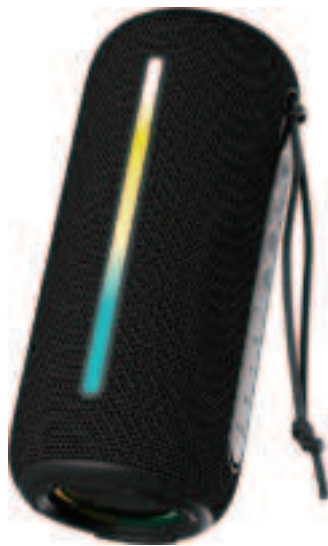
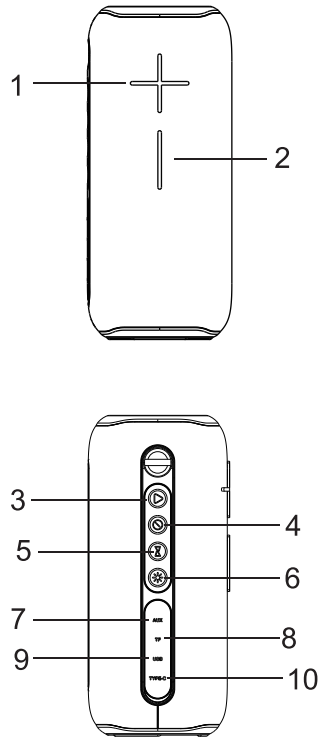
SPEAKER M20S Pro说明书

成品尺寸：122.5x70mm

材质工艺：128g双铜，单张双面四色印刷，风琴折

[illegible]

正面

sanag SPEAKER -M20S Pro Portable Bluetooth Speaker  OPERATING GUIDE	Technical Specifications: Bluetooth version: 5.0 Transmission distance: 10 meters Output power:10W*2 Frequency effect: 80Hz-15Khz Frequency effect: 66mm 4Ω 10W*2 Input power: 5V 1A Maximum current consumption: 1A Battery type: 18650 lithium ion battery 3000mAh Audio signal input interface: standard Φ3.5mm headphone jack (stereo) Features: 1. Wireless connection 2. Memory function, breakpoint resuming 3. Support U disk / Tf card / AUX playback mode 4. Built-in lithium ion battery 5. Support MP3 6. Using high-fidelity speakers, the sound is more natural and delicate 7. Level 6 waterproof 8. 1+1 device serial connection function 9. Support radio function	Wireless speaker - M20S Pro  M20S Pro button indication section view	Button instruction: 1. Button + Click: volume up Long press: next song 2. Buttons - Click: volume down Long press: previous song 3. Pause/Play key Click: Play/Pause Long press: Exit/Reconnect to the Bluetooth connection Double-click in Bluetooth mode to call back; single-click: answer/hang up In case of incoming call, long press for 2 seconds to reject the call In radio mode single click: mute long press: close the station 4. Switch button Press and hold the switch for about 3 seconds/time 5. Tandem keys Click: Concatenation/Exit Concatenation Long press: switch mode 6. Light button Single click: switch the light mode Long press: turn the light on/off 7. AUX jack Standard Φ3.5mm headphone jack 8. TF jack When inserting a TF card, the default is TF card playback mode 9.USB jack When inserting a U disk, the default is USB playback mode 10. Type-C jack 1. The charging cable interface, when plugged into the Type-C charging cable, the default is to charge the device 2. When using the radio function, you need to insert the	Wireless speaker - M20S Pro charging cable as a radio antenna, and the radio function can be used normally. Directions for use: 1. Wireless pairing 1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model. 1.2. Turn on the wireless device,search forM20SPro,and connect and pair,connect After success,start playing music experience. 2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player. 3. Voice prompt 3.1. There is a voice prompt when turning on/off; 3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3 Shut down after detecting 3.4V low power prompt 3 times; 4. Mode switching 4.1. It enters the wireless mode by default when it is turned on. The sequence of mode switching is as follows: Wireless mode-TF card mode-USB mode-AUX mode. 4.2. Mode: Post-insertion priority. 5. Play indicator Wireless search status: white light flashes quickly, about 0.5 seconds/time; Wireless pairing status: white light is always on Playing status: the white light flashes slowly about 1 second/time; 6. Charging indicator Charging red light is always on, full off 7. Volume Turn on the default speaker volume at 70%. 8. Charging and using:	This machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, about four hours Charging is complete. The play time of each battery will vary depending on the volume used rather different. 9. If there is no working state, it will automatically shut down after 15 minutes. Troubleshooting: 1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use. 2. Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device. 3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port 4. There is no response to the keys or the function is disordered: try again after shutting down. 5. When the machine is abnormal, you can use a slender round bar to reset the reset button by pressing the reset button in the hole on the rear of the AUX. FCC Statement: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.This device may not cause harmful interference, and 2.This device must accept any interference received,	including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
---	---	---	--	---	---	---

反面