

Lift off the bracket stand, loose the 4 screws with a small screwdriver, insert 2 pcs AAA batteries according to the polarity indicated. Replace the cover and tighten the 4 screws. SETTING UP THE WIRELESS THERMOMETER:

- For the first installation, always insert batteries to the home unit and then the remote sensor Your new RF Thermometer is build with random security code technology, the home unit will learn the random code of the first remote sensor and log in as channel 1.
  Channel 2 and Channel 3 will be registered in the same way.
- The registered channels will be erased when the batteries of the remote sensor or the home unit are removed.
- When replacing batteries for the remote sensor, remember to clear the corresponding channel of the home unit in this way: Select the respective channel y pressing the CHANNEL button, hold the CHANNEL button 3 seconds to clear the registration.
- When replacing batteries for the home receiver, please remove batteries of all remote sensors and re-install the batteries to the sensors according to the desired channel sequence.
- Press the Tx button on the back of remote sensor to verify the RF reception, hold the button 3 sec to reset.
- To take temperature of water or extreme temperatures, use the plug-in wire probe. The temperature sensor inside the transmitter will be cut off automatically.

## C/ F SELECTION

At normal mode, press " C/ F " button to select C and F.

## **SPECIFICATIONS**

Range of temperature measurement:

Remote sensor: -10 C to 70 C (14F to 158F), lowest -50 C (-58F) using extension cord

Transmission : 30M (100 ft.) open area, RF434 MHz

Accuracy : +-1.5 C for temp

Resolution : 0.1 degree for temperature

Power source : AAA battery x 2 pcs

Battery life : 6 months for remote sensor (alkaline batteries recommended)

## Remark:

Modifications not authorized by the manufacturer may void users authority to operate this device.