




Contents

1. Product view	3
2. Home	5
3. Note	6
4. Reader	28
5. APPS	46
6. Setting	52
7. Product specification	67
8. Accessories	67
9. Safety guide	67
10. Warranty terms	69
11. Q & A	72
12. Statement	75

1. Product view

Front


Power

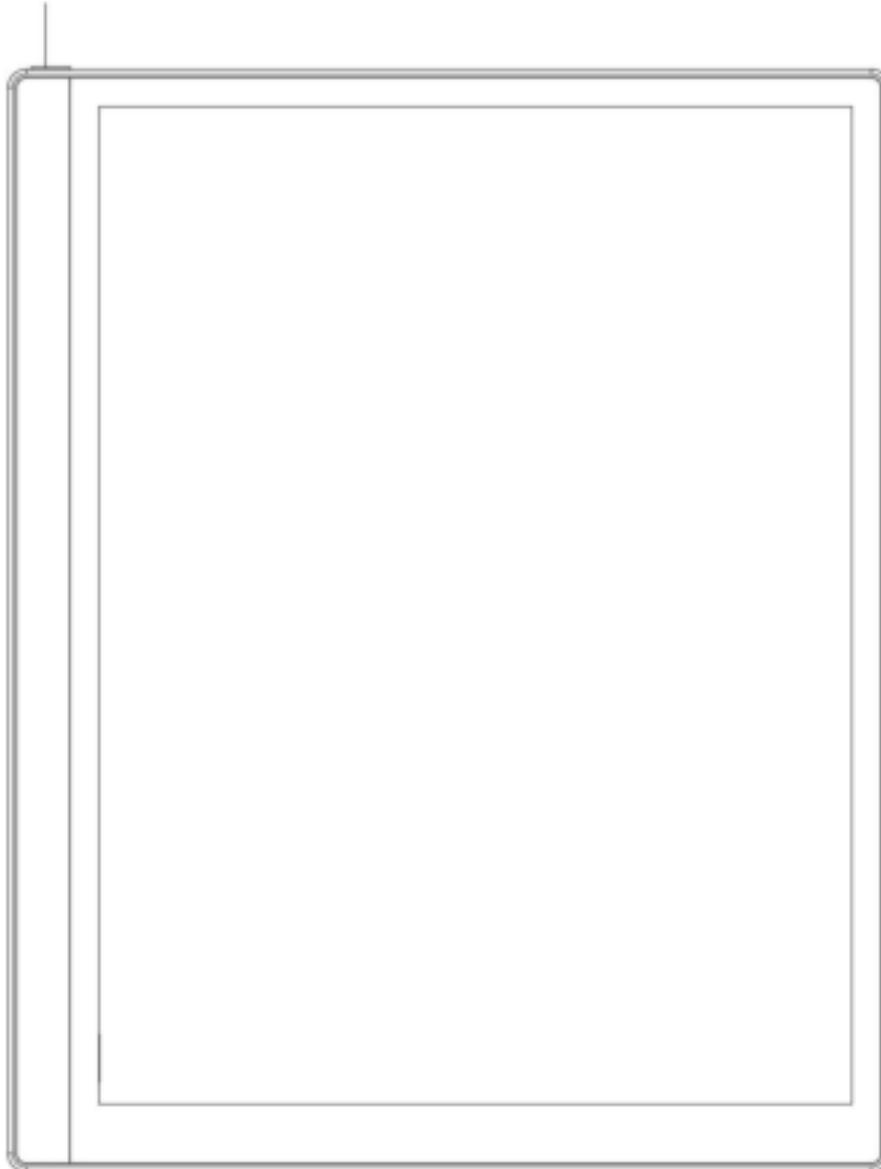

Back



TOP

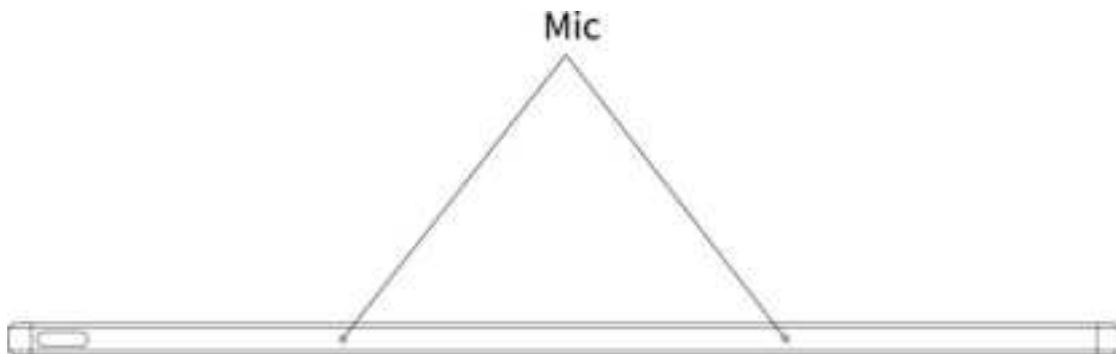

Bottom



Function introduction of the buttons

Power/Sleep- Wake up	<ul style="list-style-type: none"> ● Press the power button to turn on the device ● Press and hold the power button for 2-3 seconds, and select "Power off" in the menu to turn off the device ● Press the power button and then release it immediately, the device goes to the sleep state ● Press the power button and then release it immediately to wake up from sleep mode
Type-C	<ul style="list-style-type: none"> ● Connect Kloud Note to PC via Type-C data cable to transfer data, or charge the device

2. Home

In the lower left corner of home displays the current basic status of the device, including: Mobile / WiFi connection, Bluetooth status and battery display.

Above the device status is the function bar, including: Note, Reader, APPs, Account info.

3. Note

Click  on the main interface to display the note list and note management menu.

Search


Search for notes, keywords support note name, note content, note creation time.


New folder

After creating a new folder, you can move notes to the folder.

Display mode

Click to switch the display mode of notes: grid or list.

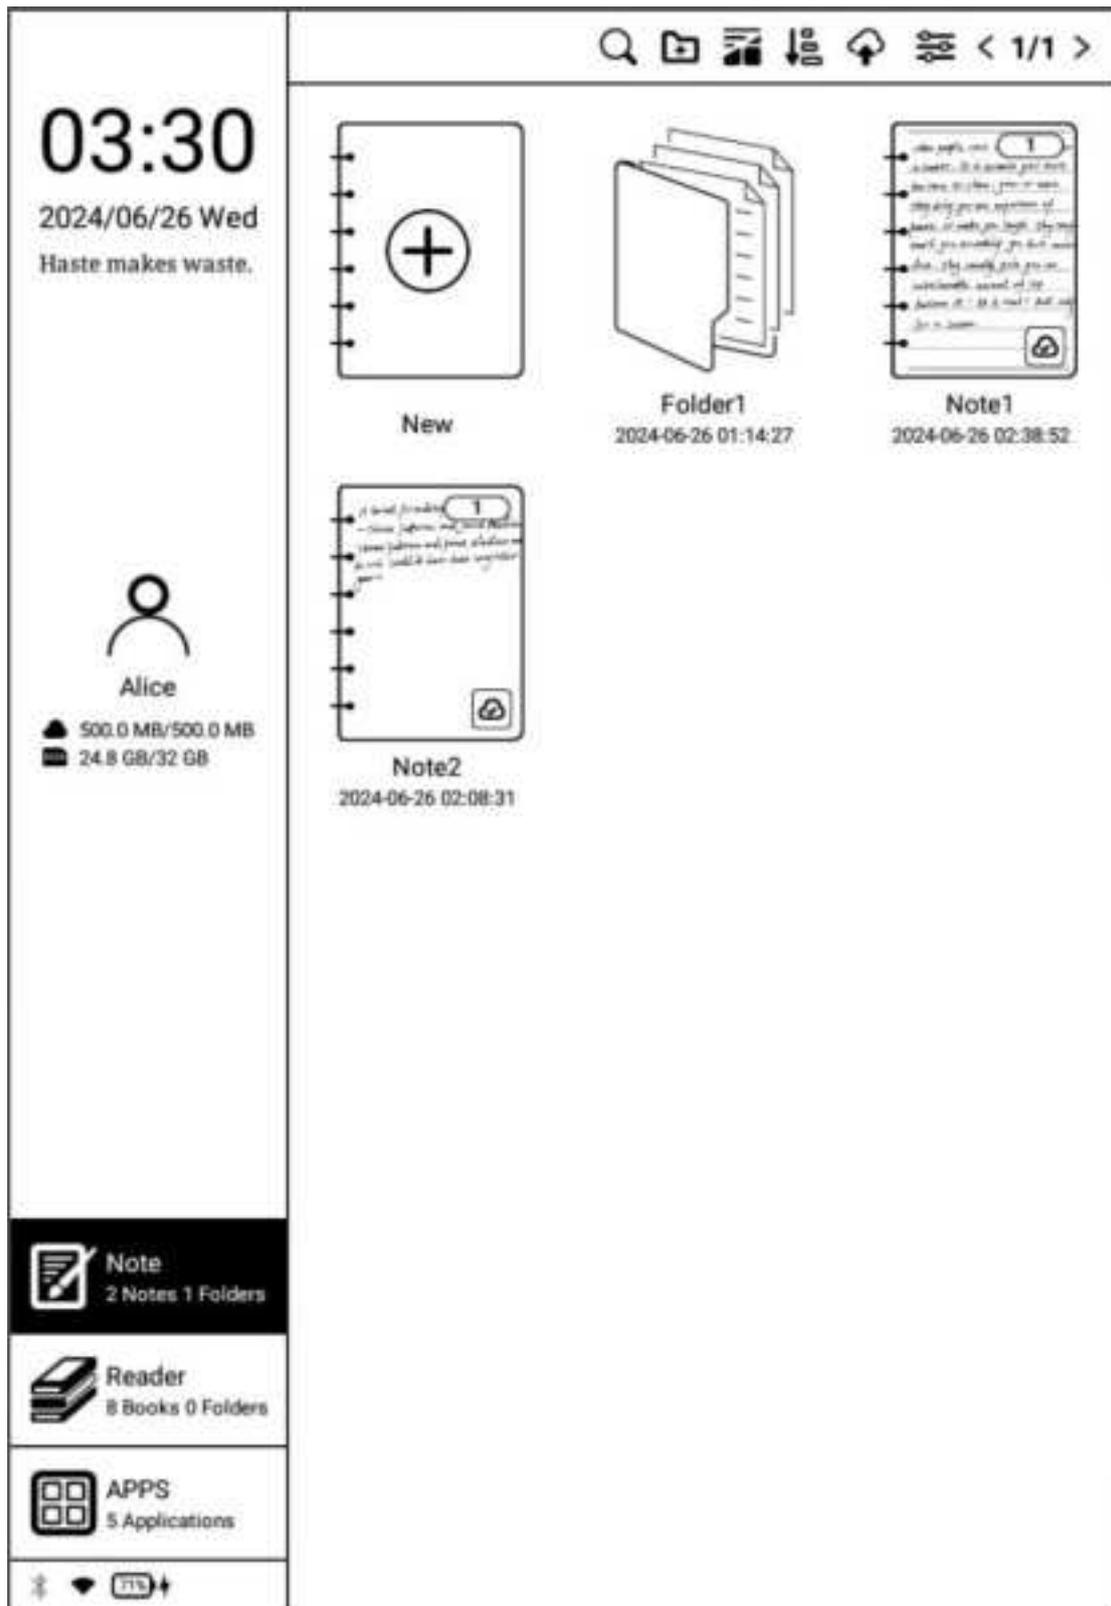

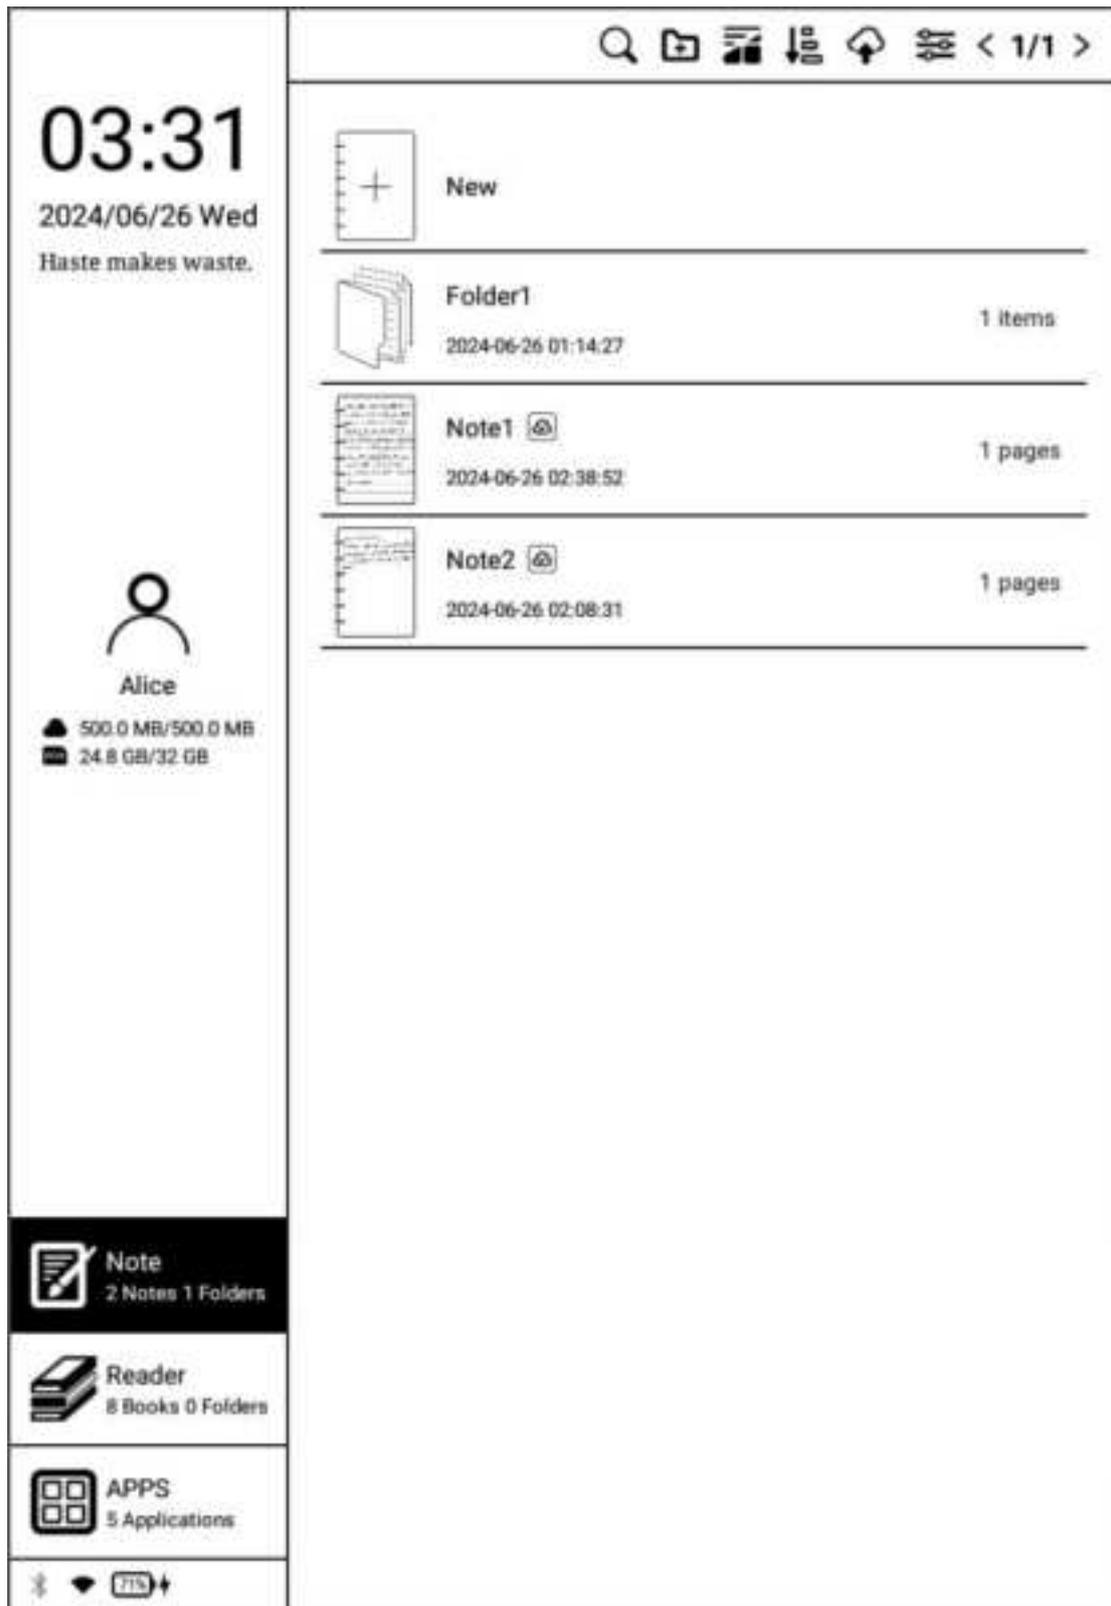

Sort

It can be sorted in ascending/descending order of note creation

time, note modification time, and note name.


Sort	
<input checked="" type="checkbox"/> Sort by date edited	<input checked="" type="checkbox"/> Descend
<input type="checkbox"/> Sort by date created	<input type="checkbox"/> Ascend
<input type="checkbox"/> Sort by name	
Cancel	OK

Cloud-sync


(Login account is required) You can synchronize notes to cloud storage. Each time you log in to your account, it will automatically synchronize notes from cloud storage to the device.

Setting


You can set whether to display the template page when creating new notes, and enable/disable automatic synchronization of notes to Cloud Note cloud server, export to third-party cloud disk account management, backup and recovery, etc.

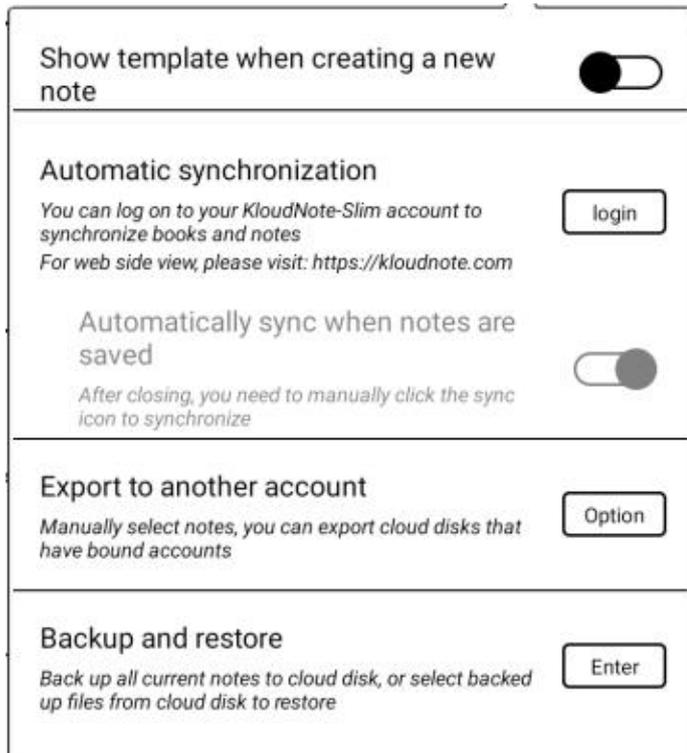

Long press the note, you can choose to rename,export, share, lock/unlock,move, or delete the note.

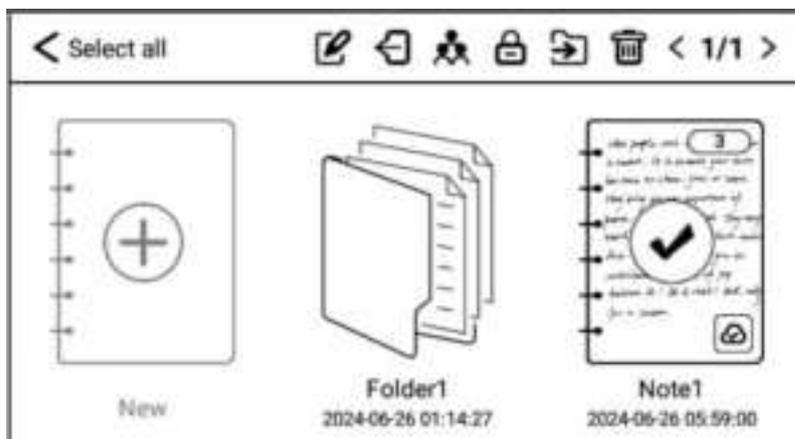


Long press the folder, you can choose to rename, move, or delete the folder.

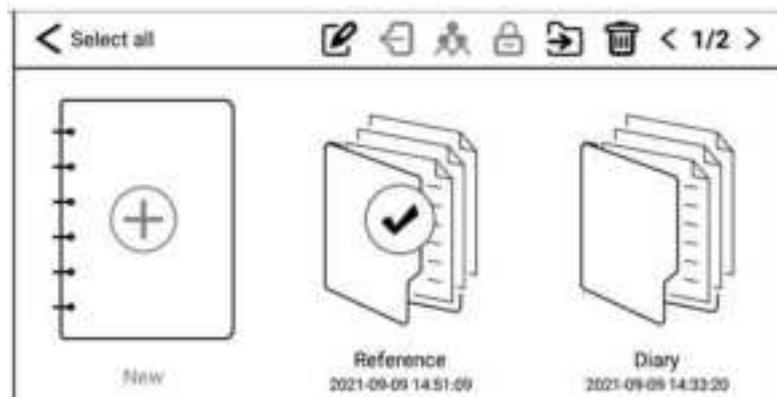


3.1 Handwriting

Click "New" to create a new blank note, and click on any note cover to enter the note handwriting page.

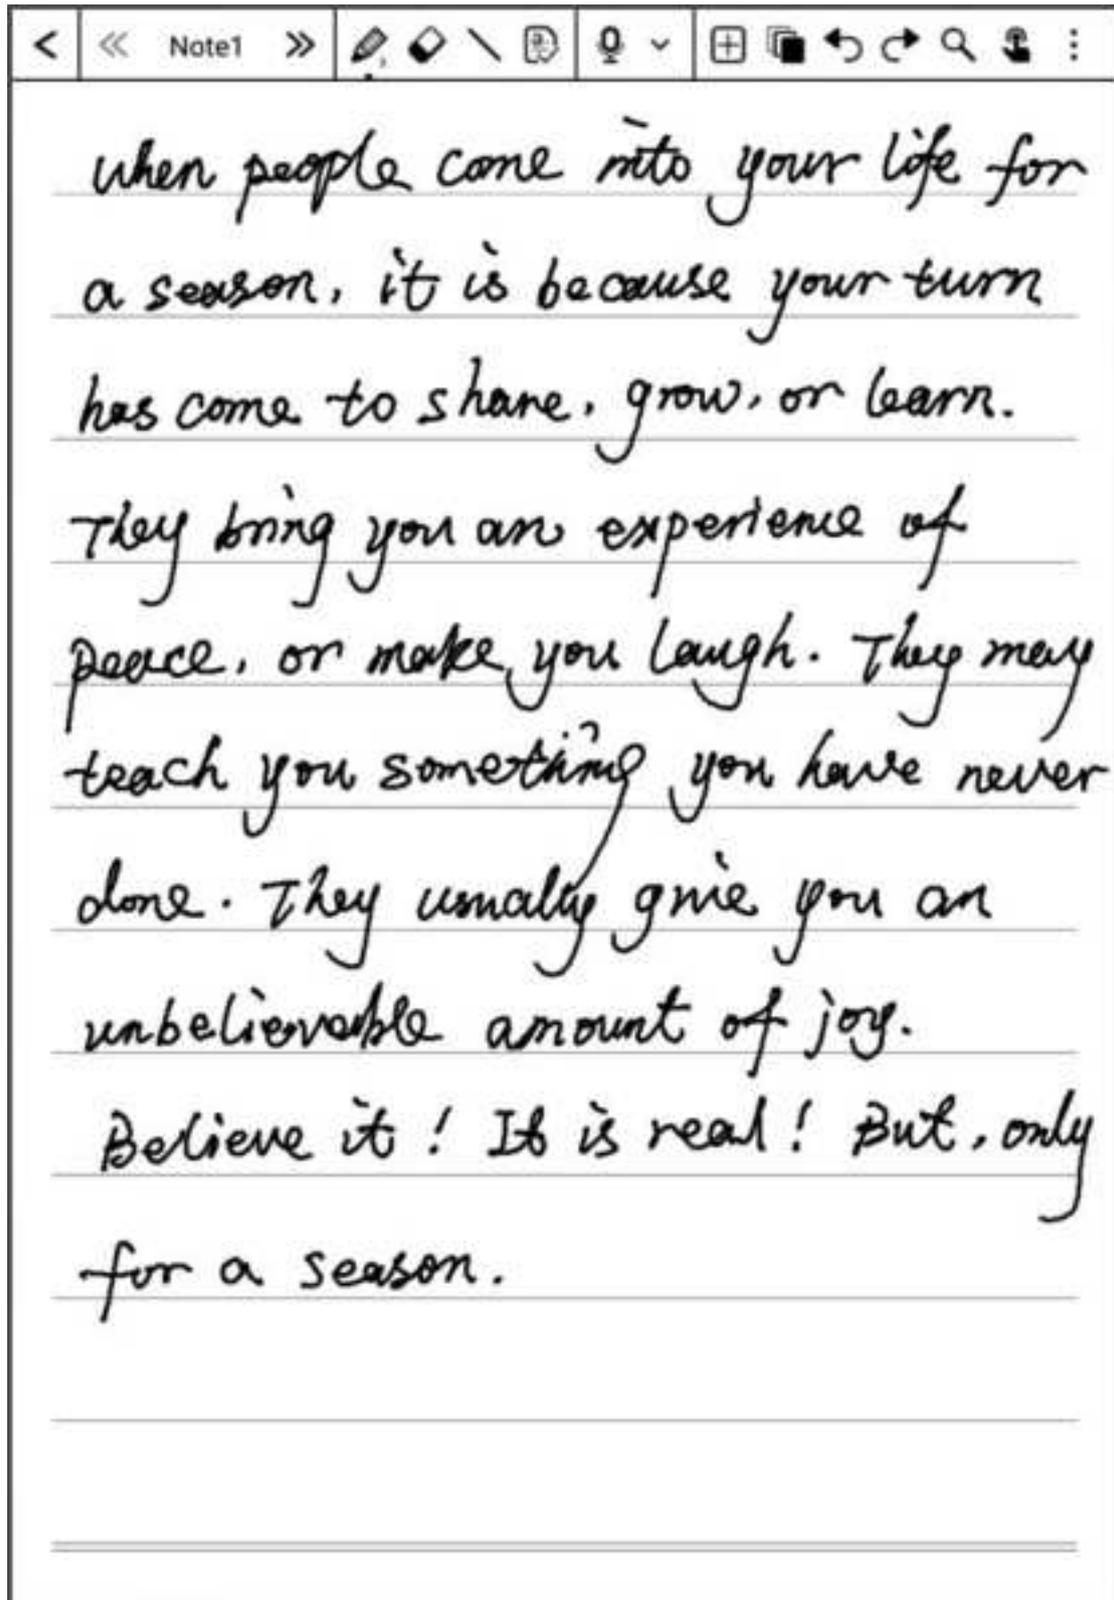

Contents

Click on the note name, the note directory and folder directory will appear. Simply click to quickly switch to different notes or folders.

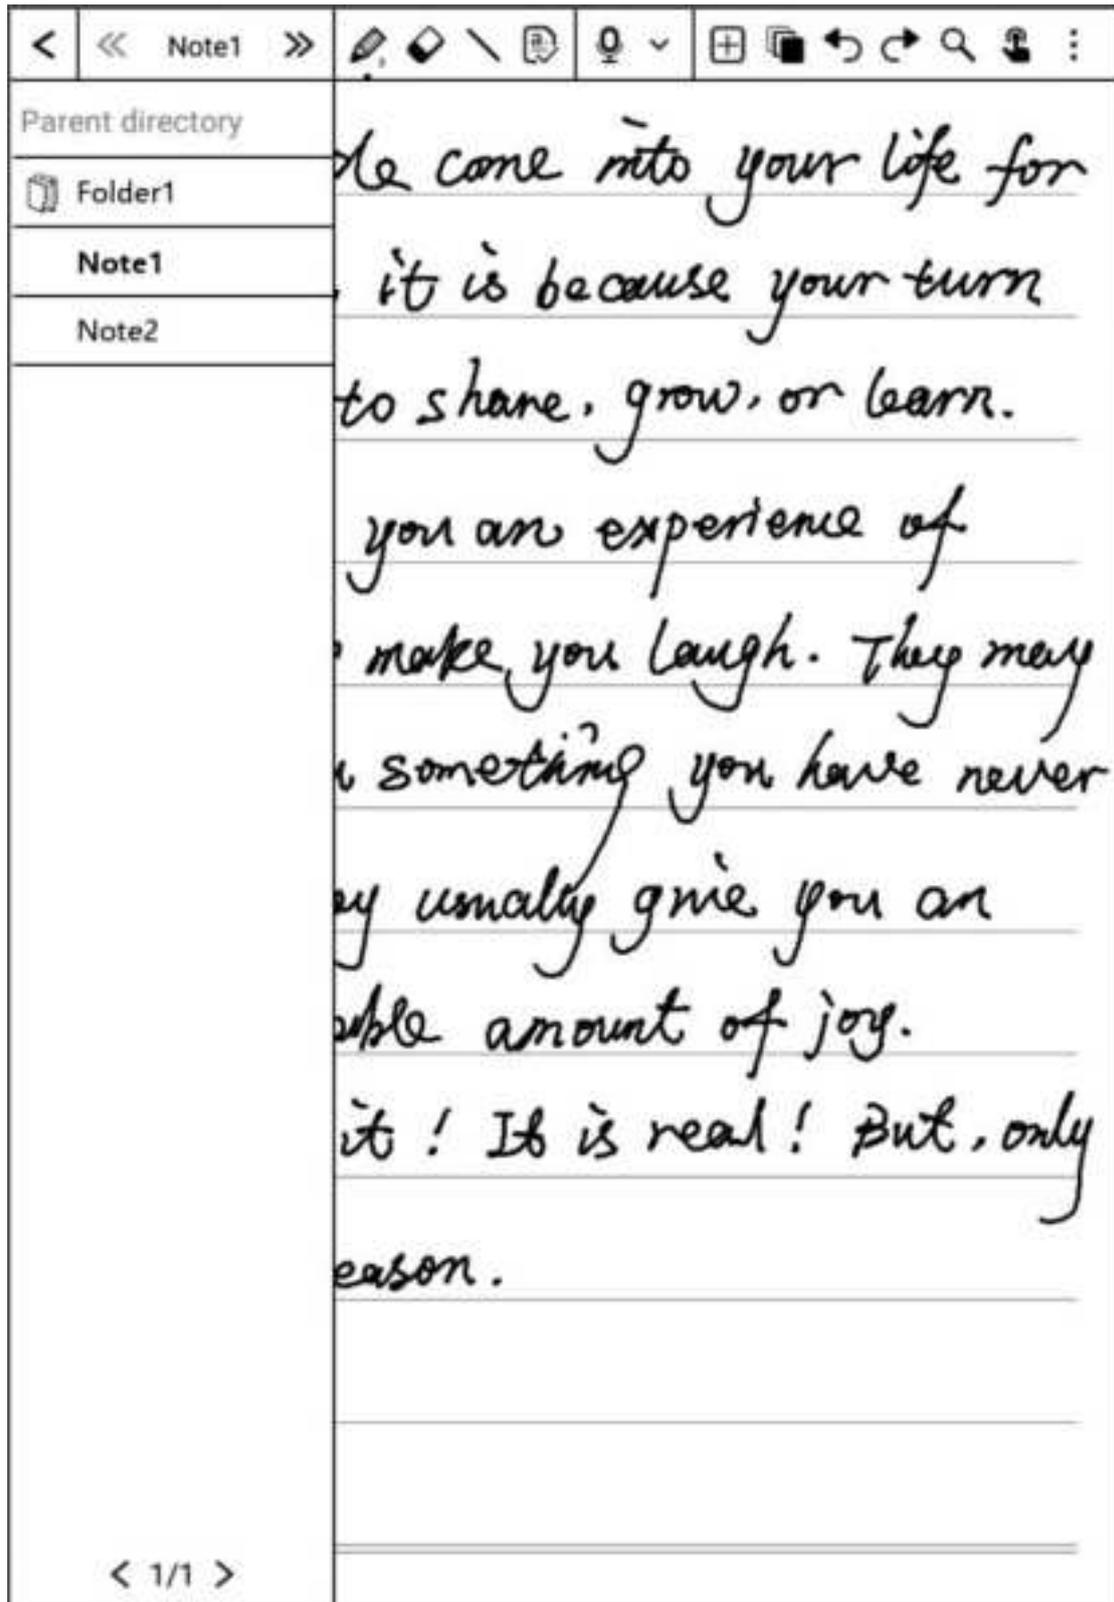


« » Switch notes

Switch notes before and after.

Pen

 witchable pen shape and brush size.



Eraser

You can choose to Free erase, Track erase, Zone erase, Erase all, and adjust the size of the erase area.



Geometry

Click to switch the geometry menu, including lines, triangles, circles, quadrilaterals, and line thickness.




AI word processing

It includes two functions: text recognition and speech recognition.

You need to connect to the network and log in to your account first.


OCR

Handwritten text on the note taking interface can be directly converted into printed form. If the recognition is not accurate, it can be corrected in the text box.

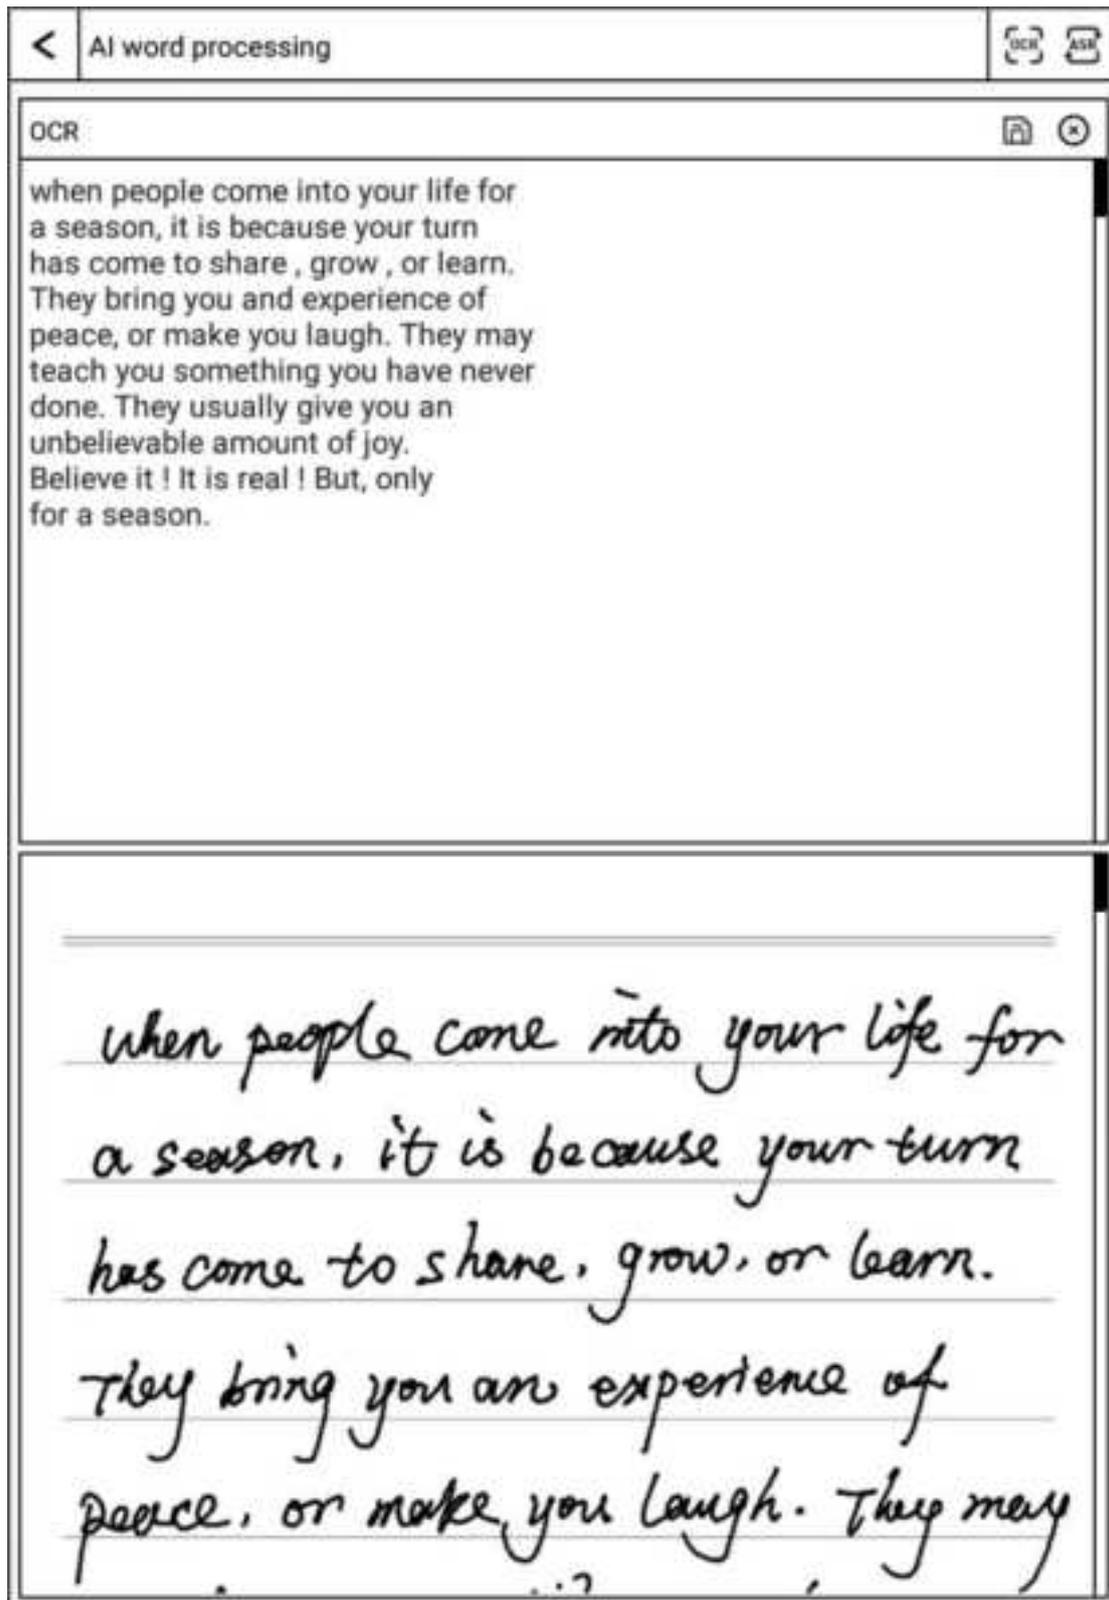


ASR

Clicking on the recording file in the list can convert it into text. If the recognition is not accurate, it can be corrected in the text box.

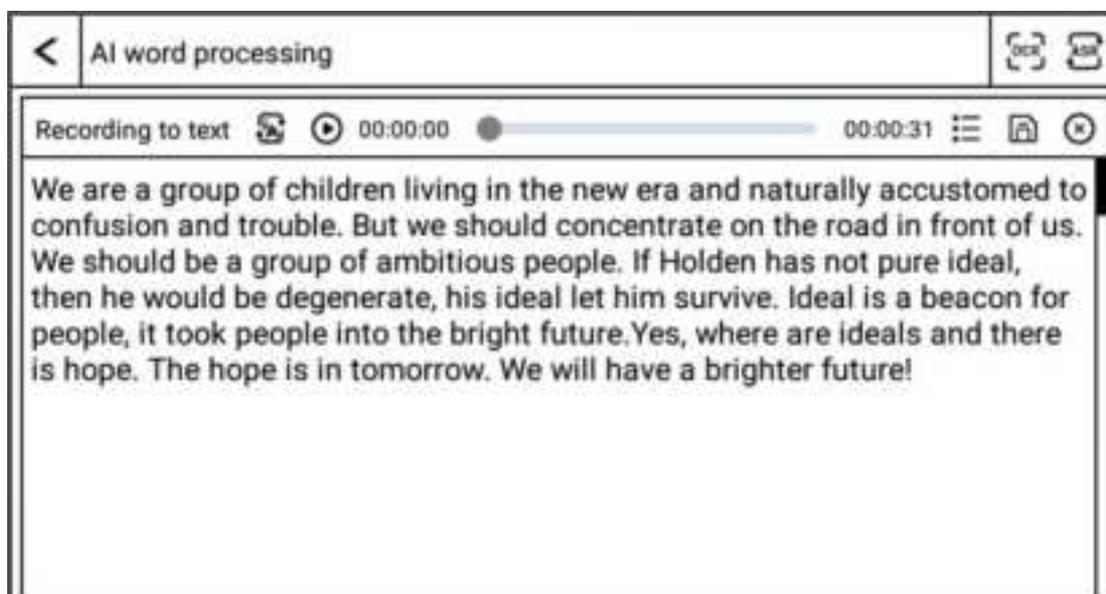


Recording

 Click the recording icon to start recording, click the icon again to stop recording.



Show/hide recording menu

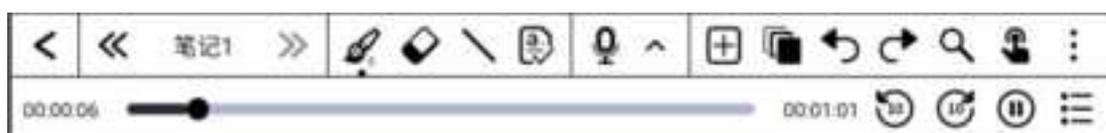

Recording list

Click this icon to display the recording list. Click on the recording on

the page to play it, and support renaming, sorting, deleting, selecting all, etc

Recordings 🔍 🗑️

	20240508034710-4 2024-05-08 03:47:10 00:00:04	 <input type="checkbox"/>
	20240506075804 2024-05-06 07:58:04 00:00:03	 <input type="checkbox"/>
	20240506075757 2024-05-06 07:57:57 00:00:03	 <input type="checkbox"/>
	20240506075744 2024-05-06 07:57:44 00:00:05	 <input type="checkbox"/>
	20240506075724 2024-05-06 07:57:24 00:00:06	 <input type="checkbox"/>

Total:5 < 1/1 >

Insert

You can insert images and adjust angles, or insert text and adjust text size.



Page preview

You can quickly preview the content of each page of the current note. Click on the three points in the bottom right corner of the card image on the left to bring up the menu: Add Page, Clear Page, Delete Page, Move Up, Move Down.



↶↷ Revoke/Redo

You can quickly revoke handwritten notes or restore revoked

handwritten notes.

Searching

Note content search, keywords support note name, note content, and note last update time.

Disable/Enable Touch

Disable/enable hand touch operation. After disabling hand touch, operations can only be performed with a pen.


More

Click to bring up the hidden menu of other functions.



Template

You can choose/switch between different manuscript papers.

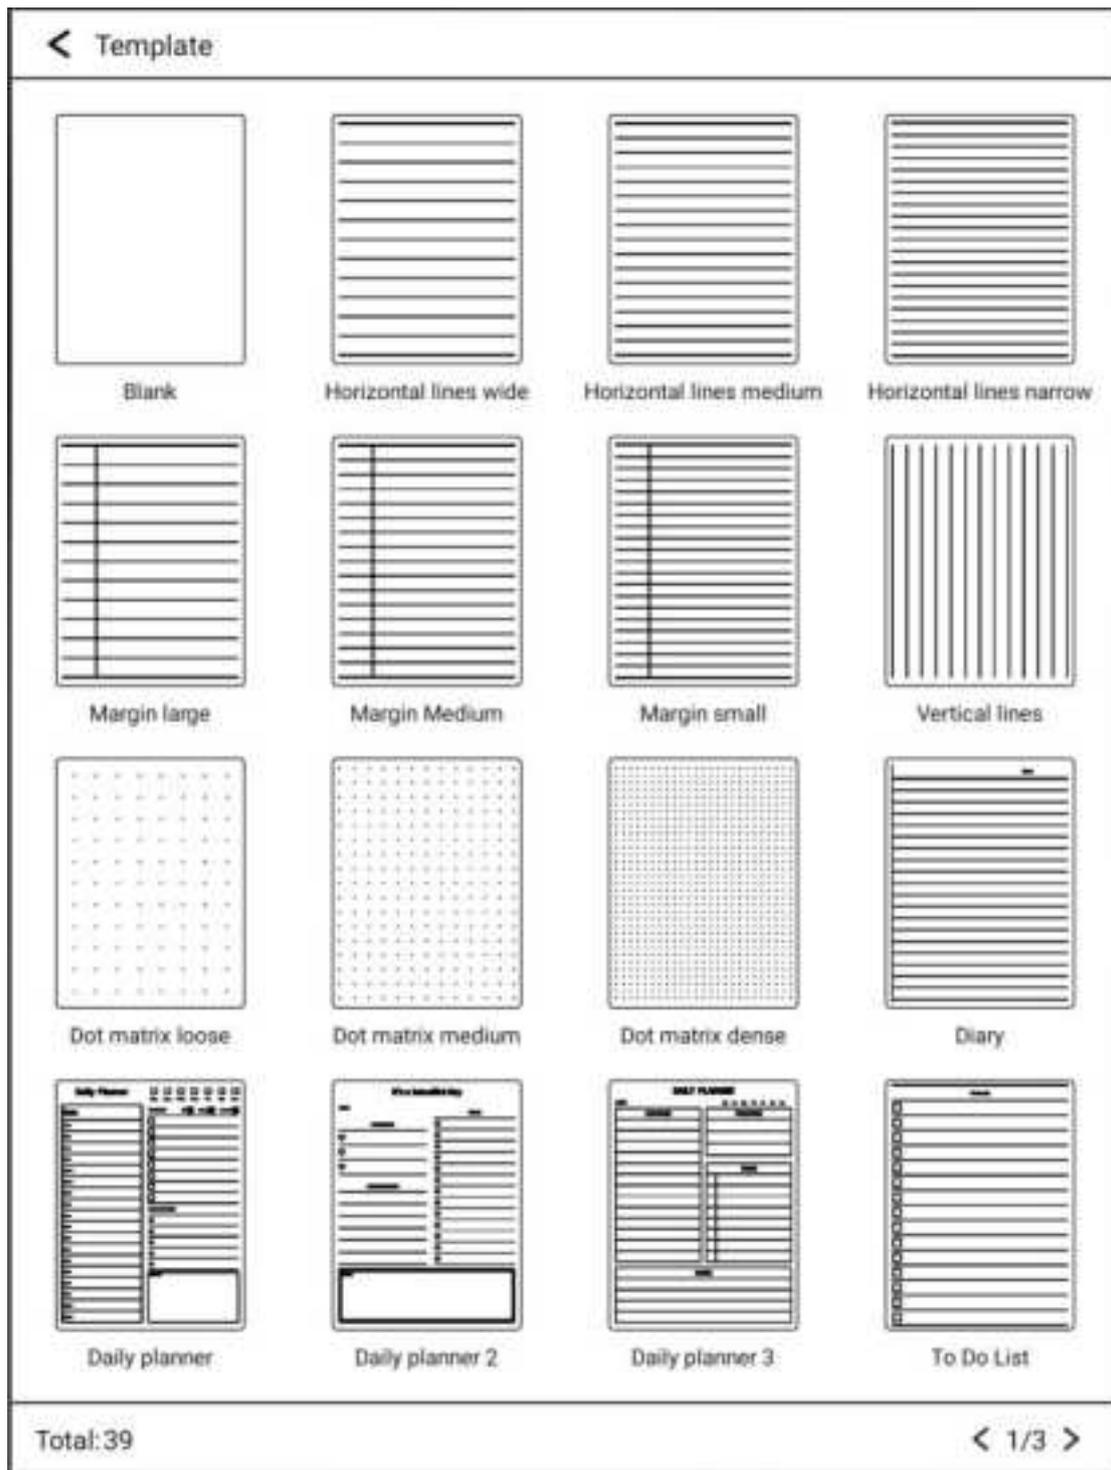

Cast

You can choose nearby devices that support Miracast (such as PC, TV, etc.) to share the screen of Cloud Note.



Notes can be shared via email or Bluetooth:

Share

Send current page in PNG
 Send all in PDF



E-mail


Bluetooth

Please note that files exceeding 20MB cannot be shared through email.




You can using scanning apps such as WeChat or QQ to scan QR codes allows users to share web pages with others and set their own expiration date. When the expiration date expires, the shared content will automatically become invalid.

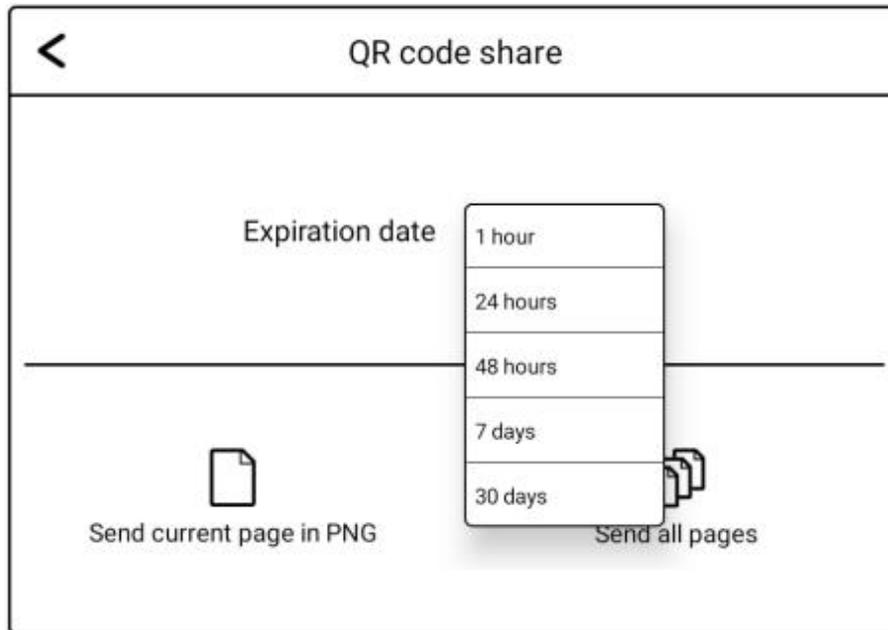


The functions of the QR code web page include:

Previous/Next page, Expand/collapse page preview, Display notes, OCR, Recording, Download, etc

☰ → Expand page preview

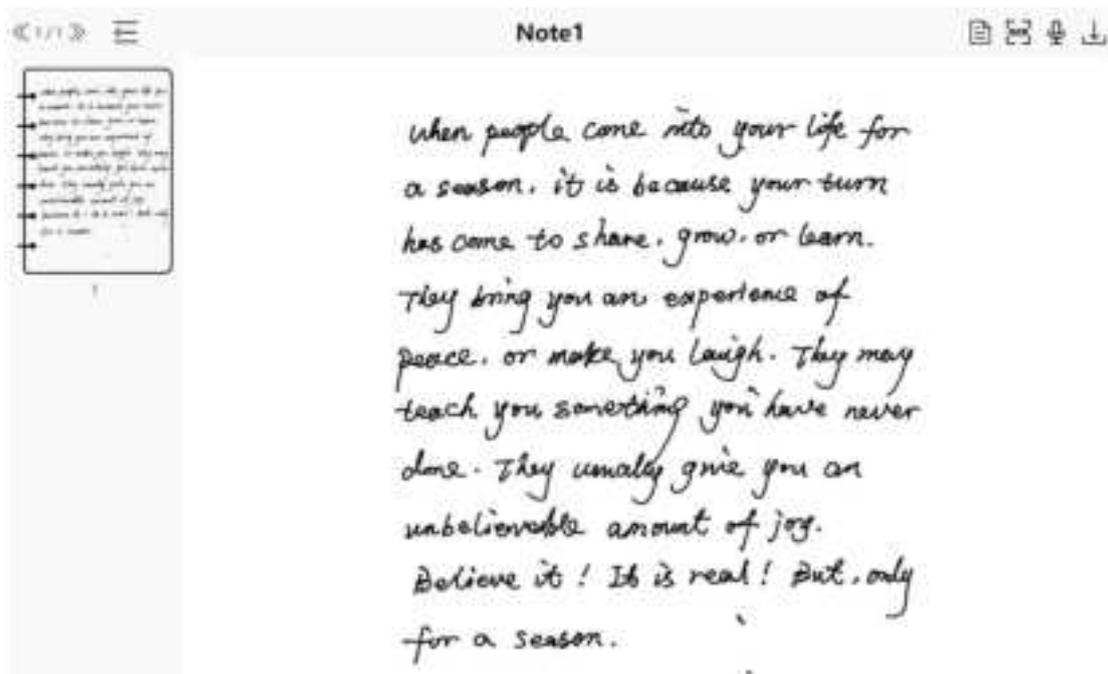

☰ Collapse page preview

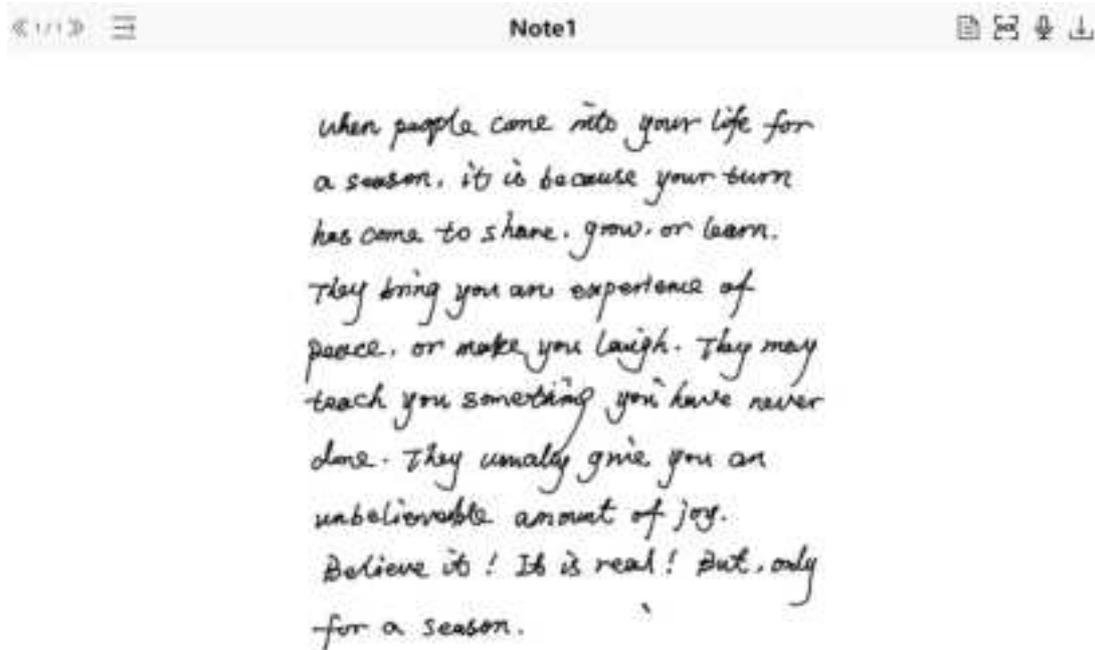

Show Note

Click this icon to switch back to the main interface from other menu pages

OCR

This menu only appears after text recognition has been performed on the device. Clicking on the OCR menu will display the effect of text recognition.



Recording

This menu is only displayed when there is a recording file on the device side. Clicking on the recording menu will display a list, if recording with an "A" icon indicating that ASR recognition has been performed on the recording file,click this recording file will display the effect of converting the recording to text on the interface.



Download

You can download all the current pages, including PNG images, audio files, and TXT documents.


 20240509074649-7	2024/5/9 16:04
 Note2_0.png	2024/5/9 16:04
 Note2_0_ocr.txt	2024/5/9 16:04

Export

Optional: Export current page as PNG, export all pages as PDF.


You can choose to export to a local or third-party cloud drive with bound accounts.

Note: If a third-party cloud disk account is not bound, it can only be exported to local storage.

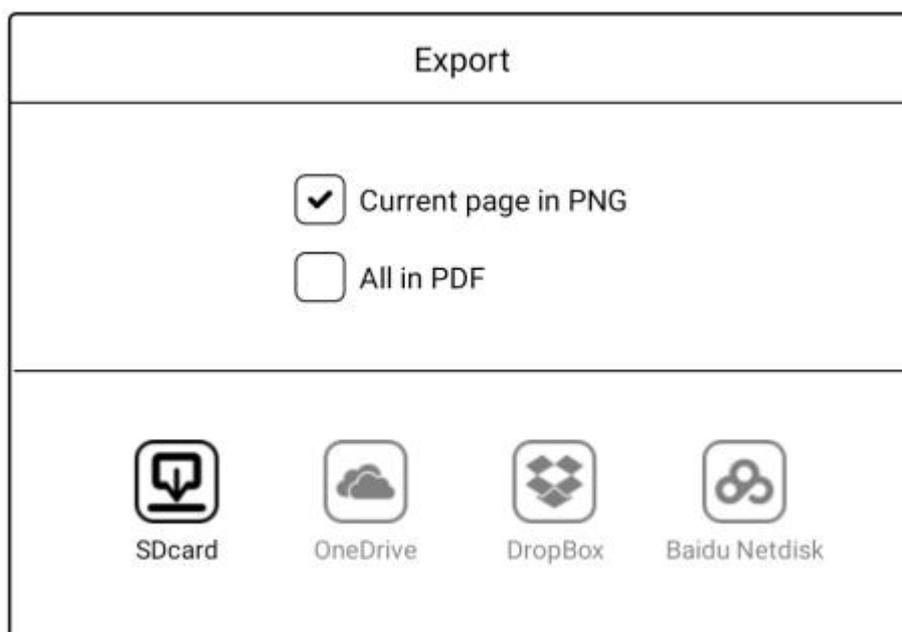

Setting

You can set the language of OCR and ASR, for example, by selecting OCR and setting the language to English, the handwriting also needs to be in English to recognize the printed English. ASR Similarly.

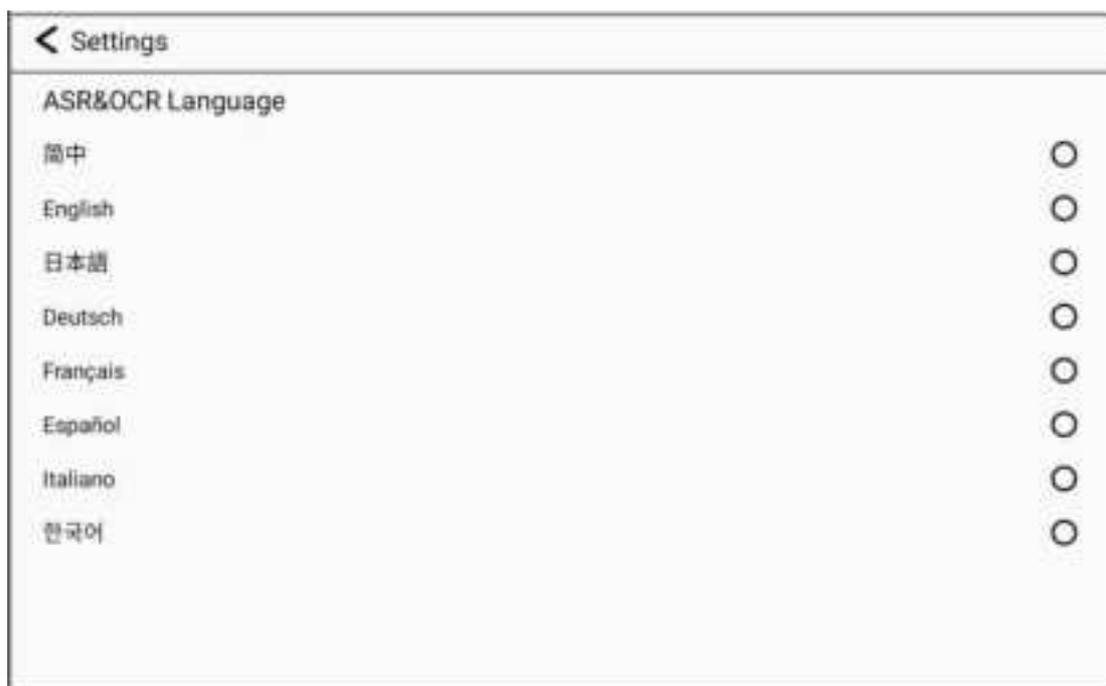

4. Reader

Click  on the main interface to display the book list and book management menu bar.

Search

Local search for books, with keywords supporting book title, author, annotations, and bookmarks marking the first two lines of content on the page.

Online search for books, with keywords supporting book titles and authors.


New bookshelf

After creating a new bookshelf, other book documents can be

moved to the bookshelf

 Display mode

Click to switch the display mode of books: grid or list.

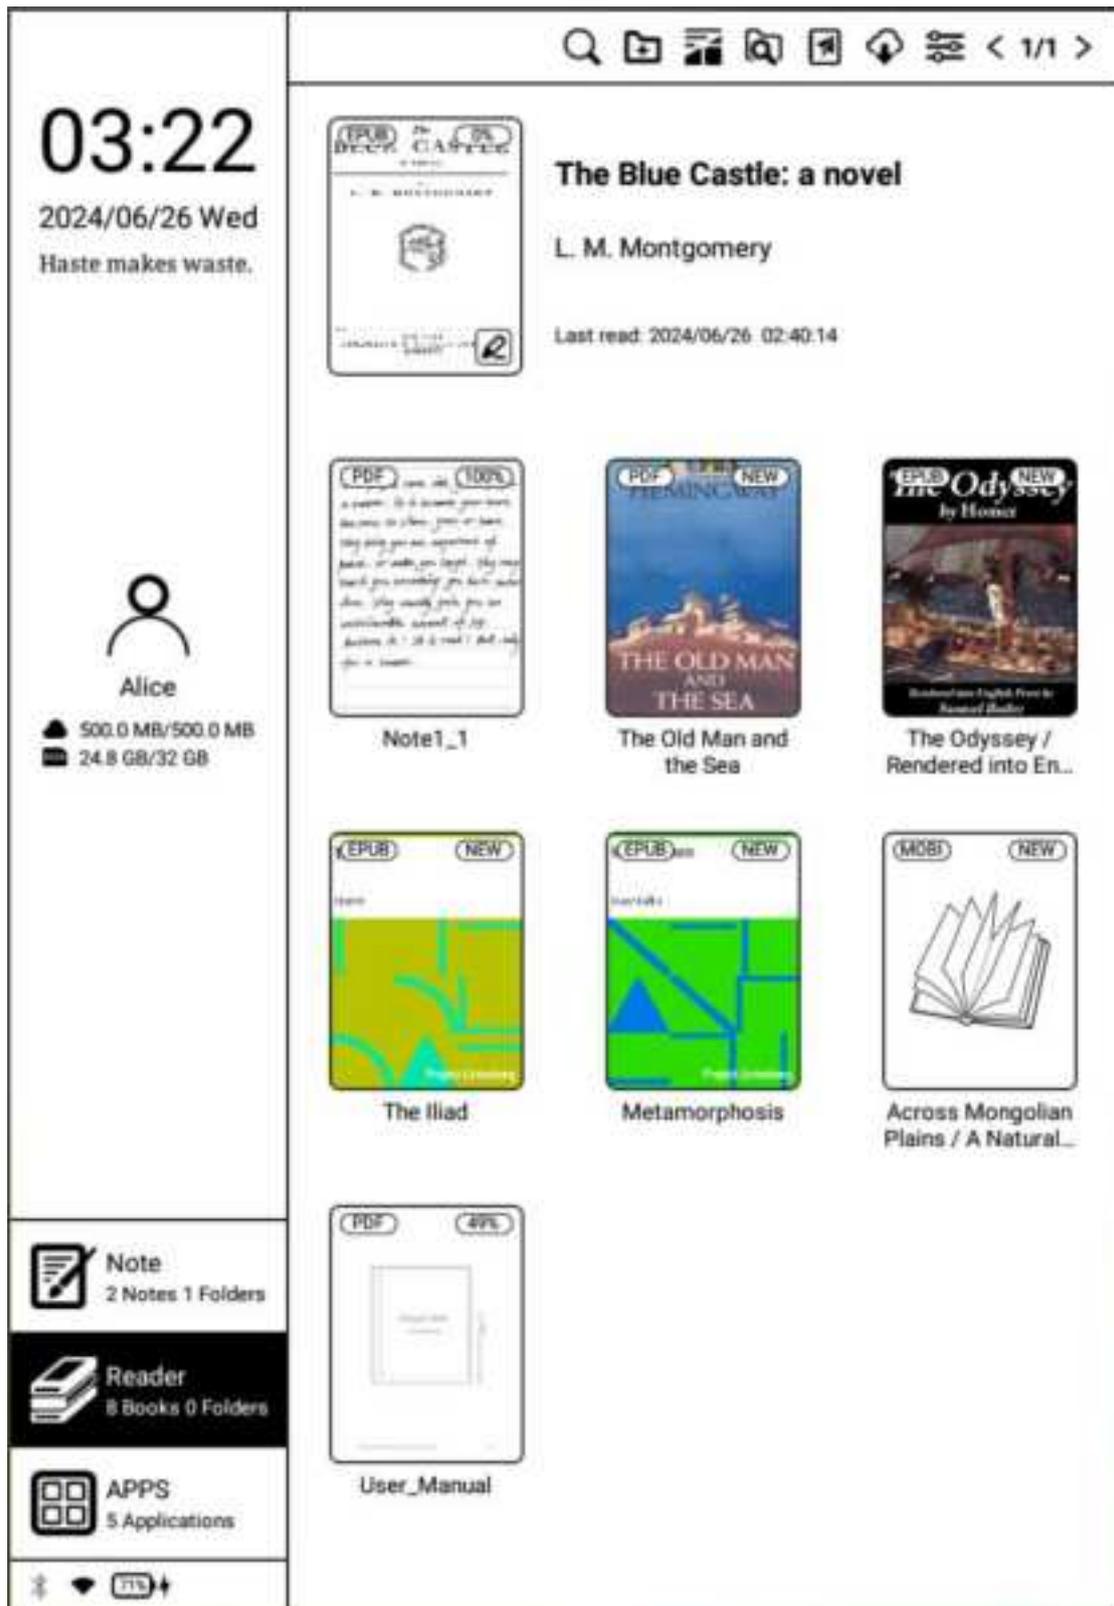



 Scan

Click it to scan all documents in the internal storage and display

them in the default bookshelf.

The supported formats are: PDF, TXT, EPUB, MOBI, RTF, FB2, DOC, HTML, etc.

WiFi Transfer

When the mobile phone or computer and Kloud Note are connected to the same local area network, you can transfer books and documents from the mobile phone or computer to Kloud Note via wifi, and they will be added to the default bookshelf after successful reception.



Cloud-sync

(Login account required) You can synchronize books and notes to cloud storage. Each time you log in to your account, it will automatically synchronize books and notes from cloud storage to the device.

Setting


You can set reader related settings, such as: Turn on/off kloudnote automatic synchronization function, binding third-party cloud disk account, backup and recovery management.



Long press the bookshelf, you can choose to rename, move or delete the bookshelf:




Long press the book, you can choose to lock/unlock, rename, move, delete or export the book:

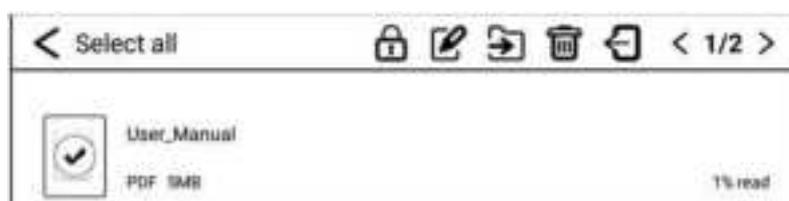

4.1 Shortcut menu for Reader

Click on the cover of any book to enter the reading interface.

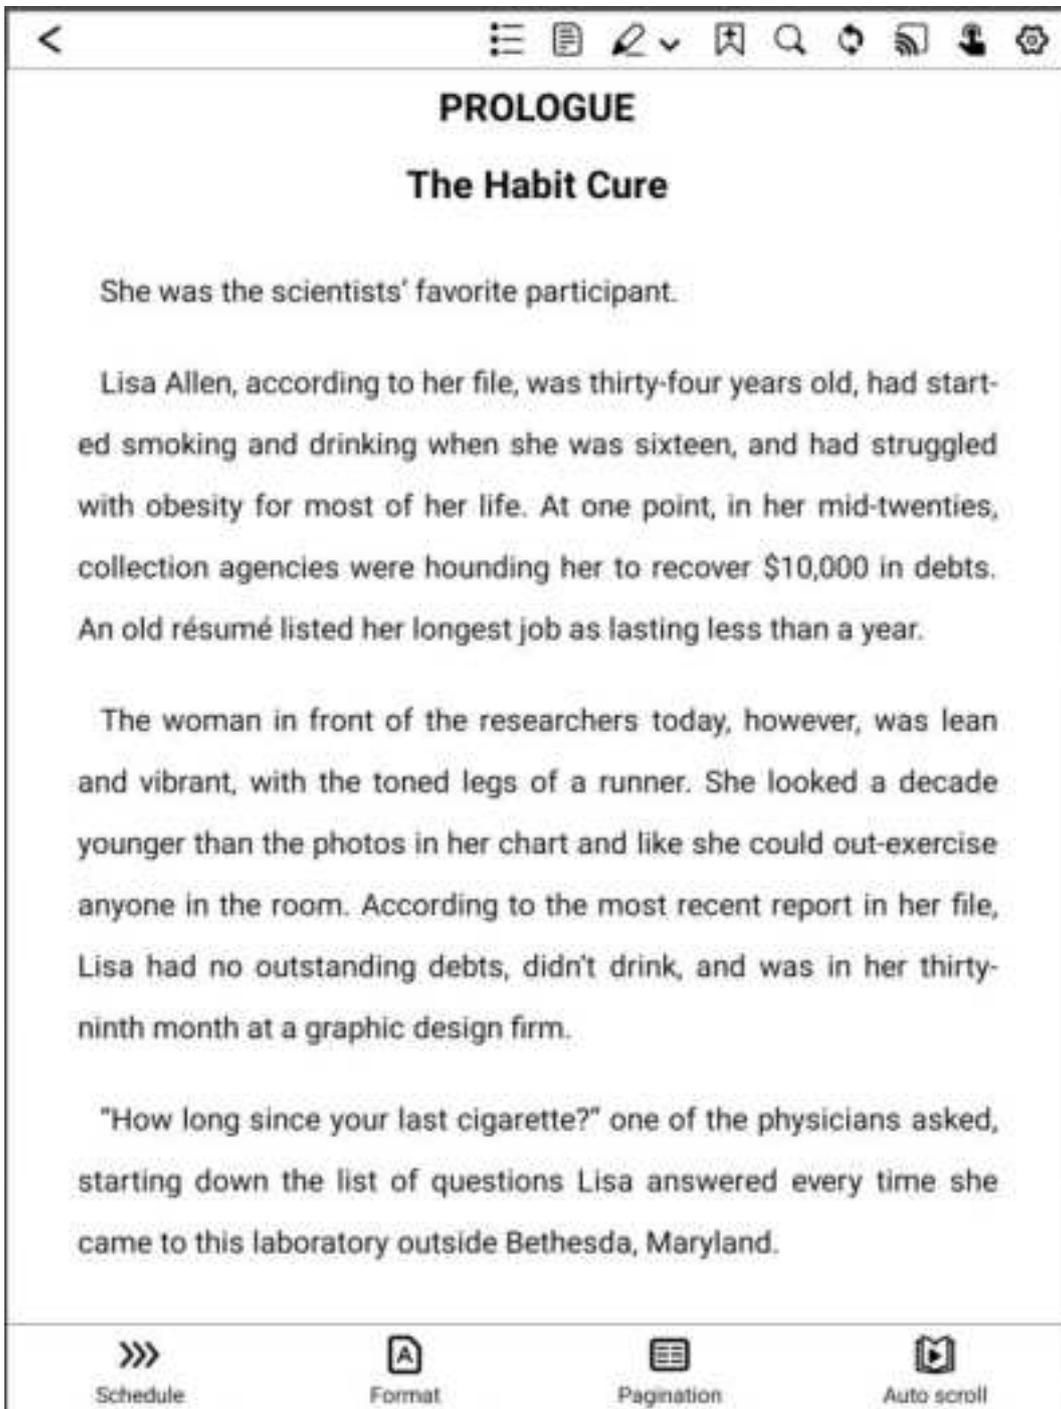

Tap the left (vertical) area of the screen to switch to the previous page.

Tap the right (vertical) area of the screen to switch to the next page.

Click the middle (vertical) area of the screen to bring up the menu bar.

Contents


You can quickly enter the directory interface, which allows you to switch between directory and bookmark pages.

Notes

All pages marked with notes can be displayed. The current page supports operations such as sharing, exporting, and deleting, and can also switch between note and bookmark pages.



Book pages with notes can be shared, supporting email, Bluetooth, and QR code sharing in three ways.

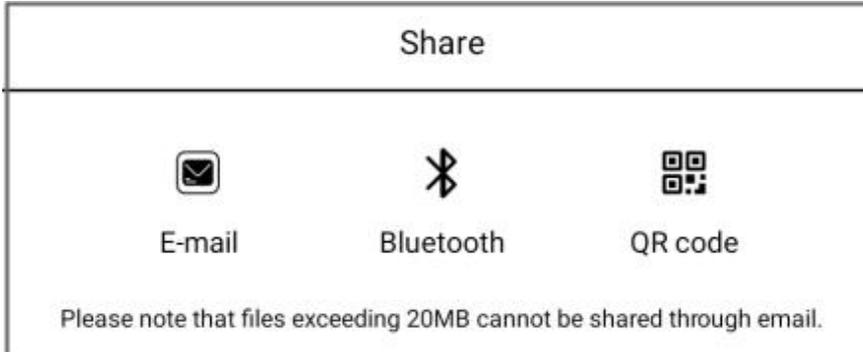

QR code share

You can using scanning apps such as WeChat or QQ to scan QR codes allows users to share web pages with others and set their own expiration date. When the expiration date expires, the shared content will automatically become invalid.



The functions of the QR code web page include:

Previous/Next page , Expand/collapse page preview, Display notes, Download,etc.

 Expand page preview



 Collapse page preview



 Show Notes

Clicking on this menu will display the recorded notes on the interface.

 Download

Click download to download the current page. After decompressing the file, you can see the PNG image.



 Export

You can share book pages with notes to your local and cloud storage.

 Delete

You can delete the entire page of notes written on the book page.

 Show/Hide Notes

Handwritten note taking function can be turned on/off. When turned on, the note menu and note content will be displayed, and functions such as pen type or eraser can be selected. When turned off, the note menu and note content will be hidden.

 Add/Delete Bookmark

Bookmarks can be added, and when a page has been bookmarked, it will be displayed as the delete bookmark icon. Click to delete the added bookmark record.

 Search

Supports searching within documents



Refresh

Refresh the current page completely.

Cast


Select nearby devices that support Miracast (such as PC, TV, etc.) to share the screen of Cloud Note.

 Disable/Enable Touch

Disable/enable hand touch operation. After disabling hand touch, operations can only be performed with a pen, and the right sidebar will display a page flipping icon, which can be clicked   with an electromagnetic pen to flip pages forward and backward

 Settings

You can set reading related properties here, such as: Show/hide chapter name, reading progress/time/power, global properties of format, export file storage address, etc.

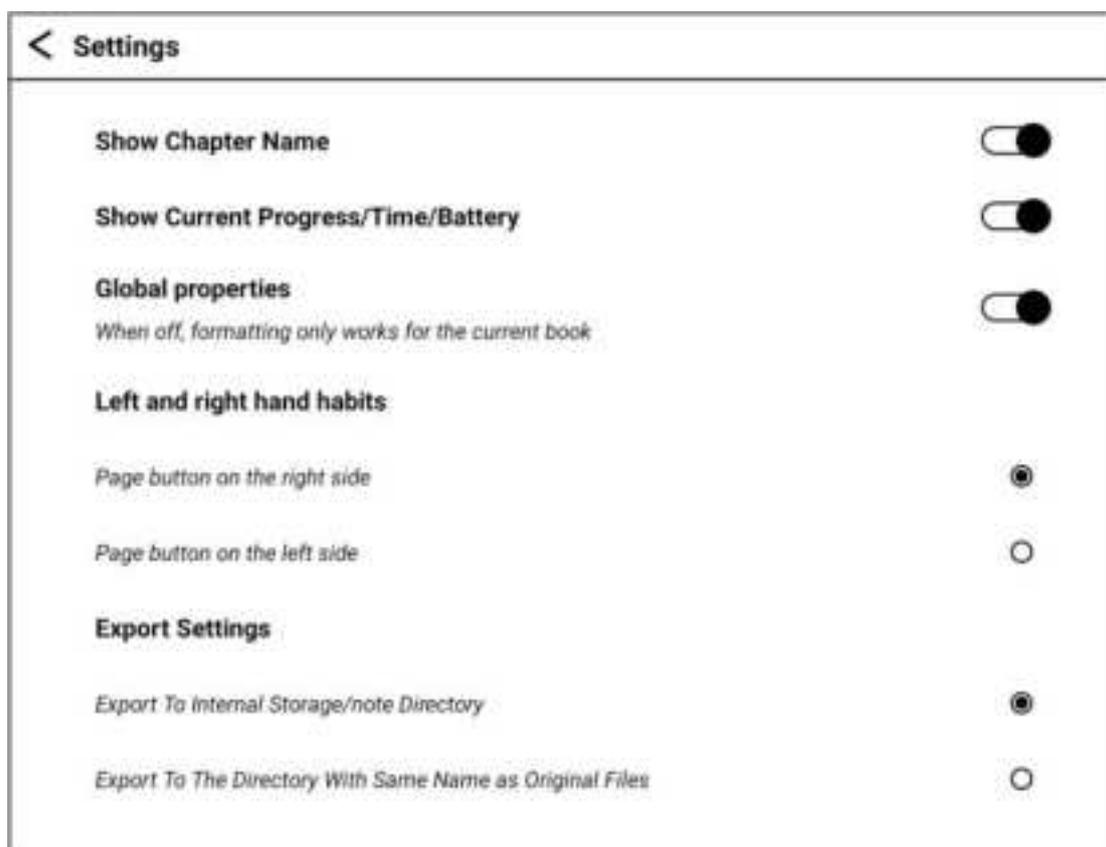

>>> Schedule

Click on the Schedule in the bottom left corner to view the current reading progress, quickly switch to the previous or next chapter, or drag the progress bar in the middle to quickly switch progress

Format

The page format adjustment menu can be called out, which can adjust the font size, line spacing, top/bottom spacing, left/right spacing.

Font Size	⊖	40	⊕
Line Spacing	⊖	18	⊕
Top/Bottom margin	⊖	56	⊕
Left/Right margin	⊖	78	⊕

Pagination

Click on pagination to switch from vertical reading mode to horizontal pagination display. Click  on the icon to switch back to vertical reading mode


Turn pages automatically

When you want to turn the page automatically at a constant speed, you can click this icon to turn it on. The page turning interval can be set freely.



5. APPS

Click  on the home page to view the application.

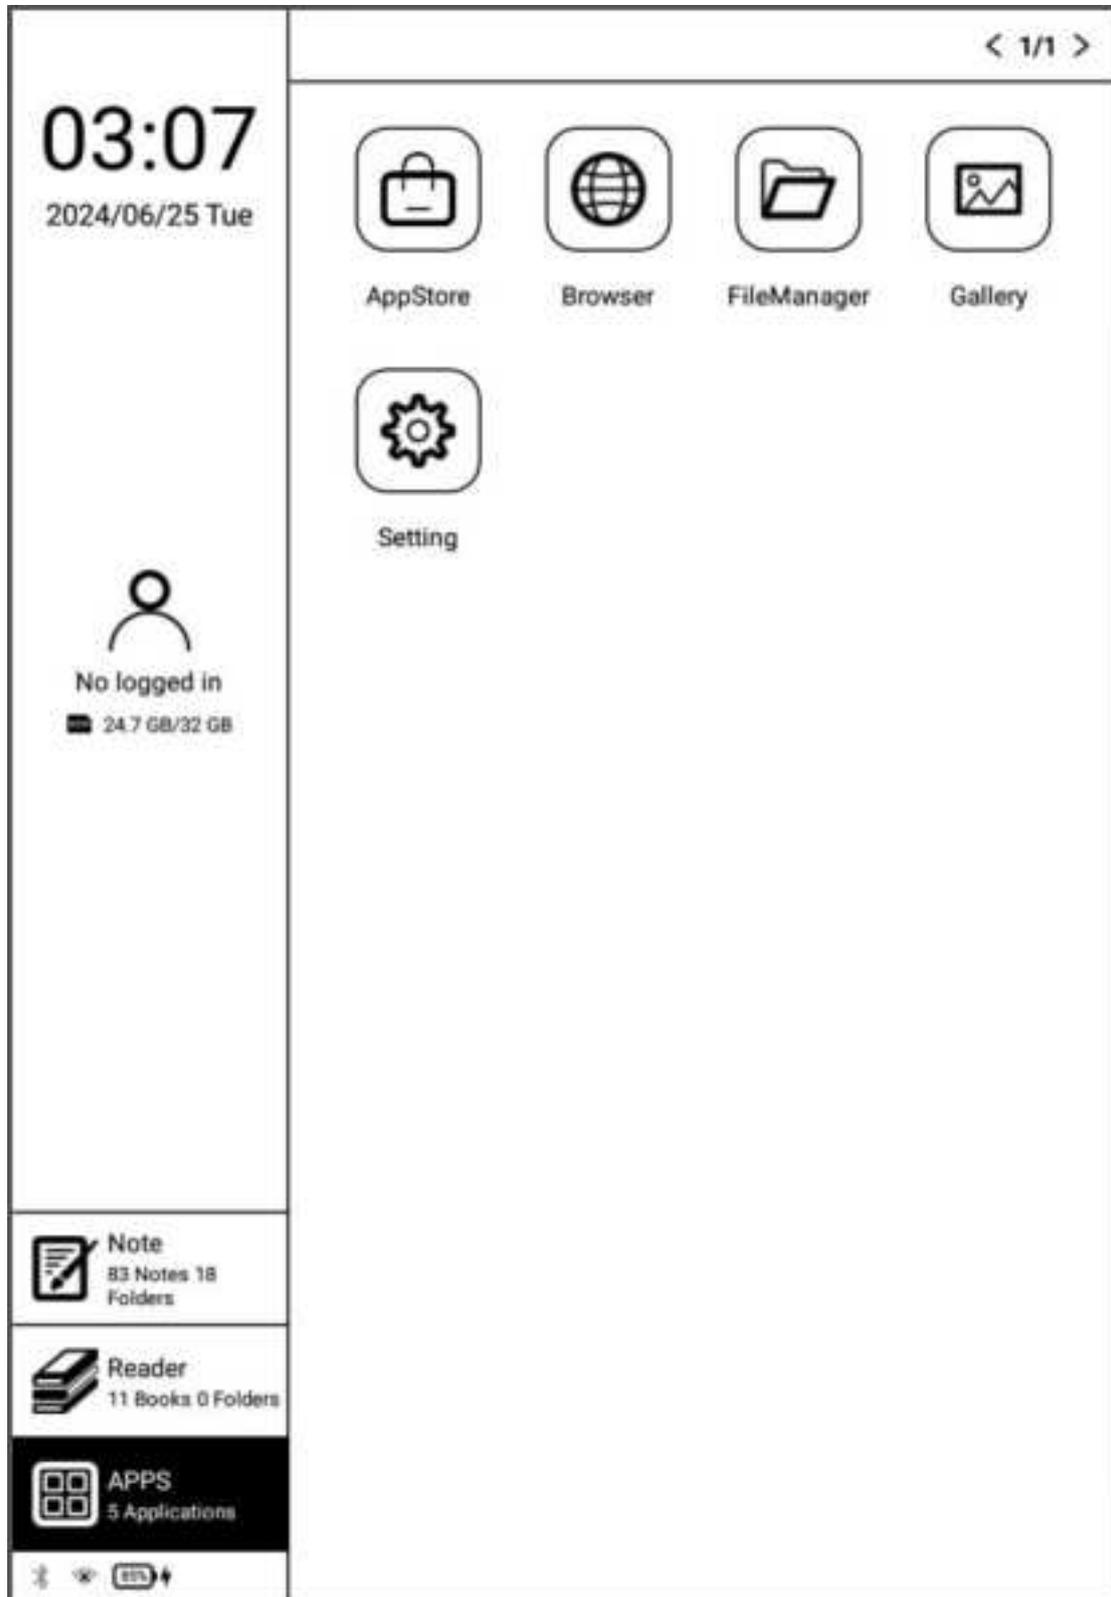


Long press app to view the details.



 Appstore

 You can download the required third-party apps here.

AppStore		
	Dear Translate 3.10.20 Youdao Translation is a translation software developed by NetEase company. Its biggest feature is that the trans...	62014367 <input type="button" value="INSTALL"/>
	Drive 2.21.081.03.40 谷歌网盘 开发测试	45973612 <input type="button" value="INSTALL"/>
	Kindle 8.41.0.100(1.3.240188.0) Kindle is designed by Amazon. Users can use Amazon Kindle to buy, download and read e-books, newspapers, ...	63635373 <input type="button" value="INSTALL"/>
	NetEase News 78.4 NetEase News is a premium application created by NetEase. It has become the No. 1 news client in China. It is ...	43813546 <input type="button" value="INSTALL"/>
	Reader 6.4.0.1 Xiaomi's professional online original literature reading brand, built-in massive latest and most popular online nov...	39582737 <input type="button" value="INSTALL"/>
	Spotify 8.6.0.830 Spotify is a genuine streaming music service platform.	35970478 <input type="button" value="OPEN"/>
	Toutiao 8.2.3 Toutiao is a data mining based recommendation engine product developed by Beijing Bytedance Technology L...	43197658 <input type="button" value="INSTALL"/>
	VOA常速英语 4.2.3 The VOA English app is provided by the official VOA. With the VOA Chengsu English app, you can listen to some...	42441330 <input type="button" value="INSTALL"/>
Total:10		

Declaration

1. All of the proposed apps in AppStore are collected from Internet, for study reference only. If there is any copyright infringement, please contact support@geniatech.com and we will delete them immediately after verification.
2. We do not verify the integrity and safety of the provided apps. Please verify the apps after download.
3. For further solution of app function problem, Please contact the app developer, except for the aspect of app operation optimization.
4. All of the shared resources are free. Please purchase the official licensed apps if any technical support required.
5. The copyright and the related resources are owned by the legal owners.

FileManager



Search

Input keywords to search.

New Folder

After creating a new folder, you can move files to the folder.

Select

In the selection interface, you can select / deselect folders and files, and copy / move / delete the selected items.

Sort

Select ascending/descending order by note creation time, note modification time and note name.

Sort	
<input checked="" type="radio"/> Sort by name	<input checked="" type="radio"/> Ascend
<input type="radio"/> Sort by date edited	<input type="radio"/> Descend
<input type="radio"/> Sort by date created	
Cancel	Ok

Long press the file to open, rename, delete, copy and move it.



Long press a folder to rename, delete, copy and move it.



6. Setting

Click  or  on the Home page to bring up the settings, where user can set network, general settings, manage account, battery, update, security and about device.



6.1 Network


6.1.1 WiFi

After turning on Wi-Fi, the device will automatically search for available Wi-Fi, select the hotspot in the displayed Wi-Fi list, and

input the password to connect to Wi-Fi. After the connection is successful, the Wi-Fi connection signal icon will be displayed in the status bar. After the Wi-Fi hotspot connection is successfully set up for the first time, it will automatically record the information of the hotspot. The next time you connect, just click the Wi-Fi switch in the notification bar to automatically connect.

6.2 General settings

General settings include: System Language, Time , Input Method, Sound, and turn on/off Float ball.

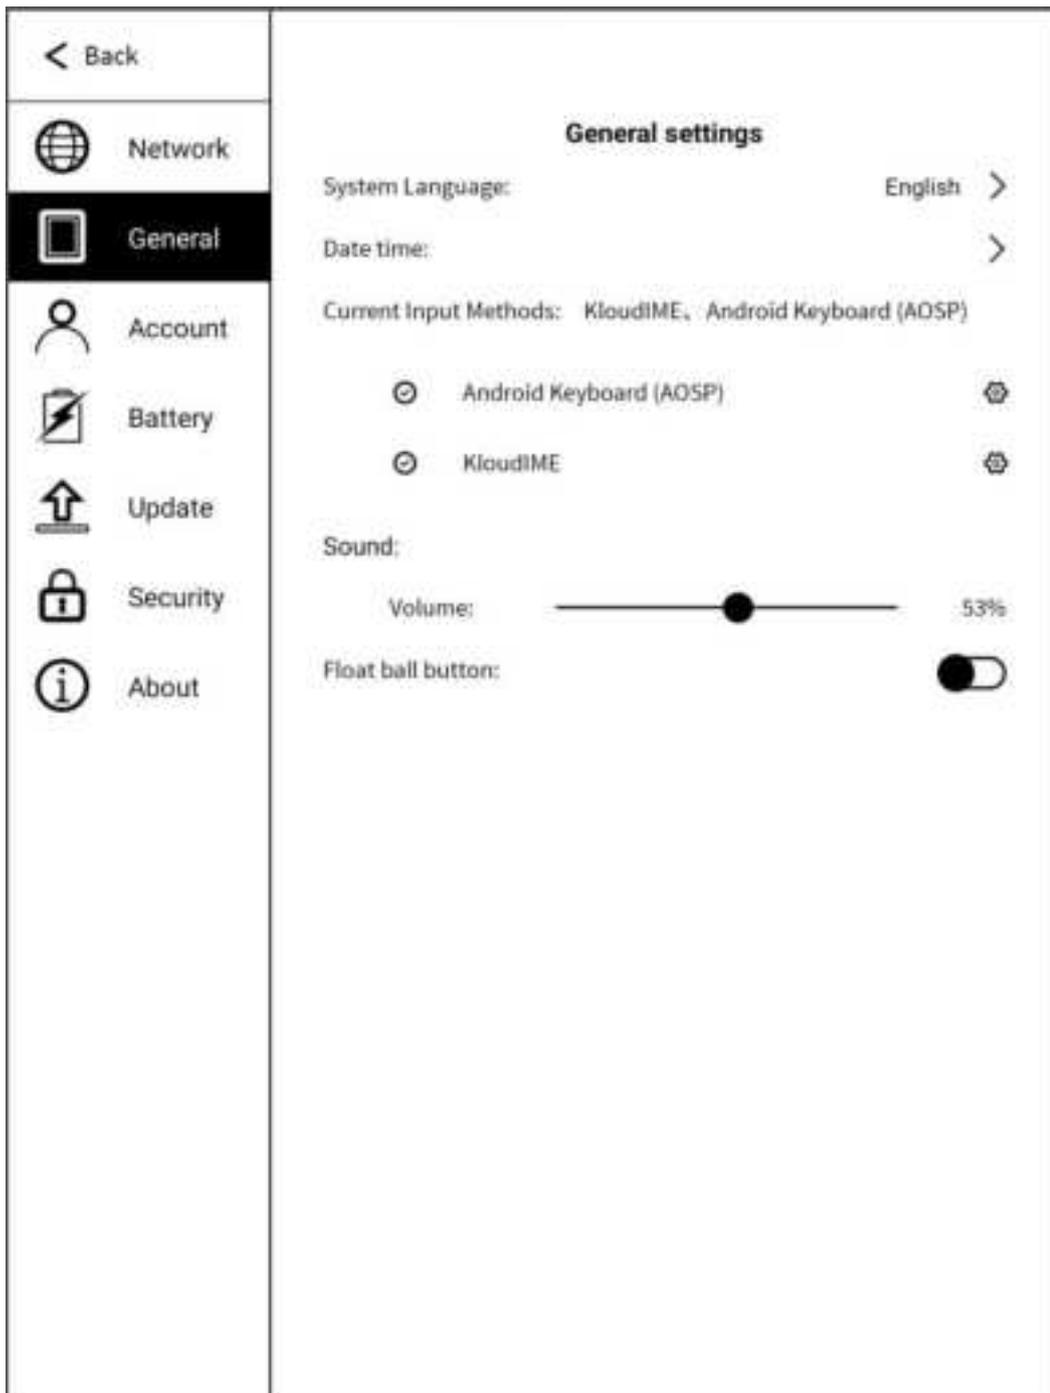

6.3 Account

The logged-in device can enjoy the services of syncing notes & books to the cloud server, and downloading notes & books from the cloud server to the device.

Visit <https://www.kloudnote.com> through the browser on PC or mobile phone, you can log in & view the notes & books in cloud storage.



6.3.1 Register

Register via mobile phone number or email address. The registered mobile phone number and email address cannot be registered again.



< Register

Create your account

User Name

+ 1 Phone number

Password

Confirm password

Verification code [Get Verification Code](#)

Create

6.3.2 Login

Enter your mobile phone number or email address with the password to log in.



The screenshot shows a mobile application login screen. At the top left, there is a back arrow icon and the text "Login". The main heading in the center is "Login your account". Below this, there are two input fields: the first is labeled "Phone number or E-mail address" with a person icon, and the second is labeled "Password" with a lock icon and a toggle icon for visibility. Below the password field, there are two links: "Forget password" on the left and "Register" on the right. At the bottom center, there is a large "Login" button.

6.3.3 Forget Password

You can reset your account password through your mobile phone number or email address + verification code.

If you need to contact us, you can send an email to support@geniatech.com.

< Forget password

Verify your account

Phone number

Verification code


Get Verification Code

If you need to contact us, please send E-mail to support@geniatech.com

Next


6.4 Battery

You can set the automatic sleep time when idle, automatic power off time when idle, and view the battery status information.

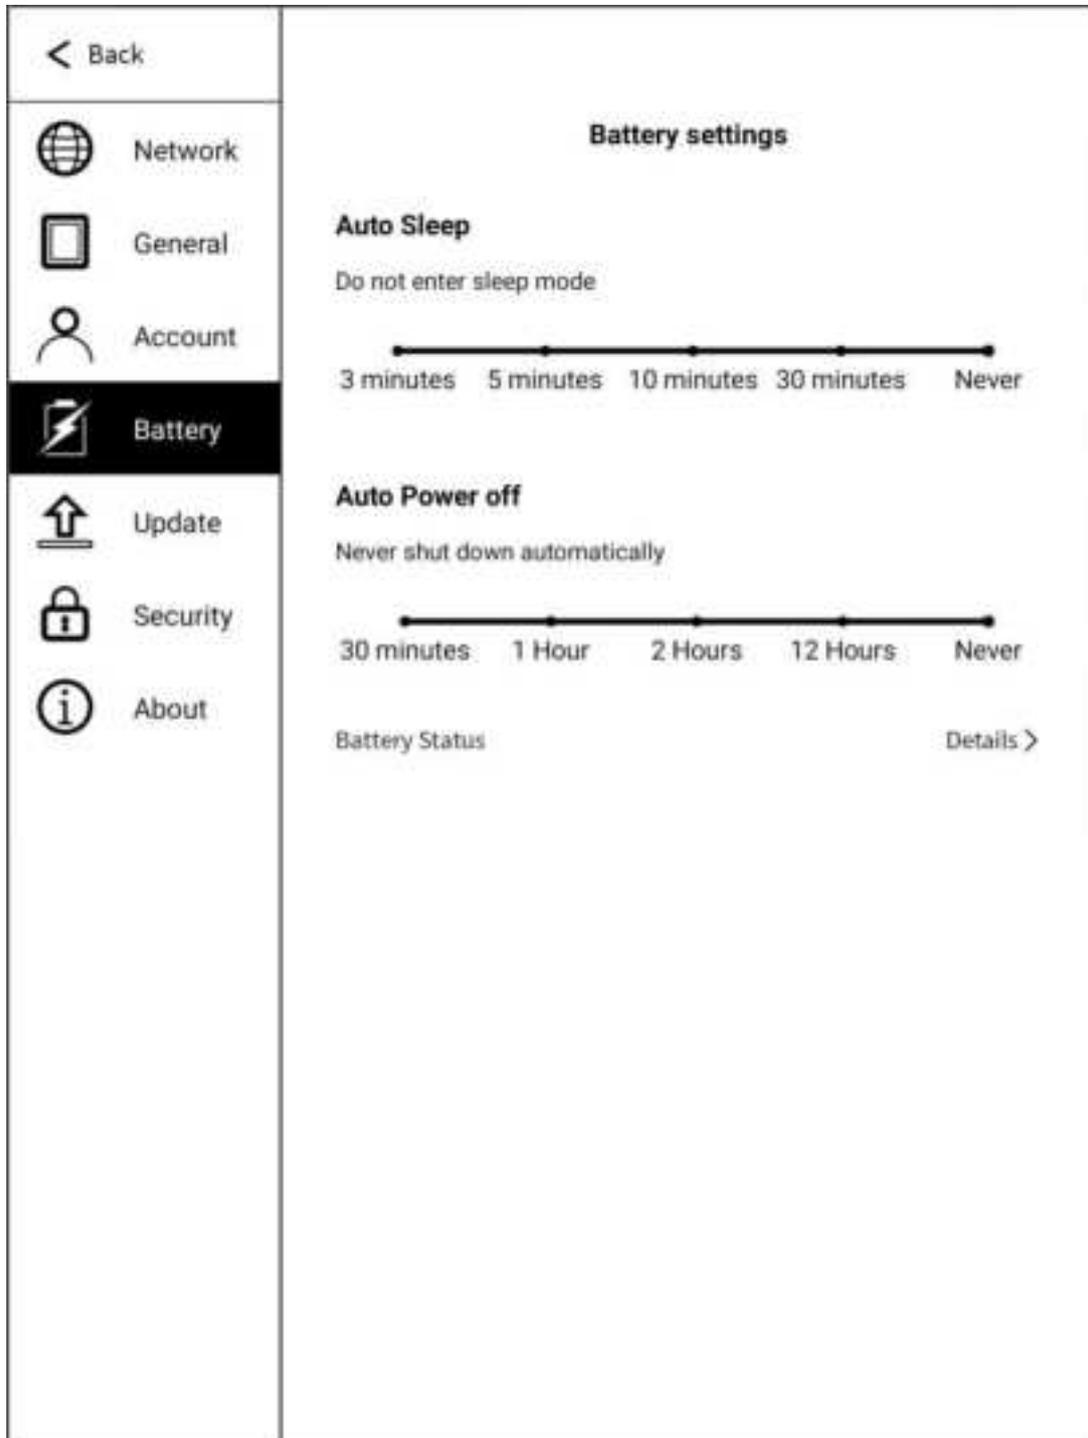

6.5 Update


Each time the user enters the update interface, it will detect whether there is new software on the server. When there is new software, a prompt will pop up, click to download, and follow the prompt to install the new software. If automatic download is enabled, new software will be automatically downloaded when new software is detected, and the user will be prompted to install after downloading.

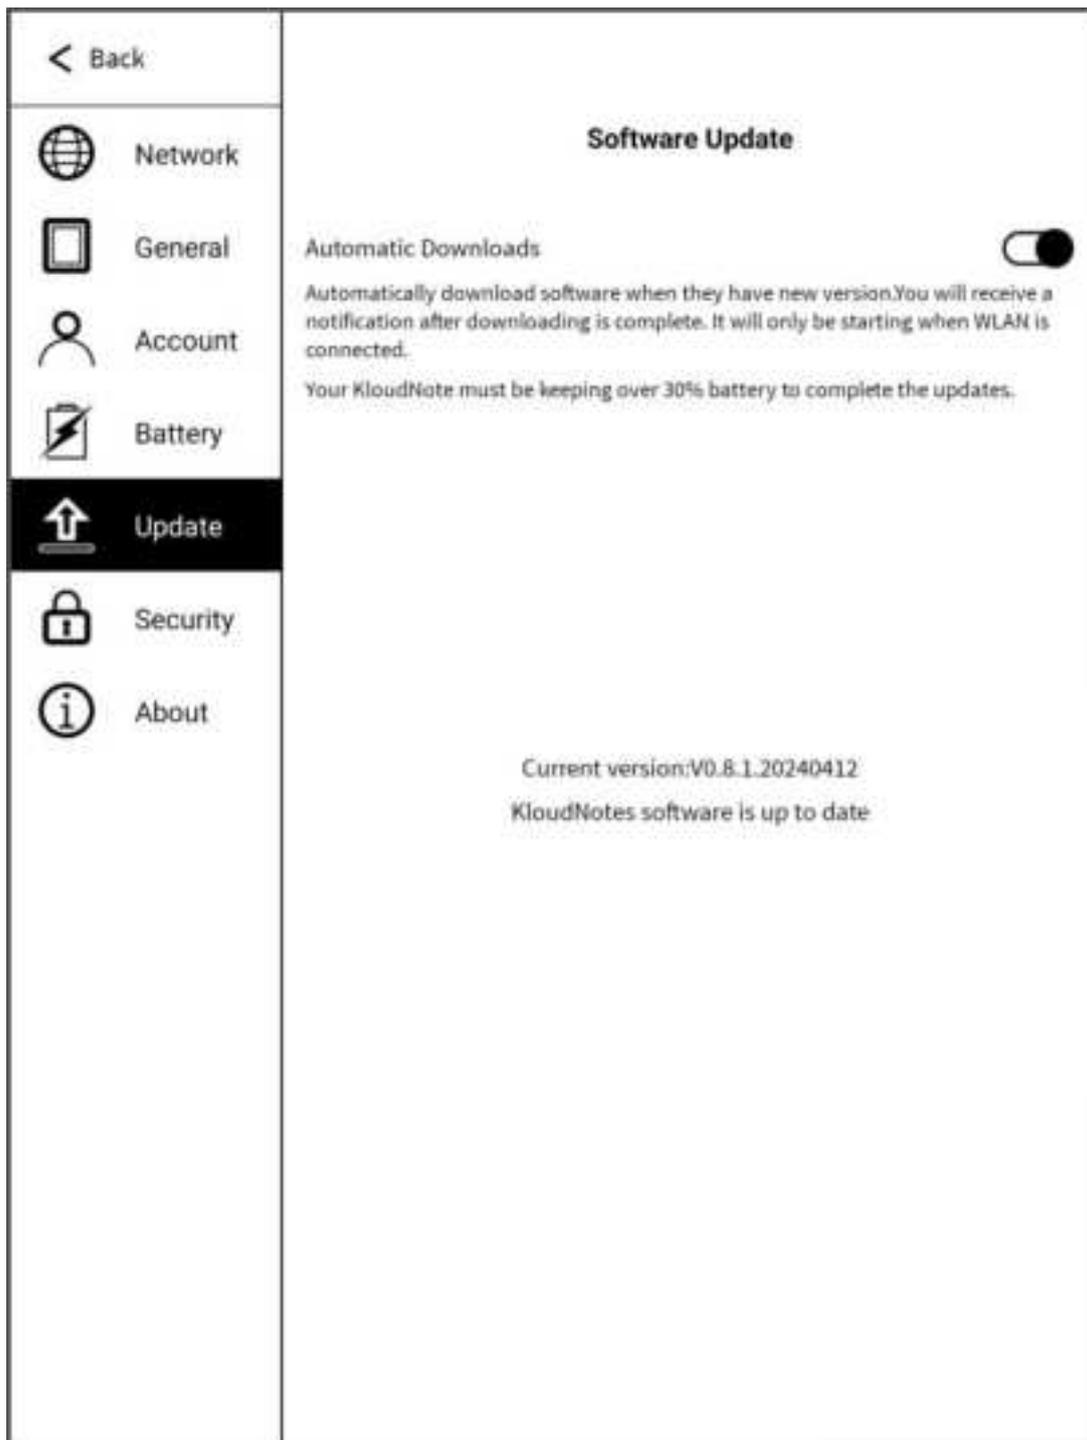

6.6 Security

Lock screen password can be enabled/disabled, currently supporting 6-digit passwords. After setting the password, when the device is activated in standby mode, or reboot, a password needs

to be entered to enter the system. The password used for locking notes and books is consistent with the lock screen password.

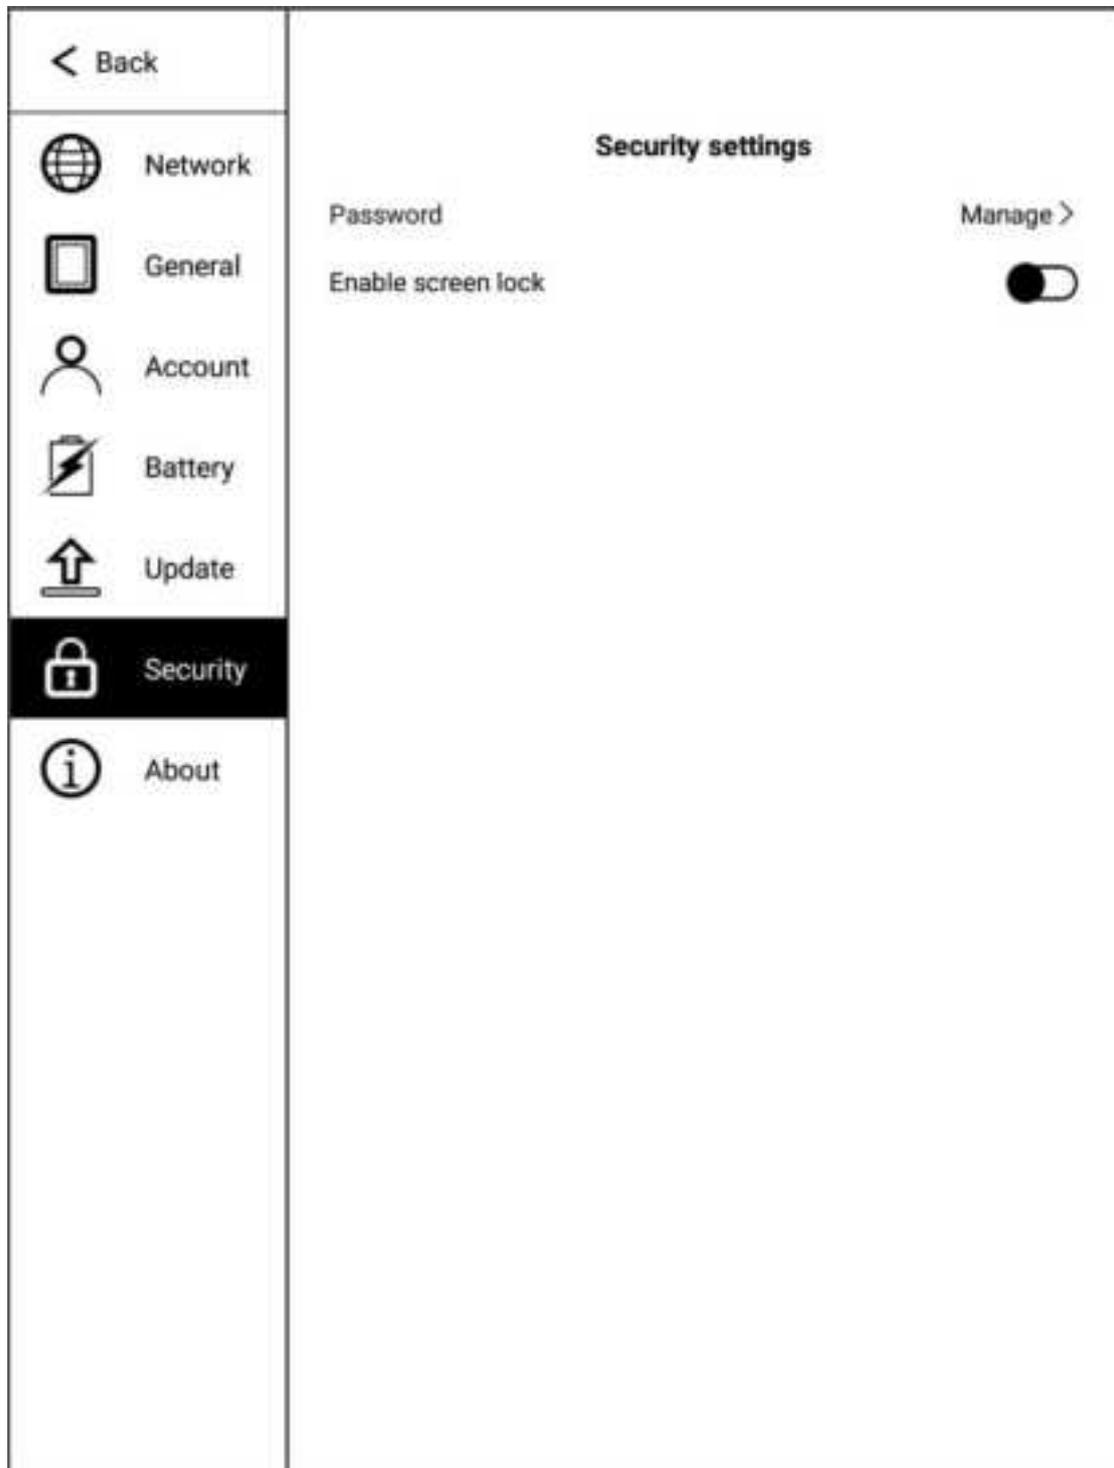

Forget the lock screen password can be done by logging in to your KloudNote account to unlock or resetting your KloudNote account to re-enter the system. When you enter the wrong password three times in a row, the following interface will pop up:

Wrong password, please try to unlock	
<input type="checkbox"/> Reset Kloud Note	
<input checked="" type="checkbox"/> Login account unlock	
Cancel	OK

6.7 About

In "About", you can view basic information such as theOS, Serial number, Build number, Storage ,User Manual downloads, Privacy Policies, Feedback, Standby screen settings, and Factory Reset.



Feedback

If you have any questions or suggestions, please feedback to us. If you need our reply, please fill in your receiving email address.



The image shows a feedback form interface. At the top left, there is a back arrow icon followed by the text "Feedback". Below this, there is a large text input field with the placeholder text "Problem Description (Required)". Underneath the text field is an email input field with the placeholder text "E-mail (Optional)". At the bottom center of the form is a rounded rectangular button labeled "Send".

7. Product specification

CPU	Quad-core Cortex-A35	Screen	E-ink screen
RAM	2GB	Screen size	10.3 inch
Flash	32GB	Resolution	1404x1872
OS	Android 11	Touch type	Electromagnetic touch + Capacitive touch
Language	English/Chinese (Will support more in the future)	Battery	4000 mAh lithium battery
Document format	PDF, TXT, EPUB, MOBI, RTF, FB2, DOC, HTML	USB	Type-C
Update	Support OTA upgrade	WiFi	2.4G/5G
Size	250*175*7.6mm	Operating temperat ure	0°C- 50°C
Weight	435g	Charging	DC 5V/2A
Certification	CE、FCC	Audio	Microphone

8. Accessories

The package contains the following standard accessories:

1. Kloud Note device x1
2. Electromagnetic pen x1
3. Type-C usb cable x1

9. Safety guide

Please read the following safety instructions before use. If you encounter any technical difficulties, please contact us (send an

email to support@geniatech.com) for help.

Screen protector

The display of this device is an E-ink screen, which is a fragile and fragile part. Please do not directly hit/squeeze/press the screen, or fall from a height on a hard surface. If the display screen is cracked, please stop using it and contact

the official or other qualified professionals to replace it.

Please do not disassemble and replace it yourself.

Qualified accessories

Only batteries, chargers and other accessories that meet the safety standards of this device are allowed to be used.

For details, please refer to the product configuration parameters. If you use incompatible accessories, you must bear the responsibility for any damage to the device.

Stay away from liquids

This device is not waterproof, please do not expose the device to a humid environment, and do not use the product in the rain, and stay away from any corrosive liquids.

Do not disassemble

The battery of this device cannot be replaced, please do not disassemble it yourself to avoid damage to the structure or screen.

Use environment

The allowable temperature range of this device is 0°C-50°C.

10. Warranty terms

10.1 Warranty scope

10.1.1 The body of Kloud Note: The warranty period is 1 year

10.1.2 Within 15 days from the date of purchase, under normal operating conditions, if there is a performance failure caused by the quality of the product itself, if it has not been disassembled and repaired, the product of the same model or repair service can be replaced.

10.1.3 Within one year from the date of purchase, any performance failure caused by the quality of the product itself under normal operating conditions, if it has not been disassembled and repaired, can enjoy free maintenance services.

10.1.4 Within three years from the date of purchase, if the product has a performance failure, you can enjoy a fee-based maintenance service.

10.1.5 The above warranty or repair is limited to failures of electrical components, mainly including hardware motherboards and display screens, excluding consumables and accessories such as shells, packaging, and USB cables.

10.2 Non-warranty coverage

The following conditions are not covered by the warranty. Even within the applicable time frame, the warranty terms will no longer apply, but you can still enjoy fee-based repair services.

10.2.1 Failure machines without Kloud Note trademark

10.2.2 The malfunctioning machine caused by unauthorized disassembly and maintenance without our permission.

10.2.3 Malfunctioning machines with altered or missing product serial numbers.

10.2.4 Failure or damage to the malfunctioning machine caused by man-made reasons or use in an unspecified environment, such as excessive humidity or dryness, high temperature, unstable voltage or current, excessive zero-to-ground voltage, etc..

10.2.5 Damage caused by accidental reasons or improper use, including machine ingress, rupture, collision, abnormal insertion and removal, insect damage, etc.; Natural consumption, including natural consumption, wear and aging of the casing and plug-in parts.

10.2.6 Damage caused by force majeure, such as fire, flood, earthquake and other natural disasters.

10.2.7 The malfunctioning machine caused by the operation of the software of the machine outside the allowable scope of the SDK.

10.2.8 It has been identified that it does not belong to the malfunctioning machine produced by our company.

10.3 Precautions for repairing

10.3.1 The user needs to contact our after-sales department in advance to determine whether it is within the warranty scope, whether it is a malfunction, the cause of the malfunction, etc..

10.3.2 The user needs to provide the purchase voucher (invoice or receipt)description of the abnormal condition of the equipment, and send it back to our maintenance department together with the equipment.

10.3.3 Due to the special nature of the product screen, non-screen repair equipment, please ensure that the screen is in good condition

and reinforce the packaging before sending it for repair to avoid damage on the way. Our company is not responsible for the free repair of products with damaged screens.

10.3.4 Only the machine and the above-mentioned required items are provided for repair. Do not send earphones, adapters and other accessories with the equipment. If there is any loss, our company will not be liable for compensation.

10.3.5 Please back up your data before sending it for repair. Our company is not responsible for data loss due to repair.

The final interpretation right of this warranty clause belongs to Shenzhen Geniatech Inc., LTD.

11. Q & A

11.1 How to turn on and off

- When it is turned off, press and hold the power button for 2-3 seconds to turn it on.
- When the power is on, press and hold the power button for 2-3 seconds, and select "Power off" in the pop-up menu.
- When the power is on, press and hold the power button for 5 seconds to power off.

- When the power is off, connect the TypeC cable to charge, and it will automatically power on.

11.2 How to charge

- Connect the device to the computer via a USB data cable for charging.
- Connect the USB cable and the device through the adapter (optional), and connect to the AC outlet for charging.
- Charging time is about 3 hours.

Note:

If the charging status is not displayed when the adapter is connected, please check whether the default power supply of the adapter is 5V (voltage range:4.5V-5.4V). If it is not within this range, please replace the adapter and try again.

11.3 How to transfer data

- Connect a mobile phone or computer via a data cable for data transmission
- Connect to WIFI and log in, then download the book in Reader
- Through WIFI wireless transmission, transfer books from mobile phones or computers to devices.

- After connecting to WIFI, visit the webpage in the built-in browser to download data.

11.4 How to upgrade the system

Online upgrade via OTA.

After WIFI is connected to the Internet, in

Settings-->Update-->Detect Update, search for the upgrade package and upgrade the device online.

11.5 How to synchronize notes and books to cloud storage

First, you need to register a Kloud Note account, and then the login number.

In Settings-->More Settings-->Auto sync, check whether automatic synchronization is turned on. After opening, it will automatically synchronize notes and books to cloud storage. Every time you log in, you will automatically synchronize your notes and books from the cloud storage to the device.

11.6 How to protect the equipment

Use hard-shell book covers as much as possible for daily use to avoid direct impact and squeeze on the screen.

When not in use, try to buckle the screen down and place it on a horizontal surface, and do not put hard objects between the screen

and the horizontal surface.

Avoid accumulating heavy objects on top of the Device and keep away from all kinds of liquids.

12. Statement

Shenzhen Geniatech Inc., LTD reserves the right to make changes to the product specifications and content contained in the "User Manual", subject to change without notice.

You can get product-related information through our website:

www.geniatech.com

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

This device meets the government's requirements for FCC radiation exposure limits set forth for an uncontrolled environment. This device was tested for typical body-worn operations with the back of the E-INK Tablet kept 0 mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0 mm separation distance between the user's body and the back of the E-INK Tablet. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.