



IC-FR6300    Serial Plate

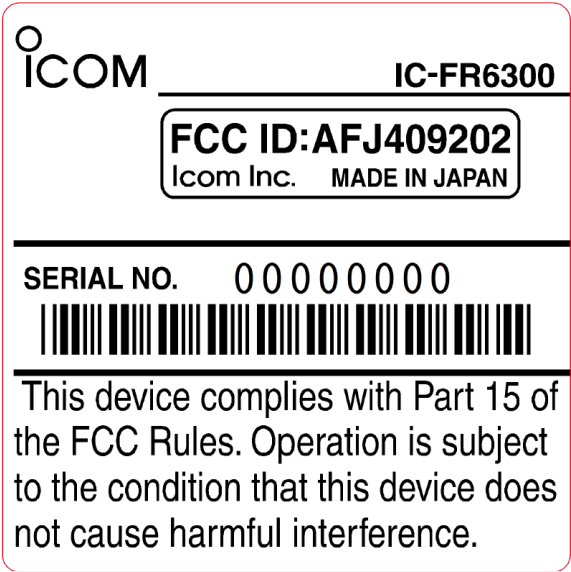


UR-FR6300    Serial Plate

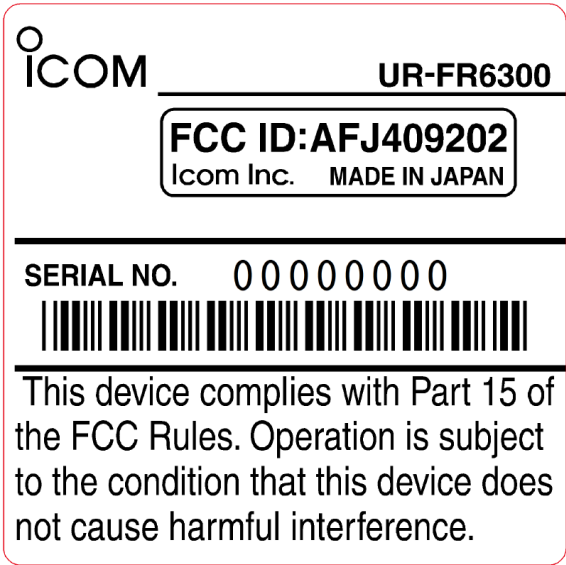



UR-FR6300 BOTTOM SIDE

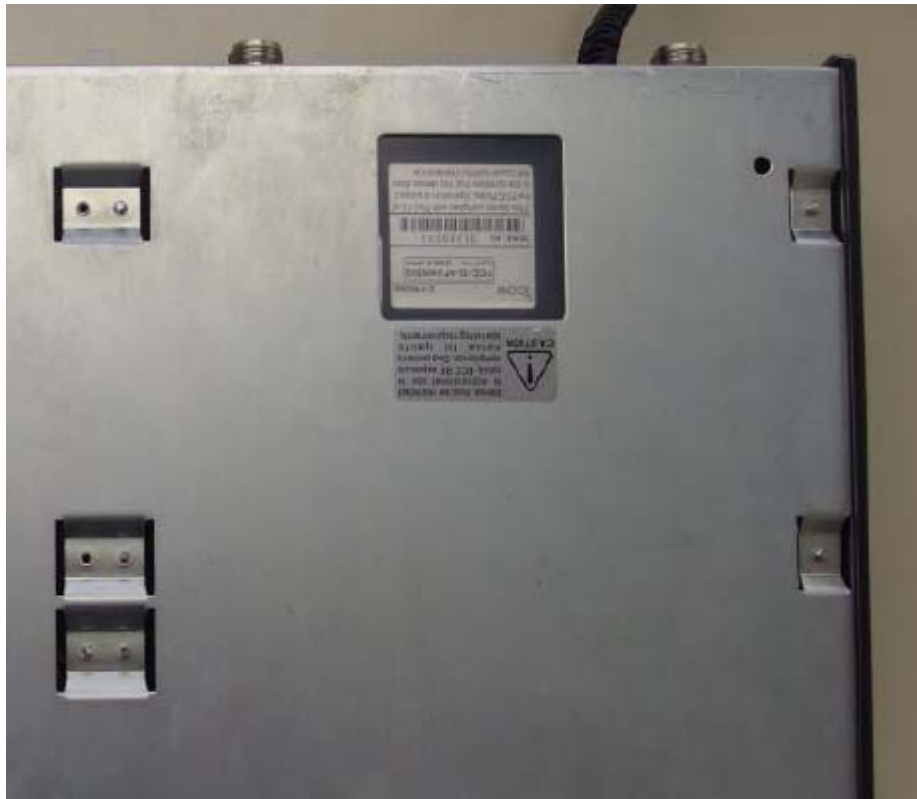

IC-FR6300 label location



Warning label