
## A68 Pro

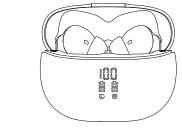

Charging case Ear Tips

# Accessories Wireless Earphones User Manual

Type-C Charging cable



## Usage tips

## Please read this manual carefully before using.

•If charge the earphone while it is wet with sweat, etc., the charging terminals will be corroded.Pls wipe off moisture with a dry soft clot and let it dry naturally before recharging.



•Don't leave the earphone in the pocket when washing clothes such as pants, shirts, etc.

 









Step 3: Take out the two earphones and place them on the table at the



Step 4: If still not working, quickly 5-click both earphones in the power-o state, the headset will be turned off. After restarting, the pairing history information is cleared.



## Digital LED -----

 


Charging case

## Product Usage

 ▲ Use the original charging cable to charge. Fast charging are prohibited ▲ Charge the charging case firstly before using earphones for first time. •When the charging case under charging, the digital LED screen shows the power status with light flashes. The light will stay on when fully charged.

•When earphones under charging, the indicator light of earphones will stay o (screen light of charging case flashes) and all lights will be off when fully charged




2. In power-off state, long press two earbuds for 3 seconds to power on.


1. Put the earbuds into the case then close, the earbuds will power off. 2.Long press two earbuds for 5 seconds to power off.

## Bluetooth Pairing

 
Take out earphones and search "A68 Pro " on your mobile to connect.



 ake the earphones out and put them in the ears, and wiggle them slightly for the best fit and comfort.



## Left Earphone Function

 






Right Earphone Function



## Call Function

 

low power.



ensure the best performance of it and to avoid dangerous or illegal situations.

temperatures.

Safety Information

 Do not replace the battery yourself to avoid damage to the battery or device. When you use earphones to listen to music or calls, it is recommended to use the mini Charger safety

• Exposure to high-level volume while driving, driving attention may be distracted and cause accidents.

## Operating environment Do not use the device in dusty, sharp, compact or near magnetic fields to avoid failure

Precautions of the internal circuit of the device. When installing the device, please keep away from strong magnetic fields or electrical appliances with strong magnetic fields, such as ovens and refrigerators. The earphones should be stored in a dry/ventilated environment and avoid conta

 Do not use the device in thunderstorm weather. Thunderstorm weather may cause equipment failure or electric shock hazard.

device and its accessories, or swallow small parts, causing suffocation or other hazard

- Please use the device within a temperature range of -10 ° C ~ + 55 ° C, and store the Avoid using harsh organic solvents or items containing these ingredients to clean the device and its accessories within a temperature range of -40C ~ + 70 ° C. When
- When the temperature is below 5 ° C, the performance of the battery is limited. the effect of the environment on the product. Make sure the connection is smooth a Do not place the device in direct sunlight, such as the dashboard or window sill of a ca commend a distance between them within 10 meters. Do not place the device near heating sources or exposed fire sources, such as electric the earphone failed to connect or with poorly connection, please do r heaters, ovens, water heaters, stoves, candles, or other places that may generate high
  - or the accessories privately. Otherwise no warranty. When charging the earphones, please use the standard car charger or the charger specified by our company.

• This device is not a toy, children should use this device under adult supervision.

Do not drop, crush or puncture the battery. It can cause internal short circuits and

This device is equipped with a non-removable built-in battery.

Do not disassemble or modify the battery, or immerse in water or other liquids, to avo

6. To ensure the normal use of the earphones, please make sure they are fully charged.

The device has been evaluated to meet general RF exposure requirement. The device can

FCC Warning

Product Details

## ▲ If the indicator lights of two earbuds flash quickly, it indicates that the L and R earbuds are not actively paired.

Step 1: Turn off your mobile's Bluetooth.



 
same time, wait for 15s to pair automatically.











☐ Type-C charging port

 Open the lid of the case, earbuds will power on automatically. Power off

&Long press 2s Reject call

&2 click Play/Pause

&3 click Voice assistance activa

& Long press 2s Reject call



Put the earphone into the charging case to charge when it indicates





- DC 5V • Do not place sharp metal objects such as pins near the device's earpiece or speaker, Talk time: 4 hours Music playtime:
- Stand-by time: 180 days Transmission distance: 10m -15m Charging time: 1.5 hours
  Frequency Response: 20-20000 Hz
  accessories in a place out of children's reach. Children may inadvertently damage the

Before using and operating the earphones, please read and follow the below pre-



- volume required for music or calls to avoid hurting your hearing. When charging the device, the power socket should be installed near the device. should be easily accessible.
  - When charging is completed or not charging, disconnect the charger from the dev and unplug the charger from the power outlet.

Battery safety

battery leakage, excessive, fire or explosion.

with oil, water vapor, steam, moisture and dust to prevent the performance of the Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.
- NOTE 2: Any changes or modifications to this unit not expressly approved by the party
  - responsible for compliance could void the user's authority to operate the equipment.

interference by one or more of the following measures:

be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

(1) This device may not cause harmful interference, and (2) this device must accept any

Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed

installation. This equipment generates, uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful

interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a

to provide reasonable protection against harmful interference in a residential

interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the

User Manual