



QUICK START GUIDE STIR IT UP LUX



HOW TO VIDEOS
VIDEO TUTORIAL
INSTRUCTIEVE
TUTORIELS
VIDEOANLEITUNGEN
VIDEOS GUIDA
使用方法動画
사용 방법 영상
使用方法動画

INDEX

English	2
Français	14
Español	26
Deutsch	38
Italiano	51
Nederlands	63

ATTENTION: PLEASE READ QUICK START GUIDE BEFORE USE

ATTENTION: PRIÈRE DE LIRE LE GUIDE DE DÉMARRAGE RAPIDE AVANT UTILISATION

ATENCIÓN: LEA LA GUÍA DE INICIO RÁPIDO ANTES DE USARLO

BEACHTUNG: VOR DEM GEBRAUCH SITTE DIE SCHNELLSTARTANLEITUNG LESEN

ATTENZIONE: LEGGERE LA GUIDA DI AVVIAMENTO RAPIDO PRIMA DEL USO

OPGELET: VOOR HET GEBRUIK DE SMELTARTGIDS LEZEN


注意: 使用前の請書讀快後使用説明

주의: 사용 전에 빠른 시작 가이드를 읽어 주십시오.

注意: ご使用前にクイックスタートガイドをお読みください。


ENGLISH

PRODUCT MAP

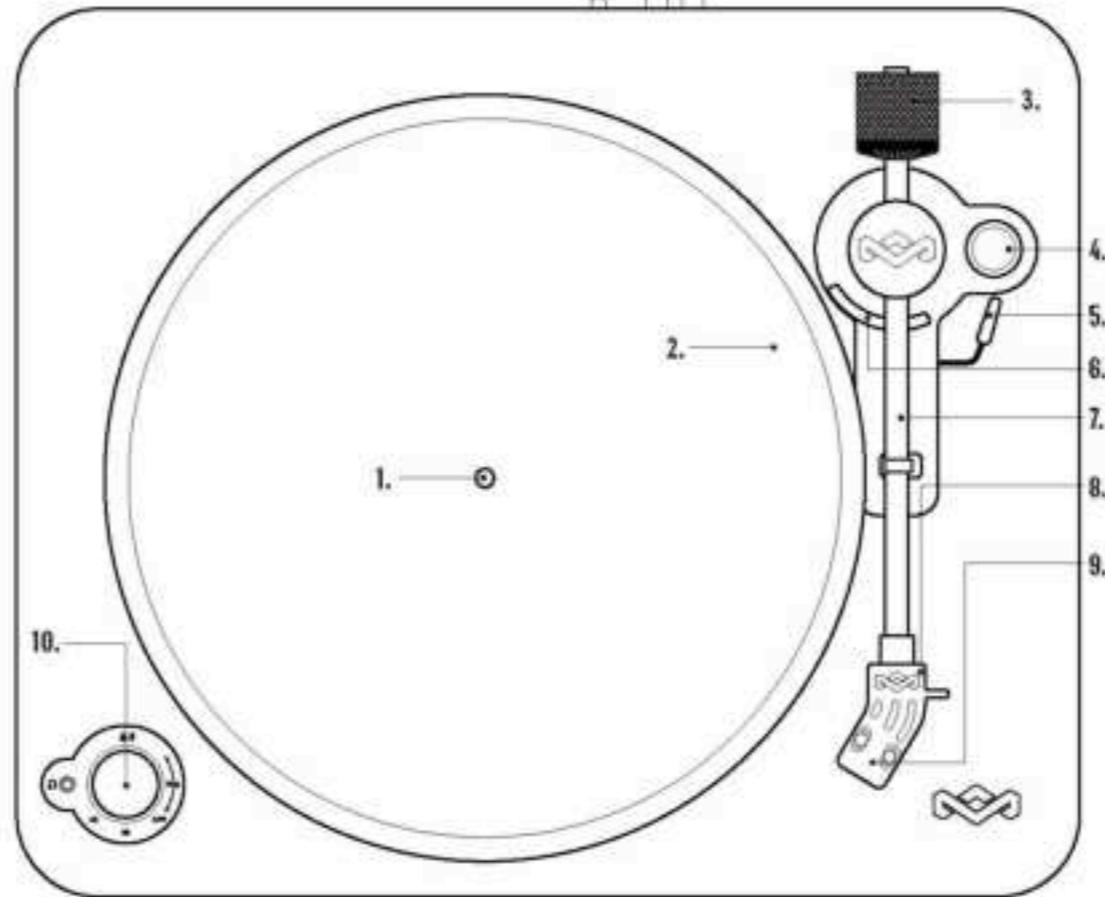

LEGEND


- | | |
|-------------------------|--|
| 1. Spindle | 8. Styler |
| 2. Turrotale | 9. Needle Cover |
| 3. Balance Weight | 10. Multi-Function Button |
| 4. Anti-Scaling Knob | 11. Power Adaptor with Interchangeable Plugs |
| 5. Toss Arm Lift Level | 12. AC Adaptor |
| 6. Toss Arm Rest Holder | |
| 7. Toss Arm | |

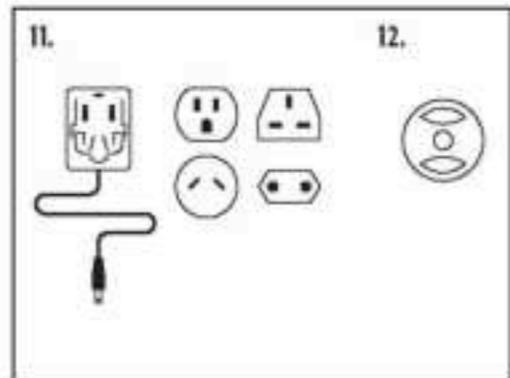

FUNCTION LAYOUT

LEGEND

- | | |
|--------------------------|----------------------|
| A. PCB Line Det | F. Blastproof Button |
| B. Pre-Amp Switch Button | G. - VOL + Knob |
| C. USB-C Out | H. Anti-Scaling Knob |
| D. Off/33/45 Knob | |
| E. Headphone Jack | |

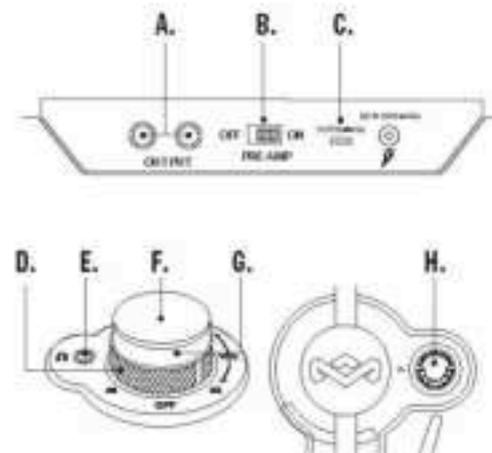

SETUP

POWERING ON YOUR STIR IT UP LUX




Your Stir It Up Lux uses an AC power supply and is powered by a standard wall outlet.

Connect the power adaptor to the wall outlet.

ATTACHING THE DRIVE BELT

Note: The drive belt comes pre-installed. However, if when you open the turntable, there is no visible belt around the sub-platter and motor. Please re-fit the belt.

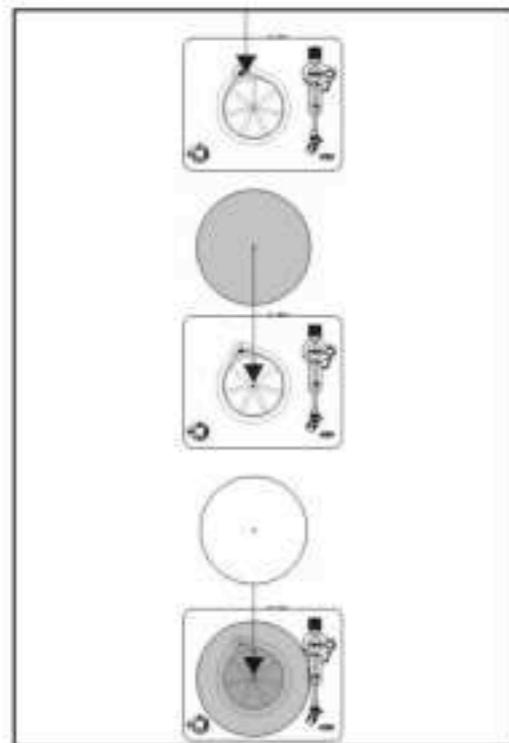

To fit the belt, put the belt on the motor (this is the gold spindle), then keeping the belt tight stretch it around the sub-platter. Once in place make sure the belt is flat and not twisted.

Now place the glass platter on the black sub-platter, by aligning the centre holes.


Now place the slip mat on the glass platter, again aligning the centre holes. The platter should be attached to the base.

BLUETOOTH® PAIRING

Power on the external Bluetooth® device first before turning on the BT function on the Turntable.

Press the BT button on the turntable (MB) to enable the unit to search the Bluetooth® device till BT indicator light becomes solid. This will indicate your devices are paired.

NOTE: If the turntable does not pair with your Bluetooth® device within 30 seconds, press the Bluetooth® search button again on the turntable and it should pair.

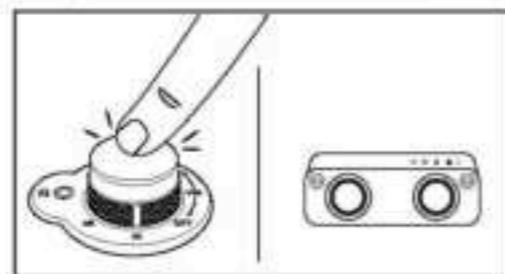

Blue LED light flash

Blue LED light stable

DISCONNECT BLUETOOTH® PAIRING

Long press and hold the BT button till the BT indicator light turns off. Turntable will then disconnect from external device.



Blue LED light will turn to Red. This indicates Bluetooth is off, but turntable still has power.

PLAYING A RECORD

1. Put a vinyl record on the turntable.

2. Assemble the balance weight and set it to a proper position.

3. To adjust the balance weight rotate the balance weight at counter-clockwise.

4. Lift and move the tone arm on turntable. Place the tone arm on the edge of the record.

5. Turn the RPM Dial knob to select the speed according to the record you are playing.

6. The turntable platter will auto stop when the music has ended. Lift the tone arm and place it to tone arm rest manually.

To listen to side B, flip record and repeat the above steps.

*33 RPM speed to play corresponding size 33 vinyl disc

*45 RPM speed to play corresponding size 45 vinyl disc

To power the unit off Rotate the RPM Dial knob to the off position.

Note:

Remove the needle cover before you balance the tone arm. Hold tone arm whenever you make any adjustment or action so as to protect the tone arm.

Do not try to adjust the balance weight while playing a record as this could break the needle and scratch the record.

Re-secure the tone arm before transportation to protect the needle.


Remove the balance weight before transportation to prevent damage or breakage to the unit.

Do not stop or turn the platter manually. Moving or jarring the turntable without securing the tone arm clamp could result in damage to the tone arm.

ANTI-SKATING

Normally the anti-skating should be set to its minimum setting. Anti-skate compensates for inward tracking forces that occur with certain pick-up when the stylus leaves the center of the record. If the turntable is experiencing excessive skipping while rotating the center spindle, try increase the anti-skating in the increments indicated on the dial. Start by adding an increment of 1, test its performance, then increase it more, and so on.


Note: During adjusting the anti-skating knob, leave the tone arm and balance weight alone to prevent damaging the stylus (needle).

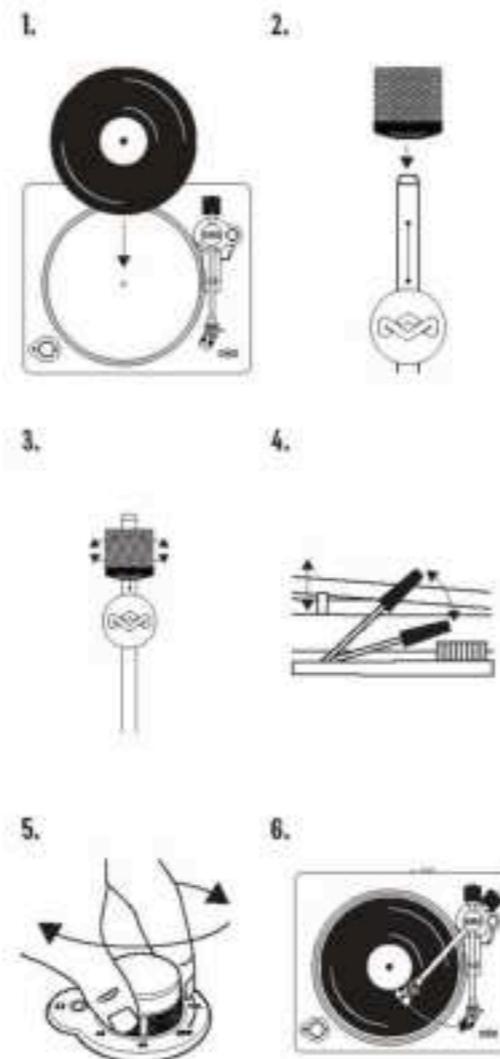

VOLUME CONTROL


Increase Volume: Rotate the Volume Knob clockwise.

Decrease Volume: Rotate Volume Knob counter clockwise.

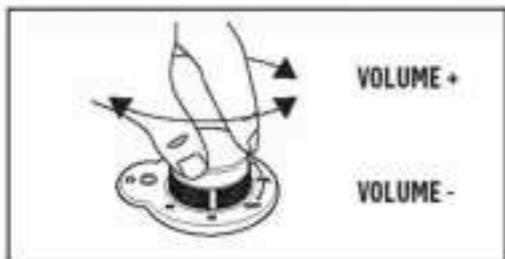

HEADPHONE OPERATION VIA HEADPHONE JACK

Connect a set of headphones (not included) in the headphone jack.

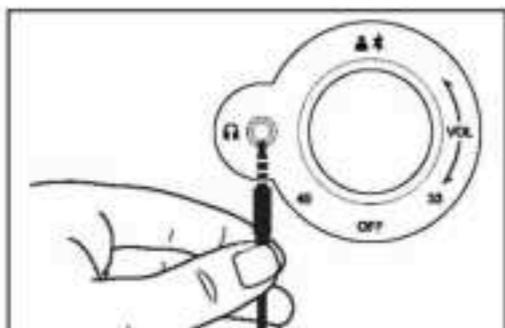

Note: Never put on the headphones till you have plugged in the headphone plug

LED will also be solid RED when headphones are plugged in.

NON BLUETOOTH® CONNECTION SETUP



CAUTION: Switch off the power to all equipment before making connections. Read the instructions of each component you intend to use with this unit. Be sure to insert each plug securely. To prevent fire and noise, avoid bundling the signal interconnection cables together with the AC power cord.

LINE OUT OPERATION

1. Switch the REC-AMP-OFF/ON SWITCH to ON position.
2. Plug one end of the RCA cable (included) into the LINE OUT socket at the back of the unit. Be sure to match the color with the socket.
3. Plug the other end of the cable into the LINE IN socket of your tone amplifier device.
4. Switch on the unit and the amplifier device you connected.
5. Adjust the volume on the amplifier device.

