
Dell Chromebook 11

Quick Start Guide

1 Connect the power adapter and turn on your computer

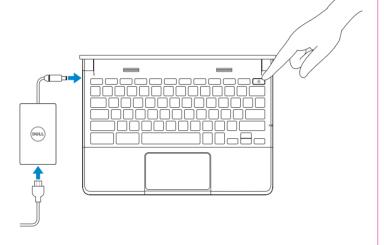

2 Finish Chromebook setup



 
Connect to your network



Wait for update to finish



Sign in to your Google account or create a new account



3 Register Chromebook



dell.com/support/registration

4 Explore resources



Get started





Help Center

Community

Business and education

Dell Chromebook

Product support and manuals

Contact Dell

Regulatory and safety

Regulatory model

Regulatory type

Computer model

support.google.com/chromebook

chromebook.com/community

support.google.com/chrome/a/

chromebook.com/dell

dell.com/support

dell.com/support/manuals

dell.com/contactdell


dell.com/regulatory_compliance

P22T

P22T001

Dell Chromebook 11-3120


Insert SIM card (on WWAN models only)

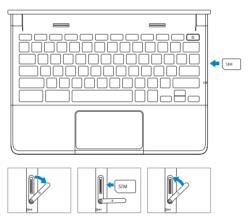


For details on your Dell Limited Hardware Warranty and any service contracts you purchased (as detailed in your invoice), please visit the links below:

Dell Limited Hardware Warranty: www.dell.com/warranty

Features

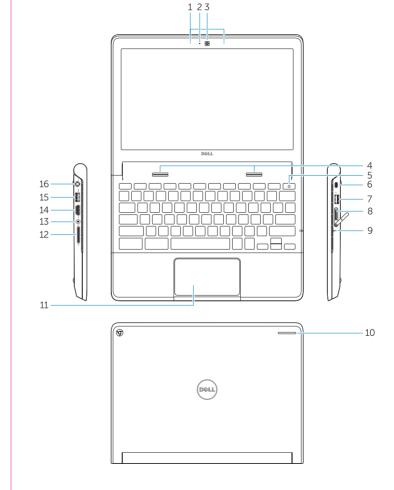

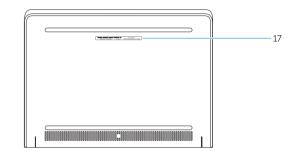

- Microphones
- 2. Camera-status light
- 3. Camera
- 4. Speakers
- 5. Power button
- **6.** Security lock slot
- 7. USB 2.0 connector
- 8. SIM reader (optional)
- 9. Battery-status light
- 10. Activity light

- 11. Touchpad
- 12. Memory card reader
- 13. Headset connector
- 14. HDMI connector
- 15. USB 3.0 connector with PowerShare
- **16.** Power connector
- **17.** Service-tag label





Printed in China. 2014-11 L10N info:

Use for Malaysia only

Dell Consumer Service Contracts: www.dell.com/servicecontracts

Production info: Use for DAO only