

TELESIN

Versatile Selfie Grip

多功能助拍器



USER MANUAL / 用户手册

Foreword

Thank you for purchasing Telton product.

 
Important Notes

- Before using this product, read this manual carefully.
- Keep the manual properly. If other users want to use this product, give this manual with the product.
- Take all the warnings and follow all the instructions in this user manual.
- Do not disassemble or damage the product. If the product is deformed or gets wet, stop using it immediately.
- Keep this product out of reach of children.


Warnings

Do not disassemble the product or replace the battery. If you have any questions, please contact the seller to apply for after-sales service.

Product introduction

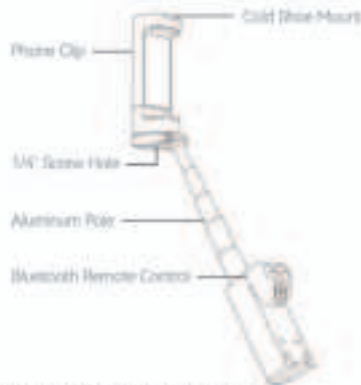

Bluetooth Remote Control

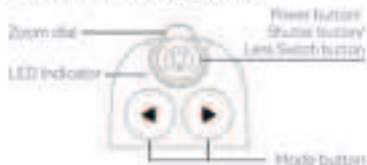 

Power On/Off

Power On

Long press the  on the remote control for 3 seconds to power-on. The white indicator light will flash and enter Bluetooth pairing.

Power Off

1. In power-on or sleep mode, long press  for 3 seconds, the white light will flash three times and then turn off, indicating the remote control is powered off.
2. The remote control will automatically power off to save power after being in sleep mode for 30 minutes.
3. After power on, if no pairing occurs within 3 minutes, the device will enter sleep mode. It will automatically power off after 30 minutes.

Sleep Mode

Entering Sleep Mode

1. If no operation occurs within 3 minutes after pairing, the device will automatically enter sleep mode.
2. When the selfie grip is connected to the phone, if the pairing is manually cancelled from the phone, the device is disconnected due to distance, or the phone's Bluetooth is turned off, the selfie grip will enter sleep mode. After remaining in sleep mode for 30 minutes, the remote control will automatically power off to save power.

Waking From Sleep Mode

To wake from sleep mode, simply press any button.

1. If the Bluetooth on the previously paired phone is still on, the device will automatically reconnect.
2. If the Bluetooth on the previously paired phone is off, the white indicator light will stay on for 3 seconds and then turn off. The white indicator light will then flash for 3 minutes. If no pairing occurs, the device will enter sleep mode and automatically power off after 30 minutes.

Low Battery Alert

When the battery is low, the red indicator light will flash three times continuously.

Specifications

Model: P1-HP-D1

Material: ABS+PC+Aluminum Alloy

Folded Size: 100mm

Extended Size: 230mm

Clamp Range: 67-95mm

Weight: 121g

Battery Capacity: 50mAh

Charging port: USB-C

Operations

1. Press and hold the  on the remote control for 3 seconds to turn it on, then click on the Bluetooth icon (TELEPHONE) to connect.



2. After connecting Bluetooth, Android/iOS/Windows phones can perform the following operations:

- Single click  Start taking photos/videos
- Double click  Switch between front and rear camera
- During photo and video shooting, use the dial  to zoom
- Single click   Switch shooting modes

3. After connecting Bluetooth, iPhones can only use the shutter button.

* To unlock functions such as zooming, switching between front and rear cameras, and mode switching, the following settings need to be configured for the first use.

① Go to Settings — General — Tracking & Mouse, and set Tracking Speed to the minimum.



② Go to Settings — Accessibility — Touch — AssistiveTouch. Turn it ON, and scroll down and adjust the Tracking Sensitivity to the minimum.



4. Turn on the "Portrait Orientation Lock"



5. Open the original camera app. Bluetooth remote controls phone shooting, zooming, camera switching and mode changing.



Using

1. Shooting Grip

Clamp the Selfie Grip on back of Smartphone for Handheld shot shooting



2. Selfie Stick

The Selfie Grip turns into a selfie stick by rotating & extends to a maximum length of 0-300mm

 


3. Phone Holder

- ① Expandable as a phone stand to support your cell phone.



- ② Attach on tripod
1/4" screw hole can be used to attach tripod and other accessories.

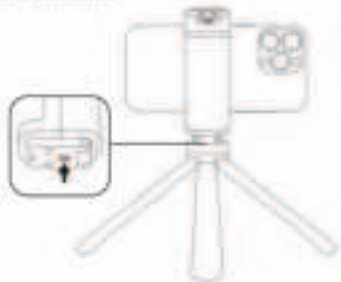

Warning

Hazard warnings:

A product that contains button or coin batteries must display a warning message:

"Warning: Contains button or coin cell battery. Hazardous if swallowed - see instructions"
"Keep out of reach of children. Swallowing can lead to chemical burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately."
All electric toys using replaceable button or coin batteries shall state the following warning in the instructions:
"Warning: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention."



FCC Caution

15.19 Labeling requirements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



75.105 information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

IC Caution

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference;
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'appareil a été évalué pour répondre aux exigences générales des normes RF. L'appareil peut être utilisé dans des conditions d'exposition portables sans restriction.

Disclaimer

Please read this statement carefully and by using the product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product. You undertake to use the product only for legitimate and lawful purposes. You understand and agree that ("TeleSim") shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent TeleSim reserves the right to interpret and modify this commitment within the limits of national laws and regulations. The warranty period for TELESIM products begins 6 months on the day you receive the product.

前言

感谢购买索尼产品。

 
重要提示

请认真阅读本产品手册。
请妥善保管本产品。将产品交给他人使用时，请
将此附带的用户手册。
请注意所有警告提示并遵循用户手册内的所有指令。
请勿拆卸或损坏本产品。若要拆卸或更改，请立即停
止使用。
请将本产品放置在儿童不能接触的地方。


警告

请勿拆卸产品或更换电池。如有疑问，请咨询索尼。
请联系购买平台，寻求帮助处理。

产品介绍

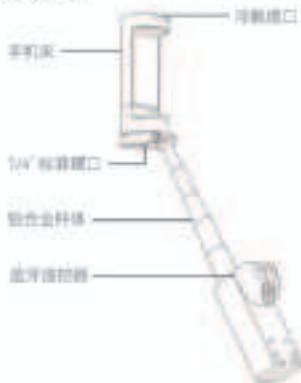

蓝牙遥控器

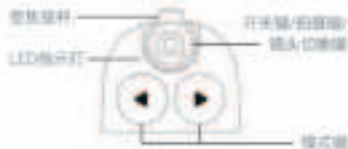 

开关机

开机

长按电源键  3秒开机。指示灯白灯闪烁，进入蓝牙配对状态。

关机

1. 开机或休眠状态下，长按  3秒，指示灯闪烁3下后熄灭，遥控器关机。
2. 休眠状态持续30分钟后，遥控器自动关机充电。
3. 开机后，无配对3分钟后进入休眠状态，30分钟后自动关机。

休眠

进入休眠状态

1. 开机后约5分钟无操作，自动进入休眠。
2. 遥控器与手机处于连接状态时，在手机屏幕解锁后配对，这里需关闭。关闭手机的蓝牙，后长按进入休眠状态。休眠状态持续30分钟后，遥控器自动关机充电。

休眠提醒

休眠状态下，单击任意按键即可唤醒。

1. 休眠唤醒后，加上一键已配对手机蓝牙遥控开机状态，直接自动唤醒。
2. 如果上一键已配对的手机蓝牙关闭，白色指示灯长亮3秒后熄灭，白色指示灯开始闪烁3分钟后无配对，进入休眠状态，30分钟后关机。

低电量提醒

低电时红色指示灯连续闪烁3次。

基本参数

产品型号: P1-H3-D1
材质: ABS+PC+铝合金
收缩长度: 120mm
拉伸长度: 300mm

产品尺寸: 67/65mm
产品重量: 120±5g
电池容量: 30mAh
充电接口: USB-C

操作说明

1. 长按电源键  3秒开机，点击蓝牙图标 (TELEPHONE) 进行蓝牙连接。



2. 连接蓝牙后安卓/苹果手机，即可进行以下操作。

• 单击  开始拍摄/录像

• 单击  切换前后镜头

• 拍摄和录像过程中，滑动滑块  进行变焦

• 单击   进行拍摄模式的切换

3. 将手机连接至设备即可使用摄像头。

* 如解锁变黄、切换前置镜头、模式切换等功能，首次使用需通过进行以下设置。

① 进入手机设置—通用—辅助功能—视觉，即可调成高对比度。



② 进入手机设置—辅助功能—触控—触控调节（打开），将下列3项都调成高对比度即可调小。



4. 打开“蓝牙方向锁定”。



5. 打开摄像头。可通过蓝牙遥控器进行控制手机。
【拍照】【镜头变焦】【镜头切换】【模式切换】等功能。



功能

1. 拍摄手柄

该手柄安装在手机底部，手持拍摄。



2. 自拍杆

通过按钮展开或收缩自拍杆，可延伸最大长度 303mm。

 


3. 手机支架

① 可展开作为手机支架、支撑手机。



② 可通过 1/4 螺丝孔固定在三脚架或其他支撑件。

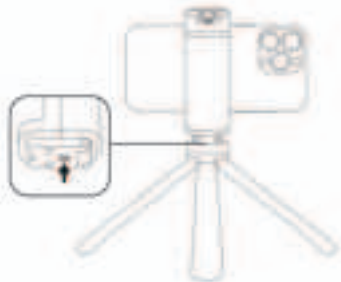

免责声明

进行详细阅读本声明。一旦使用本产品，即视为对本声明的全部内容认可和接受。每次使用前，请仔细阅读产品、配件箱标签、资料，请勿使用。使用本产品，就意味默认认可并理解，您将自行承担使用本产品的行为和相关产生的后果的全部责任。您承诺仅将本产品用于正当合法的用途。您理解并同意，对于直接或因使用本产品而造成的高温、不利影响、损害、伤害、损失或者其他法律后果，泰诺数码有限公司（以下简称“Toson”）将不承担任何责任。用户应谨慎阅读但不限于本文提及的其他注意事项。在国家法律法规范围内，本声明解释权、修改权归 Toson 所有。泰诺数码从您收到货物之日起计算，享有 6 个月质保服务。

www.telesin.com