 
 


earbud tips

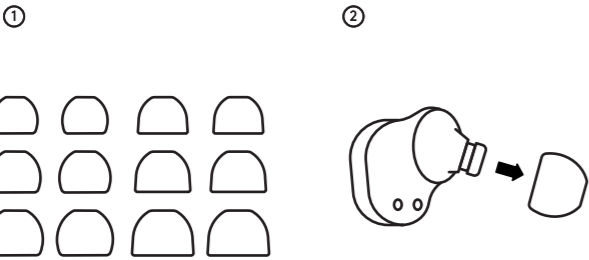

The earbuds come with small, medium and large earbud tips in two different shapes and can be changed at any time.

To change the size of the earbud tip, squeeze it and pull it away from the earbud.

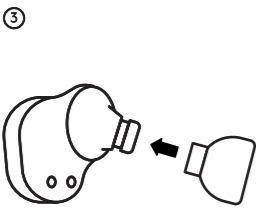

Select the size that is the most comfortable for you. Flip the earbud tip inside out so you can see the interior sleeve. Slide the interior sleeve onto the earbud. Repeat steps 2 and 3 for the second earbud. If you need to switch to another size follow all 3 steps.

- ANC (Active Noise-Canceling)/AMB (Ambient)**
- Press the left earbud button twice after turning the earbuds on to enter ANC mode (Active Noise-Cancellation); this is indicated with two ascending tones
 - ANC mode reduces outside noise at least 20dB so you can listen without distraction
 - Press the left earbud button two more times while in ANC mode to enter AMB mode (Ambient); this is indicated by two high tones
 - AMB lets in high frequency sounds so you can still hear announcements
 - Pressing the left earbud two more times while in AMB mode will turn OFF Active Noise-Cancellation and is indicated with two descending tones

charging earbuds

- Place both earbuds back into the case
- Charging is complete when lights turn off
- Full charge requires approximately 1.5 hours

charging case

- Plug USB-C end of charger into the back of the case
- Plug USB end into a power supply of at least DC 5V 1A **warning:** please use UL compliant power supply
- Full charge requires approximately 2.5 hours and will provide 24 hours of earbud use
- Charging is complete when all 4 LEDs are solid white

IPX4 water resistance

- The earbuds are resistant to sweat which means they're perfect for workouts **note:** the charging case does not have the same rating and should not be used in the same conditions

single earbud use

- After pairing to your device remove either earbud from the case to enter single earbud use
- Note: ANC/AMB modes will not work when using a single earbud

proximity sensor

- When you remove an earbud while they are in use, the media you are listening to will pause automatically and restart when the earbud is replaced

troubleshooting

- If the earbuds are not working place them into the case with the lid open and reset them
- If the earbuds won't turn on, recharge the battery and try again
- If the earbuds won't charge, make sure the power supply works, is 5V+1A, not damaged and that the case is charged
- If the earbuds still won't charge, make sure the charge pins are clear of debris as this may cause a connection issue; if they are use a soft dry cloth to clean them
- If the earbuds make no sound or do not show as an available device, make sure they are not paired, if so unpair the device and repair to the desired device

need some help?

Can't get it to pair? Have a question or comment?




call us at: 877-698-4883 or: 877-MyTgtTech



online at: TargetTechSupport.com

safety

- Do not use near any water source
- Do not modify or repair this device
- Do not use chemical detergents to clean your device, use a soft dry cloth
- WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like

heyday 
FCC ID: J6833 HEYDAY Model: 0004 Input: 5V/100mA Max
Earbud Battery Capacity: 3.7V/30mAh (2.27Wh) Case Battery Capacity: 3.7V/420mAh (1.64Wh) Made in China
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If such equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the equipment user's manual for additional information for help.
Target Corp. Mpls. MN, 55403 Phone: 1-877-354-6075

 
welcome!



hey! welcome to your Heyday™ anc true wireless earbuds. let's get you set up.

DO NOT PRINT

how to fold

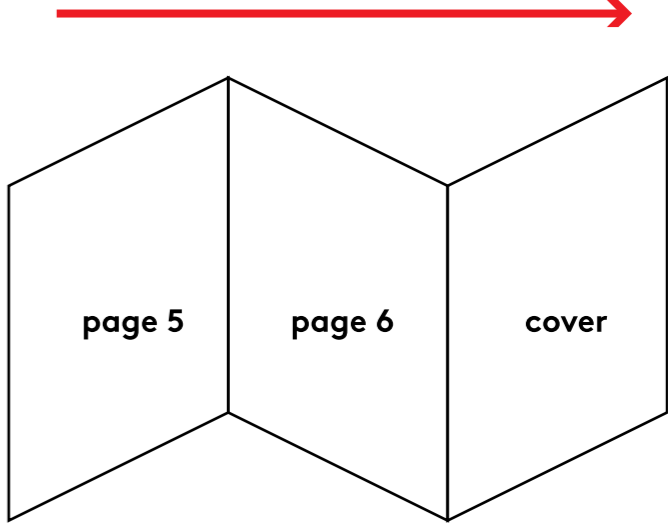


page 5

page 6

cover

back

 earbuds

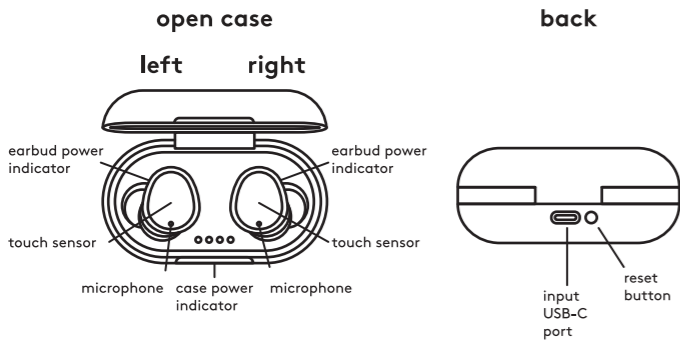

included

- TWS ANC Earbuds
- TWS ANC Earbud Case
- USB-C Charging Cable
- Small, Medium and Large Earbud Tips x 2 colors, total 6 sets

indicators

 
- Earbud Rapid Flashing Red and White - Pairing mode
- Earbud Flashes White and Fades - Paired
- Earbud Flashing Red - Low power
- Earbud Solid Red - Charging
- Earbud No Light - Charging complete
- Case One Light - 25% charged
- Case Two Lights - 50% charged
- Case Three Lights - 75% charged
- Case Four Lights - 100% charged

- Ascending Tones - Power on
- Descending Tones - Power off
- Three Rapid Tones - Ready to pair
- Single Chime - Paired
- Two Rapid Dings - Low battery
- Quick Beep - Next(R)/previous(L) song

ANC/AMB indicators


- Two Ascending Tones - ANC ON
- Two High Tones - Ambient ON
- Two Descending Tones - ANC OFF

pairing

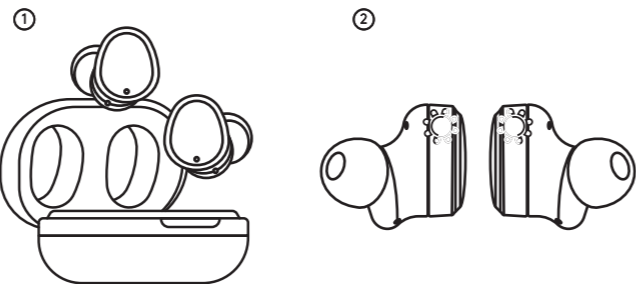

To pair the earbuds to your device for the first time open the case and remove both earbuds.

 The buds will start to flash red and white, this means that they are ready to pair.

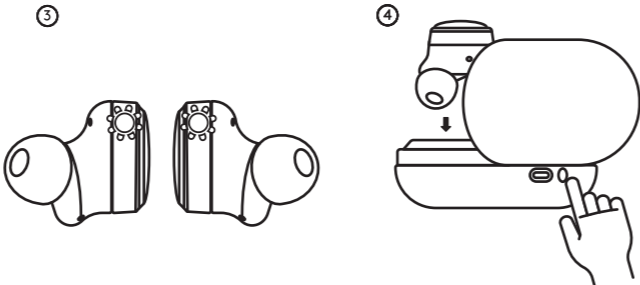


Use the Bluetooth settings on your device to pair with HEYDAY EARBUD 07. When the earbuds have successfully paired you will hear a chime and the light will turn white for five seconds and then fade.

To reenter pairing put both earbuds back into the charging case. Leave the lid on the charging case open and hold the reset button on the back for 3 seconds; the earbuds will flash red and white. To reset to factory settings hold for 6 seconds; the case power indicator will flash and sequence. After reentering pairing or resetting start the pairing process at step 1.

touch controls

 quick tip: the touch sensor is located in the center of the earbud, be sure to touch here so inputs register

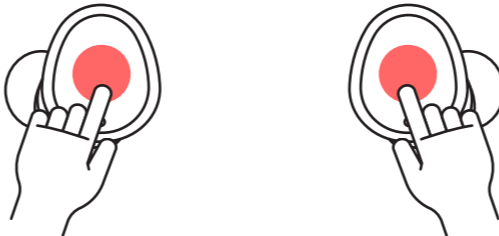

left earbud

or

right earbud

- play/pause
- answer/end call

- 1 tap

- play/pause
- answer/end call

- prev. song*
- reject call

- hold 2 sec.

- next song*
- reject call

- ANC mode*
- AMB mode*
- ANC off*
- voice assist**

- 2 taps

- voice assist*

* - indicates that the left and right earbud have a different function
** - indicates that this only works when using a single earbud

page 2

page 3

page 4