

## WARRANTY

Midland will repair or replace, at its option without charge, any Midland FRS/GMRS product that is found to have a defect in material or workmanship within One Year following the initial purchase date. This warranty does not apply to water damage, battery leak damage or abuse.

This warranty does not include any carrying cases, earphones, or antennas, which may be a part of or accessory to the product, or the cost of labor for removal or re-installation of the product in a factory authorized repair center.

For more information on how to obtain this warranty on the warranted product, contact your local Midland representative. Proof of purchase date, to:

Midland Corporation  
Customer Service Department

Midland, Missouri 64116.

This warranty is subject to specific legal rights, and you may also have other rights, which vary, from state to state.

This warranty applies only to merchandise purchased in the United States of America or any of its territories, possessions, or from a U.S. Military exchange.

[www.midland.com](#)

Printed in Thailand

# MIDLAND



## User's Guide Model M-222P

General Mobile Radio  
Featuring:

- 22 Channels
- 38 CTCSS codes
- VOX

## Frequency Chart

Channel Frequency (MHz)	Channel Number	Channel Frequency (MHz)
462.5625	12	467.6625
462.5875	13	467.6875
462.6125	14	467.7125
462.6375	15	462.5500
462.6625	16	462.5750
462.6875	17	462.6000
462.7125	18	462.6250
467.5625	19	462.6500
467.5875	20	462.6750
467.6125	21	462.7000
467.6375	22	462.7250

## Chart

Code	Freq (Hz)						
9	91.5	17	118.8	25	156.7	33	210.7
10	94.8	18	123.0	26	162.2	34	218.1
11	97.4	19	127.3	27	167.9	36	225.7
12	100.0	20	131.8	28	173.8	36	233.6
13	103.5	21	136.5	29	179.9	37	241.8
14	107.2	22	141.3	30	186.2	38	250.3
15	110.9	23	146.2	31	192.8		
16	114.8	24	151.4	32	203.5		

## Introduction

Your M-222P represents the state-of-the art in high-tech engineering for General Mobile Radio Service operation, this compact package offers excellent performance. It is a quality piece of electronic equipment, skillfully assembled with the finest components. The circuitry is all solid-state and mounted on rugged printed circuit boards. Your M-222P is designed for many years of reliable, trouble-free performance.

## FCC Licensing Information

Your M-222P operates on General Mobile Radio Service (GMRS) frequencies which is subject to the Rules and Regulations of the Federal Communications Commission (FCC). The FCC requires that all operators using General Mobile Radio Service (GMRS) frequencies obtain a radio license before operating the equipment for business, personal or recreational use. A GMRS license for an individual may be shared by immediate family members. To obtain application forms, call the FCC forms hotline at 1-800-418-3676 or visit <http://www.fcc.gov>. Please request forms **605** and **159** which include the necessary forms and instructions.

For questions concerning licensing, please contact the FCC at 1-800-418-3676 (1-888-225-5322), or go to <http://www.fcc.gov>.

re



lcohol or  
utions to  
radio.



**Do not** immerse the  
radio in water.



**Do not** use the radio  
until completely dry.



ft damp  
the radio.



**Do** dry the radio with a  
dry lint free cloth should  
it get wet.



**Do** turn off the radio  
and remove the  
batteries when storing.

## LCD Display



Channel indicator



Battery level ind



CTCSS Channel indicator



Roger Beep act

P.HIGH

Power high



Key Tone active

P.LOW

Power Low

VOX

Vox active indi



Key pad lock indicator

CALL

Call indicator

TOT

Time Out Timer indicator

To avoid accidentally changing radio operation, press  for 3 seconds. A lock icon will appear. When the lock icon is on the menu functions are disabled. When locked, you will be able to turn the radio on, increase or decrease volume, monitor, transmit and send a call, press  for 3 seconds.

The radio M-222P has 10 different call tones available. To select the call

tone, repeatedly press  until **CALL** appears. The current call tone setting will begin to flash.

Press  or  to change the call tone. The new call tone will be heard from the speaker.

Press  or the PTT button to save the new call tone and exit the

call tone menu. Setting the call tone to 0 disables the call tone function.

**Beep:** Whenever you release the PTT button, a "Roger Beep" tone is sounded to let your friends know you are finished talking. To enable this feature, turn the radio off. Press and hold  as you turn your radio on. The beep icon will appear in the upper right position of the display. Repeat the process to turn off the Roger Beep.

## Operation

**Power On/Off:** Turn the knob on the top of the radio clockwise to turn the radio on. Turn the knob counterclockwise to turn the radio off.

**Volume:** Rotate the knob clockwise to increase the volume and counterclockwise to decrease the volume.

**Talking and Listening:** To communicate, all radios in your group must be on the same channel and CTCSS code.

- For maximum clarity, hold radio 2 to 3 inches from mouth.
- Press and hold PTT button and speak in a normal voice into the microphone. The LED indicator light glows continuously while transmitting.
- To receive messages, release the PTT button.

**Disabling Button Beeps:** A feedback beep is normally sounded when a front panel button on the radio is pressed. To turn this feature on or off, turn the radio off and hold the  button 3 seconds while turning the radio on. The beep icon will be on when beeps are enabled.

tion	1
icators	1
	2
	3
	4
	5
Charts	10
S	12
	13
	Back Cover

**es with Part 15 of the FCC rules. Operation is subject to  
that this device does not cause harmful interference.**

**mpliance with the FCC's RF exposure guidelines, this  
its antenna must maintain a separation distance of at  
s from your body. To transmit, hold the radio with the  
up and away from your face, with the radio at least two  
ur face. Speak in a normal voice into the microphone.**

## Technical Specifications

### General

Frequency Range	462.50
Channels	
CTCSS Codes	
Antenna Impedance	
Speaker Impedance	
Power Supply	3 AA
Modulation Type	
Intermediate frequencies	1 <sup>st</sup> IF = 21.7 MHz


### Receiver

Sensitivity (for 12 dB Sinad)	
Audio out put power (@ 10%THD)	
Audio distortion (@ 500 mVrms)	
Signal/Noise ratio	
Image Rejection	
Adjacent channel selectivity	
Current drain (standby)	

### Transmitter

Modulation	FM 1.8
Signal/Noise ratio	
Current drain (max)	

# Buttons & Indicators

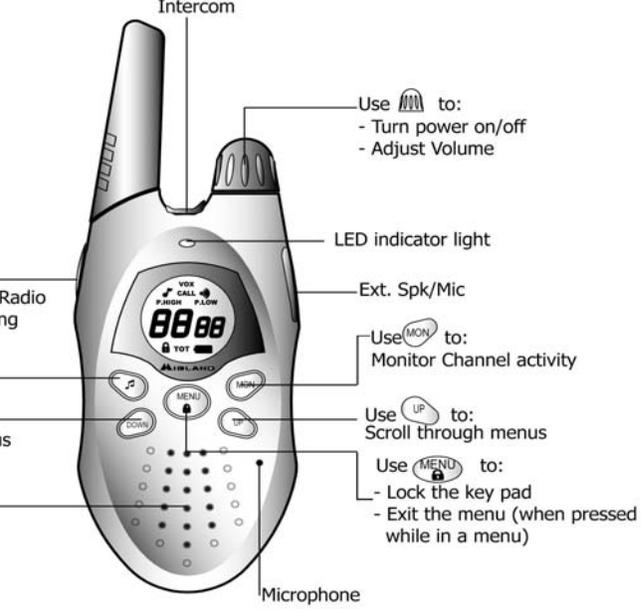

**External Speaker/Microphone Jack:** Your M-222P can be used with optional external speaker/microphone or headset, freeing your hands for other tasks. To use an optional speaker/microphone or headset:

- Open the SPK/MIC cover on right side of the radio.
- Insert the plug(s) into the SPK/MIC jacks.

**Intercom:** Your M-222P can be used with optional accessories that allow the radio to operate as an intercom system.

- Open the INT cover on top of the radio.
- Insert the appropriate plug into the INT jack.

**Belt clip:** Your M-222P comes with a belt clip. To install the belt clip:

- Slide the clip down into the slots on the back of the radio until the latching mechanism clicks.

To remove the belt clip:

- Pull outward on the latching tab while gently sliding the clip off the top of the radio.

## Batteries

The radio operates with 3 AA Alkaline batteries. The belt clip should be removed before battery installation or removal. To install or remove batteries:


1. Turn the radio facing you, gently press the triangular battery latch on the top of the radio.

2. Slide the bottom edge of the battery cover and lift the cover off.

3. Insert the batteries observing the polarity as shown.

4. Push the two alignment tabs on the top edge of the cover into their slots. Push down on the bottom of the cover to secure.

5. Batteries are not included.

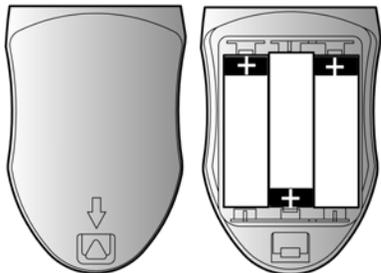

**VOX:** VOX (voice operated transmit) operation allows you to transmit using the PTT button when using a headset. To enable VOX operation:

- Open the SPK/MIC cover on right side of the radio.
- Insert the headset plug(s) into the SPK/MIC jacks.
- Set the VOX switch on headset to VOX position.
- Turn on the radio. The **VOX** icon will appear.

**Note:** The VOX level must be set properly for correct VOX operation.

**VOX Level setup:** Your M-222P has three selectable VOX levels. The level should be adjusted so that your voice causes the radio to transmit and environmental noise does not. To set the VOX level:

- With the radio on, repeatedly press the **VOX** button until the **VOX** icon appears. The VOX setting will begin to flash.
- Press the **DOWN** or **UP** arrow button to change the VOX level.
- Press the **MEMO** button or the PTT button to save the new call tone and return to the menu.

**Note:** Selecting level 0 will disable VOX operation without regard to the VOX switch setting on the headset.

**tion:** Your M-222P has 22 channels available. To change

the radio on, repeatedly press  until the current channel

on flashes.

Press  or  buttons to change the channel.

Press  or the PTT button to save the new channel and exit the



**on:** Your M-222P has 38 CTCSS codes available. The selected

code number flashes.

To select a CTCSS code for the

desired channel selected, repeatedly press  until the current

code number flashes.

Press  or  buttons to change the CTCSS code number.

Press  or the PTT button to save the new CTCSS code and exit the

code number flashes.

Setting a CTCSS code of 0 will disable the CTCSS feature. To

communicate between two M-222P radios, both the channel and

CTCSS code selections must be the same. To communicate with other channels and brands of radios the actual radio frequency and CTCSS frequency must be matched. The frequency charts at the back of this book are included for this selection. In general, the first fourteen channel selections made will communicate with most FRS radios.

**Monitor button:** Pressing and holding the  button lets you hear the radio so you can adjust the volume level of the radio level when not receiving. The  should be used to check activity on current channel before transmitting.

**Time out Timer:** The Time-out Timer feature helps extend battery life by preventing accidental continuous transmission. The radio will emit a tone if the PTT button is pressed continuously for 60 seconds and will stop transmitting.

**Power Selection:** Your M-222P has two transmit power levels. To select a power level on channels 1-7 and 15-22:

- Press  until the **P.HIGH** or **P.LOW** icon flashes.
- Press  or  for select between high and low power level.
- Press the PTT button for save and exit.

**Note:** On channels 8-14 no power level selection is possible.

**NOTICE REQUIRED**

Mobile Radio Service) frequencies  
Communications Commission) license.  
included in the owner's manual. A  
channels 1 - 7 or 15 - 22, which  
serious penalties could result for  
of FCC rules, as stipulated in  
22 (amended).

FCC which should be used for  
2P-GMRS users should also  
channels only, avoiding channel  
prudent with the length of their

could be directed to the FCC at  
available on the FCC's website at

950

the following national and  
ing exposure of human being to

Commission, Code of Federal

(ANSI) Institute of Electrical  
1-1992  
Engineers (IEEE) C95.1-1999

in and Measurements (NCRP)

ing Radiation Protection

ce with the general population  
transmit no more than 50% of  
energy exposure only when