

Mbuynow®

USER MANUAL
Model No.: D12 (MCC007)
D12 Wireless Microphone



Thank you for choosing D12 Wireless Microphone, Please read the manual carefully before use and keep it for future reference.

CE RoHS
MADE IN CHINA

Warning:
Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
---Reorient or relocate the receiving antenna.
---Increase the separation between the equipment and receiver.
---Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
---Consult the dealer or an experienced radio/TV technician for help.
RF Exposure
The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.


Table of Contents

1-5 ----- English
6-10 ----- Deutsch
11-15 ----- Français
16-20 ----- Español
21-25 ----- Italiano

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

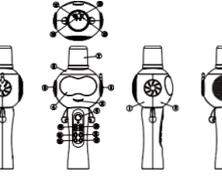

Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Operating guidance

Bluetooth connection
Press the "M" button, you will hear "Pound pound" sound, which means it enters Bluetooth mode. Turn on the Bluetooth device and search for the "D12" to pair, when you hear a "beep" sound, the pairing is successful.


Record song
1. Open the music player, download your favorite song and play.
2. Android mobile phones can record songs directly on the mobile APP via wireless.
3. Apple mobile phones need to use a recording cable to connect the microphone for song recording. When recording, insert the micro USB port into the corresponding charging port of the product, insert the 3.5mm headphones jack into the earphone jack of the Apple phone (the microphone will automatically disconnect with Bluetooth and enter the recording mode), and open the music player to start recording.

Eliminate the vocals
Press and hold the microphone's "M" button to directly eliminate the original vocals. Press and hold the "M" button again to restore the original vocals.

Warning and reminder

- Um Feuer oder Stromschlag zu vermeiden, setzen Sie dieses Produkt keiner Feuchtigkeit oder Regen aus.
- Stellen Sie das Produkt nicht in die Nähe einer offenen Flamme.
- Verwenden Sie zum Aufladen das mitgelieferte Ladegerät.
- Laden Sie den Akku bei Nichtgebrauch nicht über einen längeren Zeitraum.
- Nach einer langen Lagerzeit kann es erforderlich sein, den Akku mehrmals auf- und abzuladen, um die beste Leistung zu erzielen.
- Verwenden Sie das Produkt nicht, um etwas zu treffen.
- Nähern Sie sich nicht dem Heizgerät.
- Zerlegen, reparieren oder modifizieren Sie das Produkt nicht selbst.
- Bitte entsorgen Sie Abfallverpackungen, Batterien und alte Elektronikbauteile ordnungsgemäß.
- Bitte laden Sie einmal im Monat auf, um die Akkulaufzeit zu verlängern, auch wenn Sie das Produkt nicht verwenden.

Schlüsselfunktion

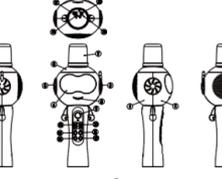

Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Disconoscimento
The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes. This product specification describes the composition and respectively the properties of our product to the best of our knowledge. We make every effort to ensure that this User's Manual is accurate and disclaim liability for any inaccuracies or omissions that may have occurred. If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.


Warenzeichen
Mbuynow, das Mbuynow-Logo und andere Mbuynow-Marken sind im Besitz von SANZOOM INTERNATIONAL LTD und können registriert werden. Alle anderen Marken sind Eigentum der jeweiligen Eigentümer.

Haftungsausschluss
Die Angaben in diesem Dokument können ohne vorherige Anwarnung geändert werden. Der Hersteller übernimmt keine Gewähr für den Inhalt und lehnt ausdrücklich die implizierten Garantien für die Handelbarkeit oder Eignung für einen bestimmten Zweck ab. Der Hersteller behält sich das Recht vor, diese Publikation zu überarbeiten und von Zeit zu Zeit Änderungen am Inhalt vorzunehmen, ohne dass der Hersteller verpflichtet ist, eine Person über eine solche Revision oder Änderung zu informieren. Diese Produktspezifikation beschreibt die Zusammensetzung bzw. die Eigenschaften unseres Produktes nach bestem Wissen. Wir bemühen uns, dass das Handbuch dieses Nutzers korrekt ist und keine Haftung für eventuell aufgetretene Ungenauigkeiten oder Versäumnisse übernimmt. Wenn Sie in diesem Handbuch Informationen finden, die falsch, irreführend oder unvollständig sind, würden wir uns über Ihre Kommentare und Vorschläge freuen.

Warning and reminder

- Pour éviter tout risque d'incendie ou de choc électrique, n'exposez pas ce produit à l'humidité ou à la pluie.
- Né placez pas le produit près d'une flamme nue.
- N'utilisez le chargeur fourni pour charger.
- Né chargez pas la batterie pendant une longue période ininterrompue sans utilisation.
- Après une longue période de stockage, vous devrez peut-être charger et décharger la batterie plusieurs fois pour obtenir les meilleures performances.
- N'utilisez pas le produit pour taper quelque chose.
- Né vous approchez pas de l'appareil de chauffage.
- Né démontez, réparez ni modifiez le produit vous-même.
- Utilisez l'éliminateur des voix d'origine fourni avec le produit.
- Utilisez le chargeur une fois par mois pour prolonger la durée de vie de la batterie, même si vous n'utilisez pas l'appareil.

Fonction clé

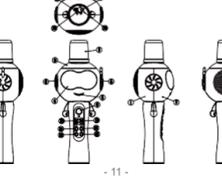


Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

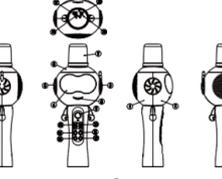

Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Operating guidance

Bluetooth connection
Press the "M" button, you will hear "Pound pound" sound, which means it enters Bluetooth mode. Turn on the Bluetooth device and search for the "D12" to pair, when you hear a "beep" sound, the pairing is successful.

Record song
1. Open the music player, download your favorite song and play.
2. Android mobile phones can record songs directly on the mobile APP via wireless.
3. Apple mobile phones need to use a recording cable to connect the microphone for song recording. When recording, insert the micro USB port into the corresponding charging port of the product, insert the 3.5mm headphones jack into the earphone jack of the Apple phone (the microphone will automatically disconnect with Bluetooth and enter the recording mode), and open the music player to start recording.

Eliminate the vocals
Press and hold the microphone's "M" button to directly eliminate the original vocals. Press and hold the "M" button again to restore the original vocals.

Disconoscimento
The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes. This product specification describes the composition and respectively the properties of our product to the best of our knowledge. We make every effort to ensure that this User's Manual is accurate and disclaim liability for any inaccuracies or omissions that may have occurred. If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.


Warenzeichen
Mbuynow, das Mbuynow-Logo und andere Mbuynow-Marken sind im Besitz von SANZOOM INTERNATIONAL LTD und können registriert werden. Alle anderen Marken sind Eigentum der jeweiligen Eigentümer.

Haftungsausschluss
Die Angaben in diesem Dokument können ohne vorherige Anwarnung geändert werden. Der Hersteller übernimmt keine Gewähr für den Inhalt und lehnt ausdrücklich die implizierten Garantien für die Handelbarkeit oder Eignung für einen bestimmten Zweck ab. Der Hersteller behält sich das Recht vor, diese Publikation zu überarbeiten und von Zeit zu Zeit Änderungen am Inhalt vorzunehmen, ohne dass der Hersteller verpflichtet ist, eine Person über eine solche Revision oder Änderung zu informieren. Diese Produktspezifikation beschreibt die Zusammensetzung bzw. die Eigenschaften unseres Produktes nach bestem Wissen. Wir bemühen uns, dass das Handbuch dieses Nutzers korrekt ist und keine Haftung für eventuell aufgetretene Ungenauigkeiten oder Versäumnisse übernimmt. Wenn Sie in diesem Handbuch Informationen finden, die falsch, irreführend oder unvollständig sind, würden wir uns über Ihre Kommentare und Vorschläge freuen.

Warning and reminder

- Pour éviter tout risque d'incendie ou de choc électrique, n'exposez pas ce produit à l'humidité ou à la pluie.
- Né placez pas le produit près d'une flamme nue.
- N'utilisez le chargeur fourni pour charger.
- Né chargez pas la batterie pendant une longue période ininterrompue sans utilisation.
- Après une longue période de stockage, vous devrez peut-être charger et décharger la batterie plusieurs fois pour obtenir les meilleures performances.
- N'utilisez pas le produit pour taper quelque chose.
- Né vous approchez pas de l'appareil de chauffage.
- Né démontez, réparez ni modifiez le produit vous-même.
- Utilisez l'éliminateur des voix d'origine fourni avec le produit.
- Utilisez le chargeur une fois par mois pour prolonger la durée de vie de la batterie, même si vous n'utilisez pas l'appareil.

Fonction clé

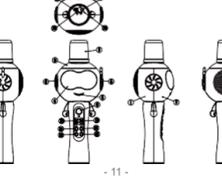


Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

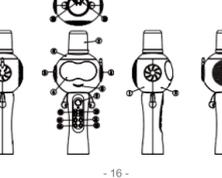


Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

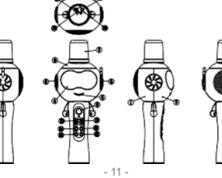

Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Operating guidance

Bluetooth connection
Press the "M" button, you will hear "Pound pound" sound, which means it enters Bluetooth mode. Turn on the Bluetooth device and search for the "D12" to pair, when you hear a "beep" sound, the pairing is successful.

Record song
1. Open the music player, download your favorite song and play.
2. Android mobile phones can record songs directly on the mobile APP via wireless.
3. Apple mobile phones need to use a recording cable to connect the microphone for song recording. When recording, insert the micro USB port into the corresponding charging port of the product, insert the 3.5mm headphones jack into the earphone jack of the Apple phone (the microphone will automatically disconnect with Bluetooth and enter the recording mode), and open the music player to start recording.

Eliminate the vocals
Press and hold the microphone's "M" button to directly eliminate the original vocals. Press and hold the "M" button again to restore the original vocals.

Disconoscimento
The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes. This product specification describes the composition and respectively the properties of our product to the best of our knowledge. We make every effort to ensure that this User's Manual is accurate and disclaim liability for any inaccuracies or omissions that may have occurred. If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.


Warenzeichen
Mbuynow, das Mbuynow-Logo und andere Mbuynow-Marken sind im Besitz von SANZOOM INTERNATIONAL LTD und können registriert werden. Alle anderen Marken sind Eigentum der jeweiligen Eigentümer.

Haftungsausschluss
Die Angaben in diesem Dokument können ohne vorherige Anwarnung geändert werden. Der Hersteller übernimmt keine Gewähr für den Inhalt und lehnt ausdrücklich die implizierten Garantien für die Handelbarkeit oder Eignung für einen bestimmten Zweck ab. Der Hersteller behält sich das Recht vor, diese Publikation zu überarbeiten und von Zeit zu Zeit Änderungen am Inhalt vorzunehmen, ohne dass der Hersteller verpflichtet ist, eine Person über eine solche Revision oder Änderung zu informieren. Diese Produktspezifikation beschreibt die Zusammensetzung bzw. die Eigenschaften unseres Produktes nach bestem Wissen. Wir bemühen uns, dass das Handbuch dieses Nutzers korrekt ist und keine Haftung für eventuell aufgetretene Ungenauigkeiten oder Versäumnisse übernimmt. Wenn Sie in diesem Handbuch Informationen finden, die falsch, irreführend oder unvollständig sind, würden wir uns über Ihre Kommentare und Vorschläge freuen.

Warning and reminder

- Pour éviter tout risque d'incendie ou de choc électrique, n'exposez pas ce produit à l'humidité ou à la pluie.
- Né placez pas le produit près d'une flamme nue.
- N'utilisez le chargeur fourni pour charger.
- Né chargez pas la batterie pendant une longue période ininterrompue sans utilisation.
- Après une longue période de stockage, vous devrez peut-être charger et décharger la batterie plusieurs fois pour obtenir les meilleures performances.
- N'utilisez pas le produit pour taper quelque chose.
- Né vous approchez pas de l'appareil de chauffage.
- Né démontez, réparez ni modifiez le produit vous-même.
- Utilisez l'éliminateur des voix d'origine fourni avec le produit.
- Utilisez le chargeur une fois par mois pour prolonger la durée de vie de la batterie, même si vous n'utilisez pas l'appareil.

Fonction clé

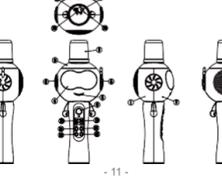


Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

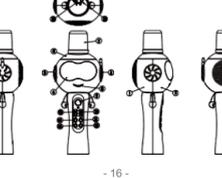


Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

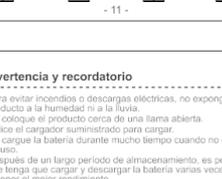

Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Operating guidance

Bluetooth connection
Press the "M" button, you will hear "Pound pound" sound, which means it enters Bluetooth mode. Turn on the Bluetooth device and search for the "D12" to pair, when you hear a "beep" sound, the pairing is successful.

Record song
1. Open the music player, download your favorite song and play.
2. Android mobile phones can record songs directly on the mobile APP via wireless.
3. Apple mobile phones need to use a recording cable to connect the microphone for song recording. When recording, insert the micro USB port into the corresponding charging port of the product, insert the 3.5mm headphones jack into the earphone jack of the Apple phone (the microphone will automatically disconnect with Bluetooth and enter the recording mode), and open the music player to start recording.

Eliminate the vocals
Press and hold the microphone's "M" button to directly eliminate the original vocals. Press and hold the "M" button again to restore the original vocals.

Disconoscimento
The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes. This product specification describes the composition and respectively the properties of our product to the best of our knowledge. We make every effort to ensure that this User's Manual is accurate and disclaim liability for any inaccuracies or omissions that may have occurred. If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.


Warenzeichen
Mbuynow, das Mbuynow-Logo und andere Mbuynow-Marken sind im Besitz von SANZOOM INTERNATIONAL LTD und können registriert werden. Alle anderen Marken sind Eigentum der jeweiligen Eigentümer.

Haftungsausschluss
Die Angaben in diesem Dokument können ohne vorherige Anwarnung geändert werden. Der Hersteller übernimmt keine Gewähr für den Inhalt und lehnt ausdrücklich die implizierten Garantien für die Handelbarkeit oder Eignung für einen bestimmten Zweck ab. Der Hersteller behält sich das Recht vor, diese Publikation zu überarbeiten und von Zeit zu Zeit Änderungen am Inhalt vorzunehmen, ohne dass der Hersteller verpflichtet ist, eine Person über eine solche Revision oder Änderung zu informieren. Diese Produktspezifikation beschreibt die Zusammensetzung bzw. die Eigenschaften unseres Produktes nach bestem Wissen. Wir bemühen uns, dass das Handbuch dieses Nutzers korrekt ist und keine Haftung für eventuell aufgetretene Ungenauigkeiten oder Versäumnisse übernimmt. Wenn Sie in diesem Handbuch Informationen finden, die falsch, irreführend oder unvollständig sind, würden wir uns über Ihre Kommentare und Vorschläge freuen.

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

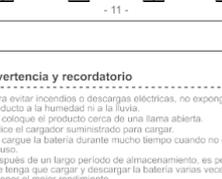


Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

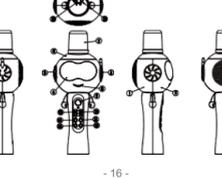


Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Warning and reminder

- To avoid fire or electric shock, do not expose this product to moisture or rain.
- Do not place the product near any open flame.
- Use the supplied charger to charge.
- Do not charge the battery for a long time when not in use.
- After a long period of storage, you may need to charge and discharge the battery several times to get the best performance.
- Do not use the product to hit something.
- Do not approach the heating device.
- Do not disassemble, repair, or modify the product by yourself.
- Please dispose waste packaging, battery, old electronic product, parts properly.
- Please charge once a month to extend the battery life, even if you do not use the product.

Key function

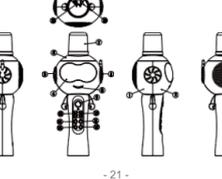

Specifications

Frequency response: 100Hz-12KHz
Pickup: Capacitive
Echo: Master control software synthesis reverb
Frequency: 100Hz-12KHz
Charging time: 3 hours
Product Weight: 297g
Product Size: 950mm*(H)220mm
Accessories: Microphone, USB Cable, Recording Cable, User Manual.

Operating guidance

Bluetooth connection
Press the "M" button, you will hear "Pound pound" sound, which means it enters Bluetooth mode. Turn on the Bluetooth device and search for the "D12" to pair, when you hear a "beep" sound, the pairing is successful.

Record song
1. Open the music player, download your favorite song and play.
2. Android mobile phones can record songs directly on the mobile APP via wireless.
3. Apple mobile phones need to use a recording cable to connect the microphone for song recording. When recording, insert the micro USB port into the corresponding charging port of the product, insert the 3.5mm headphones jack into the earphone jack of the Apple phone (the microphone will automatically disconnect with Bluetooth and enter the recording mode), and open the music player to start recording.

Eliminate the vocals
Press and hold the microphone's "M" button to directly eliminate the original vocals. Press and hold the "M" button again to restore the original vocals.

Disconoscimento
The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes. This product specification describes the composition and respectively the properties of our product to the best of our knowledge. We make every effort to ensure that this User's Manual is accurate and disclaim liability for any inaccuracies or omissions that may have occurred. If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

Warenzeichen
Mbuynow, das Mbuynow-Logo und andere Mbuynow-Marken sind im Besitz von SANZOOM INTERNATIONAL LTD und können registriert werden. Alle anderen Marken sind Eigentum der jeweiligen Eigentümer.

Haftungsausschluss
Die Angaben in diesem Dokument können ohne vorherige Anwarnung geändert werden. Der Hersteller übernimmt keine Gewähr für den Inhalt und lehnt ausdrücklich