

|  |                      |           |                             |
|--|----------------------|-----------|-----------------------------|
|  | ATW-R1820□Parts List |           |                             |
|  |                      |           |                             |
|  | PCS.                 | P.CODE    | DESCRIPTION                 |
|  | 1                    | 236911280 | PCB□ASY-R1820MAIN-D         |
|  | 4                    | 235406670 | SHIELD CASE A2              |
|  | 2                    | 235406680 | SHIELD CASE A3              |
|  | 2                    | 235406690 | SHIELD CASE A4              |
|  | 4                    | 235406700 | SHIELD CASE B1              |
|  | 4                    | 235406710 | SHIELD CASE B2              |
|  | 2                    | 235406720 | SHIELD CASE B3              |
|  | 2                    | 235406730 | SHIELD CASE B4              |
|  | 1                    | 234407440 | VOL KNOB                    |
|  | 1                    | 235300980 | CHASSIS L                   |
|  | 1                    | 235300990 | CHASSIS R                   |
|  | 1                    | 234301640 | TOP COVER                   |
|  | 1                    | 234301650 | UNDER COVER                 |
|  | 1                    | 235301020 | DIGI FFC                    |
|  | 1                    | 235301030 | SW WIRE                     |
|  | 2                    | 235301040 | RF WIRE                     |
|  | 2                    | 235301050 | ANT WIRE1                   |
|  | 2                    | 235301060 | ANT WIRE2                   |
|  | 14                   | 080802860 | SCREW M2L4                  |
|  | 8                    | 085525370 | SCREW M2.6L3                |
|  | 1                    | 234301670 | FRONT PANEL                 |
|  | 1                    | 236911330 | PCB□ASY-R1820DG-D           |
|  | 2                    | 951000550 | CN)BNC-BR 050-1400          |
|  | 1                    | 234407320 | LCD COVER                   |
|  | 1                    | 235406650 | LCD FRAME T310              |
|  | 1                    | 235406640 | LIGHT GUIDE PLATE           |
|  | 1                    | 934700130 | LCD)GS-34021-TFZC           |
|  | 1                    | 951002120 | CN)INTER CONNECTOR P01 H4.3 |
|  | 1                    | 234407360 | RUBBER KEY                  |
|  | 1                    | 234407370 | SW COVER1                   |
|  | 1                    | 234407380 | SW COVER2                   |
|  | 3                    | 234407650 | SW COVER3                   |
|  | 2                    | 234407390 | SW SHEET                    |
|  | 4                    | 235406740 | TAPPING SCREW M2L5          |
|  | 1                    | 234301660 | REAR PANEL                  |
|  | 2                    | 951001330 | CN)92M-503-3G               |
|  | 2                    | 235301070 | AFCN WIRE                   |
|  | 2                    | 082818860 | SCREW SW+ M2L6              |
|  | 1                    | 234301700 | BATTERY CASE U              |
|  | 1                    | 234301690 | BATTERY CASE L              |
|  | 6                    | 235406660 | BATTERY PLATE□              |
|  | 6                    | 235404320 | BATTERY PLATE3              |
|  | 2                    | 236402845 | WL)1007C24RD-L30            |
|  | 2                    | 236402836 | WL)1007C24BK-L30            |
|  | 3                    | 236402861 | WL)1007C24WH-L30            |
|  | 1                    | 236402844 | WL)1007C24RD-L90            |
|  | 1                    | 236402835 | WL)1007C24BK-L90            |
|  | 1                    | 234301680 | BATTERY COVER               |
|  | 1                    | 234407400 | RATING LABEL R1820D         |

[illegible]