
型号: 313pro说明书	图纸编号:
尺寸: 148*170mm	版本号: A-
材质: 105g铜版纸 正反印刷	日期: 2023

先风琴折,后左石一折,封面在上

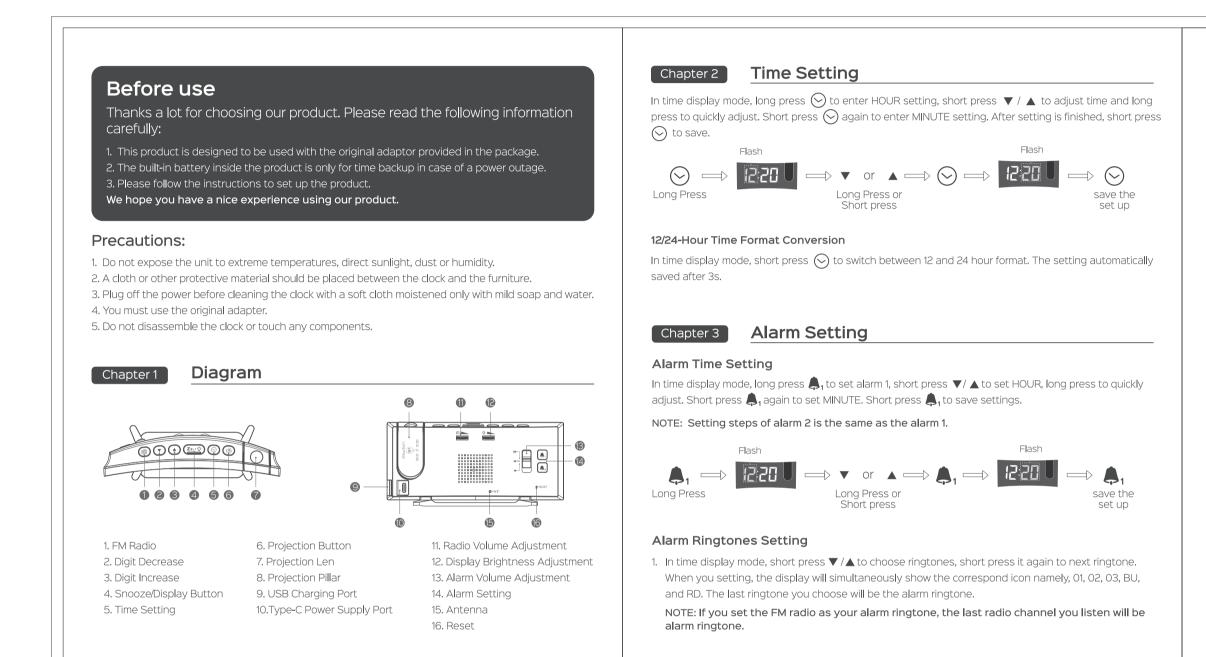

narging Fur	nction	
k is used for the po	wer supply of the clock.	
al adapter while c	harging.	
antiona		
cations		
′ ≕ 1.5A	Usb Output	5V 1.2A(Max)
)°— 90°	Projection Distance	0.5-3m
evels	Alarm Ringtones	4 ringtones + FM radio
ge Content	S	
	0 0 .	'=-1.5A Usb Output D°- 90° Projection Distance

FAQ

How to set up the projection correctly?

1. First determine the clock screen orientation

- 2. Rotate the projection column and the screen in the same direction
- 3. Press and hold the projection button for 3s to rotate the projection 180 degrees on the ceiling.
- The best projection distance is between 0.5m and 3m, please keep the projection distance in this range.

Here are some tips for FM function:

- 1. Enter FM settings, press and hold the radio button, the FM radio will automatically search and save up to 30 radio stations when you use it for the first time.
- 2. If you want to change the saved 30 radio stations, you can only change them by resetting the clock and then search for radio stations again.
- 3. Reset the clock to clear the record. There is a "RESET" hole on the back of the clock, just poke it with a needle.
- 4. Note that FM stations cannot be saved manually, they must be searched automatically, if it happens to find the station you want, it can be saved!

How do you reset the clock?

Insert a needle into the RESET HOLE on the back, and the clock will be reset and restore factory setting. The time is displayed as AM 12:00.

Why does the clock not get FM radio signals?


- 1. Make sure that the FM antenna on the back is completely untied.
- 2. Please check whether the location is remote and whether other signal receptions are normal.
- 3. Move the clock to an open space to check whether it can receive signals.
- 4. Check if there are any interference signals or devices to affect the signal such as mobile phones, keys, and so on.

Correct Disposal of this product

) It is marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

YGH-QM-03-7354

3.01.11

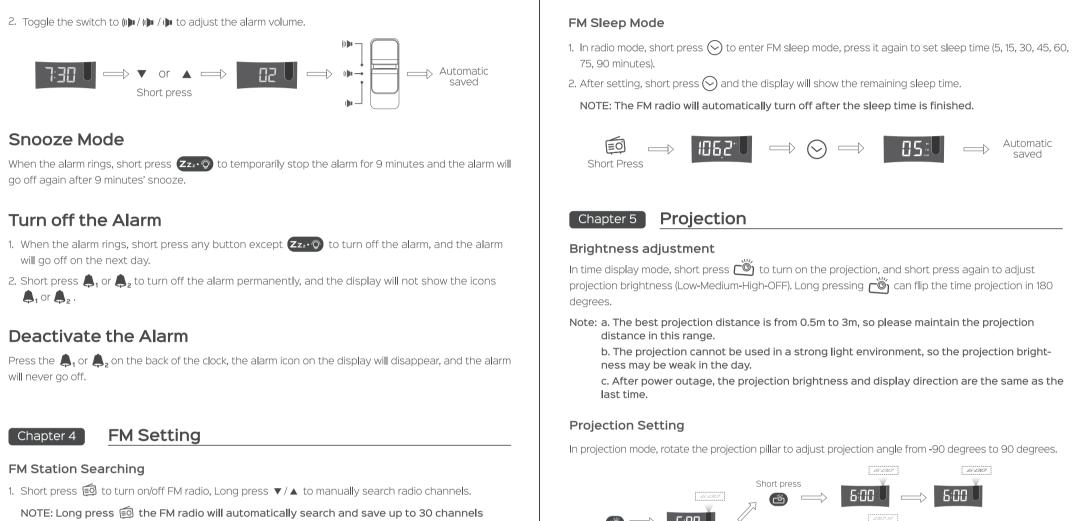

- when you use it at the first time.
- 2. When you listening to the radio, short press $\mathbf{\nabla}/\mathbf{A}$ to switch saved radio channels.
- 3. Adjust FM volume via the 🗊 🛌 button on the back.


2. After setting, short press \bigcirc and the display will show the remaining sleep time. NOTE: The FM radio will automatically turn off after the sleep time is finished.

In time display mode, short press 👜 to turn on the projection, and short press again to adjust projection brightness (Low-Medium-High-OFF). Long pressing 👸 can flip the time projection in 180

Note: a. The best projection distance is from 0.5m to 3m, so please maintain the projection

b. The projection cannot be used in a strong light environment, so the projection brightc. After power outage, the projection brightness and display direction are the same as the



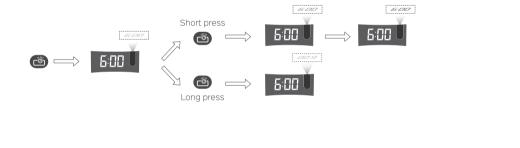

WARNING:

Do not ingest the battery, Chemical Burn Hazard (the remote control supplied with). This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment isn't closed securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

This appliance can be used by children over 8 years old, and children shall not play with the appliance. CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body. FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.



Automatic