



User Manual

Introduction

Buggies are whimsical insects with spin and go action and a little something extra! And Buggies have a unique, easy to use "bug" remote that lights up when activated, perfect for a preschooler.

Operation tips and Helpful hints

- If your vehicle starts to lose power, it may experience loss of function and performance. If this happens simply replace batteries in the vehicle and handset.
- Your Buggies R/C is operated by radio waves. It is possible that the vehicle may not perform properly due to interference with devices such as cordless phones, hair dryer, radio, walkie-talkie or other radio-controlled toys.

Remote Control

- Unscrew the battery cover on the underside of the handset controller with a Phillips screwdriver.
- Insert 2-AAA batteries(alkaline) with polarities as shown inside battery compartment.
- Replace the battery cover and screw shut.


Vehicle

- Unscrew the battery cover on top of the Buggies' head with a Phillips screwdriver.
- Install 2-AA batteries(alkaline) with polarities as shown inside battery compartment.
- Replace the battery cover & screw shut.
- Turn switch ON to start the Buggies.

Function

- Once you turn the caterpillar "ON" it will spin to left in a big circle.
- When you pressing the RED button on the handset, the caterpillar will wiggle.
- Release the red button on the handset and the caterpillar will spin.

Note: The red button on the handset must be held down in order for the caterpillar to continue wiggling.

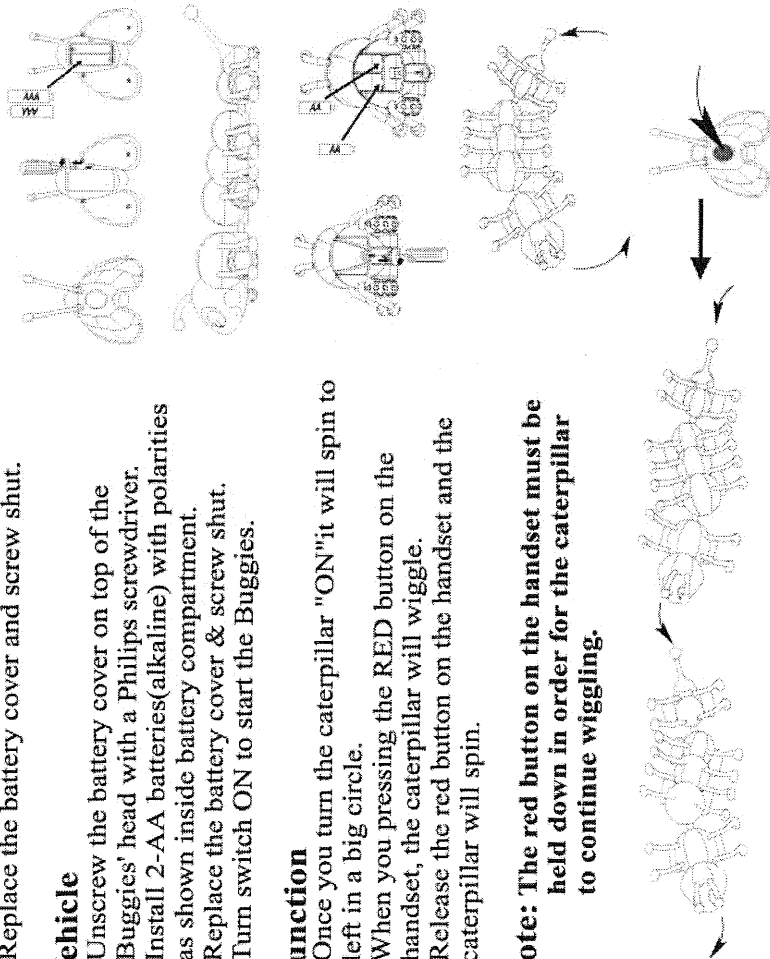

Warning: Changes or modifications to this unit not expressly approved by operator the party responsible for compliance could void the user authority to the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety Precautions

- Please read instructions thoroughly before operating this vehicle.
- Always select a safe place to play. Never drive your vehicle on populated streets or in water areas.
- Keep fingers, hair and loose clothing away from tires, wheel hubs and motors while the vehicle is switched on.
- Do not mix different brands of batteries.
- Do not mix new and used batteries.
- Do not mix alkaline, standard(Carbon -Zinc) or rechargeable (Ni-Cd) batteries.
- Batteries must be inserted with the correct polarities as shown in the battery compartments.
- Exhausted batteries should be removed from the vehicle and disposed of properly.
- Do not dispose in fire as batteries may leak or explode.
- Batteries should be replaced by an adult.
- Please keep the instructions for future reference.

NOTE: Changes or modifications not expressly approved by the manufacture could void user authority to operate this device.

Toll Free Hot Line: 800-816-1135

Kid Galaxy®

Copyright ©2005 Kid Galaxy, Inc.
RC Buggies Series

WARNING:
CHOKING HAZARD - Small parts
Not for children under 3 years.