


earfun

EarFun Free Pro

ANC Wireless Earbuds

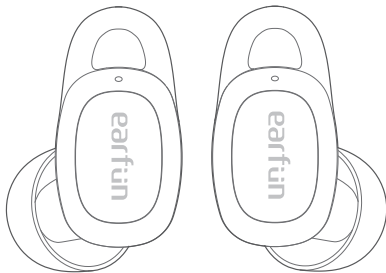

BC



User Manual

English 01

① What's in the Box

EarFun Free Pro



Charging Case



 
Ear Tips (XS, S, M, L)



Ear Hooks (S, M, L)




USB-C Cable



User Manual




② Product Diagram

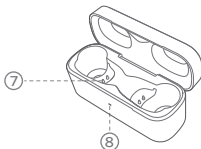


- ① Touch multifunction control ② LED indicator ③ Microphone ④ Charging contactor
- ⑤ USB-C charging port ⑥ Charging case ⑦ Charging dock ⑧ Charging case indicator

3 Charging

1. Open or close the charging case to activate the LED battery indicator.
2. Remove the film on the earbuds when taking them out of the charging case for the first time.
3. Fully charge both the earbuds and the charging case before the first-time use.
4. The charging case must be close that earbuds can start charging.
5. Fully dry off the earbuds and the USB port before charging.

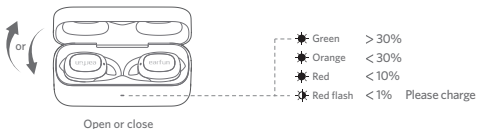

Connect USB-C cable for charging Wireless charging(not included)

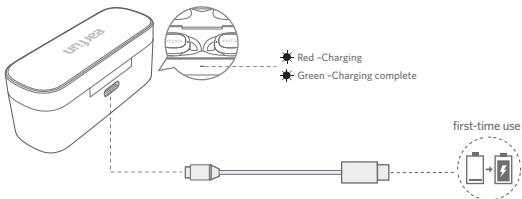


4 Specifications

Bluetooth frequency	2.402GHz-2.48GHz
Bluetooth profile	A2DP, AVRCP, HFP
Maximum working range	15m(without obstacle)
Battery capacity	50mAh x 2(earbuds); 400mAh(charging case)
Charging time	1hour(for earbuds); 2 hours(for charging case via USB-C); 3.5 hours(for charging case via wireless charger)
Playtime	Up to 7 hours, Totally 32 hours with the charging case; (varies by volume level and audio content)
Input	DC 5V / 1A
Dimentionations	66.70mm x 25.00mm x 30.77mm
Weight	42g

5 How to Fit

Note: If the earbuds is not worn correctly, it may affect the noise cancelling effect.

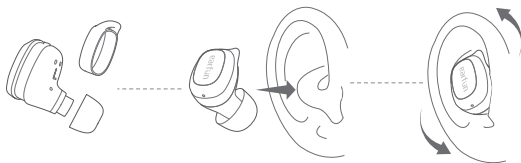

1. Choose the ear tips that fit your ears the best.
2. Identify the left and right earbuds.
3. Insert the earbuds into the canal of your ears.
4. Turn and find the most comfortable position.

 
6 Pairing Your Earbuds

1. First time pairing with device

Step 1: Open the charging case, earbuds will automatically power on and enter into pairing mode.

Step 2: Activate Bluetooth on your Bluetooth-enabled device and search for other Bluetooth devices.

Step 3: Select "EarFun Free Pro" from the list of Bluetooth devices shown (if a password is needed, type '0000').



Notes:

- The earbuds will automatically connect with the device they were last paired with when the case is open.
- Each earbud could be used independently.

2. Connect to a New Device


Step 1. Place both earbuds back into the charging case and keep the cover open, then press and hold the charging case button for 3 seconds until the pairing indicator on charging case flash white and green alternately and rapidly.

Step 2. Search on the new device and connect.

Option A

Step 1. Unpair the earbud from the Bluetooth-enabled device when it's connected. The earbud will lose Bluetooth connection to the current device and enter into pairing mode


Step 2. Search on the new device and connect.

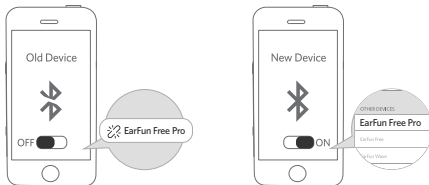

Option B

Step 1. Make sure earbuds are power on, and then touch and hold the both earbuds touch button at the same time for at least 3s until flash the blue, the earbuds will into pairing mode.

Step 2. Search on the new device and connect.

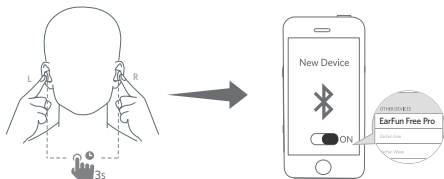


7 Functions

Power on/off

Open the charging case, the earbuds will automatically power on.

 Place the earbuds back into the charging case. Close the case and the earbuds will automatically power off.



Playing music

Play/Pause



Next track



Volume up



Volume down



 
Hands free conversation



Answer/End a call



Reject a call




Answer and transfer two calls



Activate the voice assistant




 Voice assistant




Noise cancelling control

 Noise cancelling
ambient sound
normal



Noise cancelling control


 
Low Latency ON/OFF



8 Reset and Reconnecting

If you fail to build connection between two earbuds, or between earbuds and Bluetooth device, please try the following steps:

1. Place both earbuds into the charging case.
2. Keep the charging case open, then touch and hold the button on each earbud at the same time for at least 10s until they flash in purple then earbuds have been reset successfully.
3. Delete the old connection from the Bluetooth device and reconnect "EarFun Free Pro".

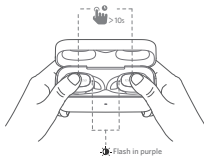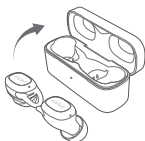

Troubleshooting

Q: Can I use both earphones separately?

A: Yes, each earbud could be used independently.

Q: The earphones are turning on, but it doesn't connect to my device?

A: To connect the earbuds to your device, please check if the Bluetooth of the device is on at first, then select 'EarFun Free Pro' on the Bluetooth list to get paired. If the earbuds still can't connect to your device, please try to reset it, or contact our customer support.

Q: Why the connection is not stable and cuts out intermittently?

A: Please make sure there are no objects between the earphones and your Bluetooth device, and make sure there is no radio or WIFI interference nearby.

Q: What is the range of Bluetooth earphones?

A: Bluetooth earphones have maximum range of 49 feet (15m, no obstacle). However, the actual range will depend on usage and environment.

Q: Is there volume control on the earphones?

A: Yes, touch L earbud once decreases the volume and touch R once could increase it.

Q: My earphones will not switch on.

A: Please recharge it and make sure it has enough battery power. If it is fully charged and still nothing happens or if you are not able to charge the unit, please contact our customer support for warranty cover.

Q: Is the charging case waterproof?

A: No, the earbuds are IPX5 sweat & waterproof, but the charging case is not waterproof.

Q: Will the earbuds shut off automatically?

A: The earbuds will remain on as long as they are connected to a device. If no audio is in use, they will enter power-saving mode and wake up once audio is played. If the earbuds are not connected with any devices, they will automatically shut off in 30 minutes.

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

the battery shall not be exposed to excessive heat such as sunshine, fire or the like



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Earfun Technology(HK) Limited is under license.

Other trademarks and trade names are those of their respective owners.

EU Declaration of Conformity

EarFun Technology(HK) Limited hereby declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and RoHS 2011/65/EU Directive. The declaration of conformity may be consulted in the support section of our Web site, accessible from www.myearfun.com

NCC聲明：

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
應避免影響附近雷達系統之操作



® 211-200914

FCC ID:2AVIT-TW301

