

SYLVANIA

Bluetooth Speaker with Drum

MODEL NO.: SP770

INSTRUCTION MANUAL

FCC ID: RSB-SP770



* The picture is only provided for reference. Please refer to the actual unit!
SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

Instructions for use

Please read all instructions carefully

Getting started

Remove the unit from the box

Remove any packaging from the product

Place the packaging inside the box and store for safekeeping

In the box

Bluetooth Speaker with Drum Kit

AC/DC Adaptor


Instruction Manual

Drum sticks


Features

- 7 drum pads
- DJ sound effects
- Bluetooth wireless connection functionality
- Speaker lights
- With USB and SD card support
- 5 bands equalizer control
- Built in FM radio
- 3.5MM aux in jack
- Microphone input
- Guitar input

Product Diagram
TOP:

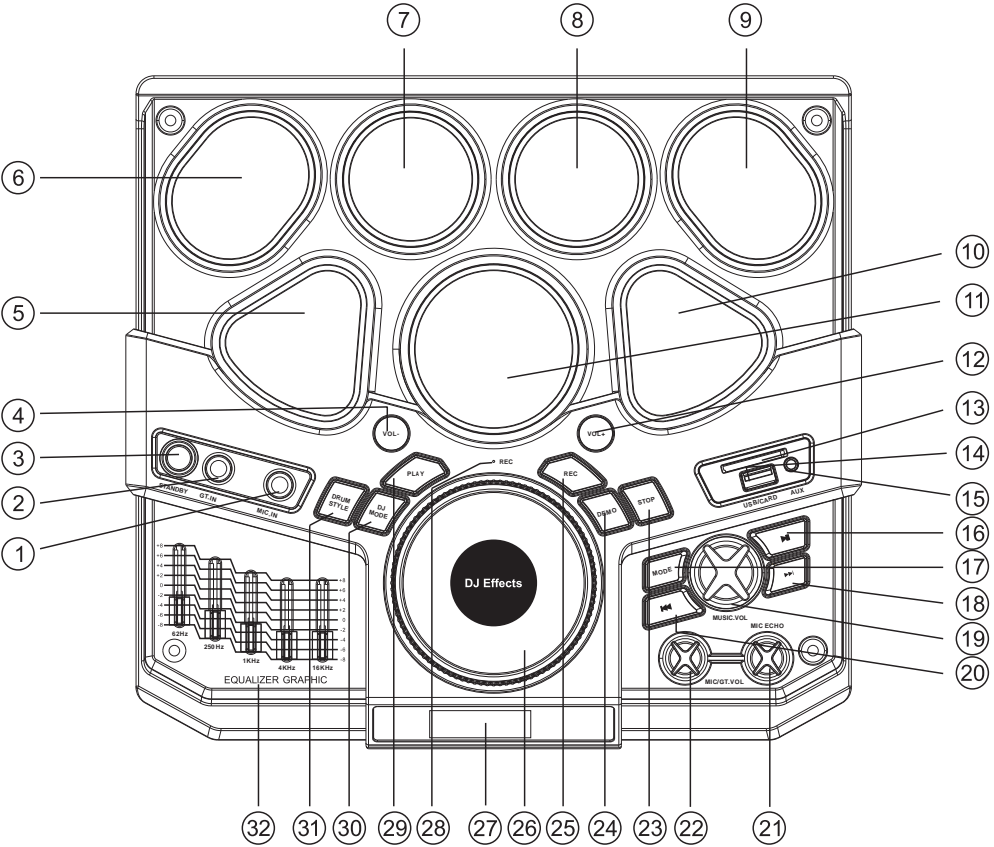

1	MIC.IN	Microphone input
2	GT.IN	Guitar input
3	STANDBY	Switch device into/out of standby mode
4	VOL-	Reduce volume of drum effects
5	Drum pad	Drum pad (Closed Hi-hat)
6	Drum pad	Drum pad (Ride)
7	Drum pad	Drum pad (TOM2)
8	Drum pad	Drum pad (TOM1)
9	Drum pad	Drum pad (Crash cymbal)
10	Drum pad	Drum pad (Snare drum)
11	Drum pad	Drum pad (Bass drum)
12	VOL+	Increase volume of drum effects
13	SD card port	SD card port
14	USB port	USB port
15	Aux input	Aux input (3.5mm)
16	▶	Start/stop playback
17	MODE	Select mode playback made (AUX/Bluetooth/USB/SD/FM)
18	▶▶	Play next track/channel
19	Vol +-	Master volume controller
20	◀◀	Play previous track//channel
21	Echo +-	Microphone echo effect controller
22	MIC/GT +-	Microphone/Guitar volume controller
23	STOP	Stop demo songs playback
24	Demo	Play pre-installed demo songs
25	REC	Drum effects record (Up to 800 notes)
26	DJ effects	DJ sound effect knob
27	LED display	LED display
28	Record light	REC light up red during recording
29	Play	Play record drum effects
30	DJ MODE	DJ sound effects mode select (11 modes)
31	DRUM STYLE	Modify drum effect pitch
32	EQUALIZER GRAPHIC	Make equalizer settings

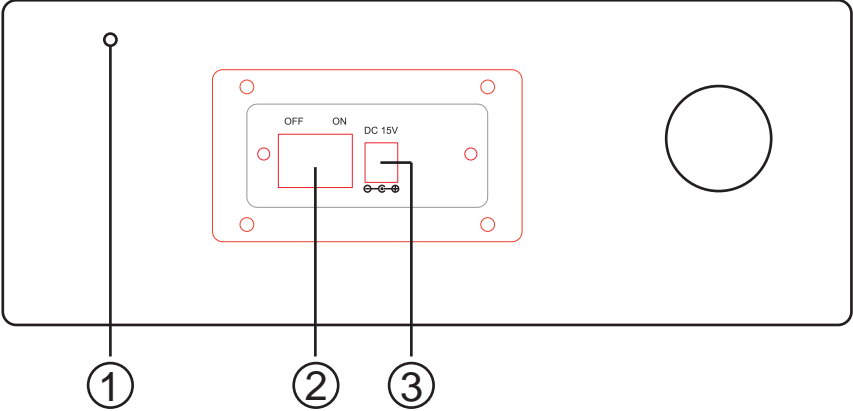

1	FM antenna	FM antenna
2	Power switch	Switch device of/off
3	DC in socket	power supply (DC 15V)

INSTRUCTION FOR USE

Connecting the power

Plug the DC jack of AC/DC adaptor into the DC socket of the unit.

Turning on/off the speaker

Switch the POWER switch on the rear of the speaker to the ON position to switch the device on. Press the standby button the top panel to turn on/off the unit.

Drum effects

There are seven drum effect pressure pads on the top of the speaker that you can use to generate various drum effects.

- Press one or more of the seven drum effect pressure pads to generate various Drum effects.
- Press the DRUM STYLE button to select various sound effects for the drum effect pressure pads.
- Press the VOL+ button to increase the volume of the drum effects and the VOL- button to decrease the volume of the drum effects.

Record drum effects

You can record the drum effects that you create or a drum effect sequence to play it back later from the speaker. Press the REC button to start recording. The REC LED lights up red. Generate the desired drum effects that you want to record. The recording is stored in the party speaker's internal memory (up to 800 notes).

Press the PLAY button to play your recording. The REC LED goes out.

Demo songs play/stop

You can play the pre-installed demo songs.

Press the DEMO button to play demo songs, press again to switch songs. Press the STOP button to stop demo songs.

DJ sound effect

You can play DJ sound effects.

Turn the DJ sound effects knob to have DJ sound effects.

Press the DJ MODE button to change DJ sound effects style.

Connect Bluetooth audio output device

To connect a Bluetooth audio output device (e.g. smart phone or tablet PC), proceed as follows: Switch the speaker on.

- Press the MODE button once or repeatedly until the screen shows 'bt' to switch to the Bluetooth mode. The speaker is now in pairing mode. During this time, 'bt' flashes on the display.

The party speaker attempts to automatically connect itself to the last audio output device connected via Bluetooth. If this is not possible, the speaker sends its device identification via Bluetooth and bt flashes on the screen.

- Switch on the Bluetooth function on your audio output device and enable search mode. On your audio output device select your speaker **SYLVANIA SP770** from the list of available devices and link the devices. You may find more information about the Bluetooth function of your playback device in its operating instructions.
- If you are prompted to enter a password, enter 0000. After successful Bluetooth paired, a beep sounds will come up and the 'bt' on the screen will be solid.
You can control how tracks are played and the volume on your external device and on the party speaker. The functions available when using an audio playback device on the party speaker depend on your external device and the software used.

Connecting an external playback device VIA AUX IN

You can use the AUX IN connection to connect an external playback device (for example a CD player or MP3 player).

- Switch the party speaker ON.
- Switch on your external device. Plug the end of a 3.5 mm cinch cord (not supplied with the device) into the AUX IN plug on the top of the speaker.
- Connect the other end of the cord to your external device. Switch on your external device.
- Press the MODE button several times until you see AUX in the display. The audio signal from your external device will now be played back.

The track playback is controlled via the external device. The volume can be controlled both on your external device and the speaker.

Inserting USB memory sticks

- Insert the USB drive into the USB slot on the top of the party speaker.
- It will enter to USB mode, the display will appear on the display. And it will play the songs from the USB immediately.
- Due to the numerous different file systems and file formats, compatibility with the connected memory media cannot be guaranteed.
- Depending on the size of the data medium, it may take some time for the system to be detected.
- The supported file format is MP3/WMA.
- USB sticks up to 32 GB are supported.
- External hard disks are not supported.

Inserting SD memory card

Insert the SD memory card into the slot on the top of the party speaker. The card's contacts show towards the front of the device. Sd will appear in the display.

Please note the following when connecting an SD memory card:

- Due to the numerous different memory cards on the market, compatibility with the connected memory media cannot be guaranteed.
- Depending on the size of the data medium, it may take some time for the system to be detected.
- The MP3/WMA file format is supported.
- SD memory cards up to 32 GB are supported.

FM function

- Press the MODE button once or several times to select the operating mode you require. The frequency will appear on the display.
- Press and hold the ►|| button to search channels automatically. It will store all stations after stop searching.
- Press the ►► or ◀◀ button to next or previous channel.

Connect guitar

The guitar can be used in any operating mode. To connect the guitar, proceed as follows:

- Insert the connection cord (6.3 mm cinch) for the guitar into the guitar plug GT in.
- Connect the guitar with the connection cord. Use the MIC/GT volume knob to select the desired guitar volume

Connecting a microphone

- Insert the cord of the microphone supplied into the MIC plug on the top of the speaker.
- Use the MIC/GT volume knob to select the desired microphone volume.
- Use the MIC ECHO knob to set any desired echo sound effect for the microphone.

DO’S and Don’ts

Read the following recommendations before using the speaker. Following these you will be able to enjoy the product for many years.

- Don’t use abrasive cleaning solvents to clean the speaker.
- Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, distort certain plastic parts.
- Don’t attempt to disassemble the speaker as it may get damaged if you are not professional.
- Do not expose the speaker to heat or fire. Avoid storage in direct sunlight.
- Do not subject the speaker to mechanical shock.
- Do not add any fluids or solids to your speaker.
- Do not use the speaker if it has been damaged in any way,

Specifications

Bluetooth specification	Bluetooth 4.2
Operating distance	10 meter
Speaker output	50W
Size	402*350*221mm
Weight	5.7KG

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate uses and can radiate radio frequency energy and, if, not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that the interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult dealer or an experienced radio/TV technician for help changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including the interference that may cause undesired operation.

For service assistance and product information, please call:
1-800-968-9853.

Curtis international Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3

LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtisint.com before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

Canada
C.I. Service Dept.
7045 Beckett Drive, Unit 15
Mississauga, ON
L5S 2A3

U.S.A
Curtis International Ltd
c/o CNR International
2626 Vista Industria
Compton, CA 90221
U.S.A.

For service assistance and product information, please call: 1-800-968-9853.

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

To begin the **warranty repair process**, please note that you **MUST** obtain a **return authorization number** **prior** to returning your product for warranty based support. This can be placed under the 1-800-968-9853 contact line.

Model No. _____ Date Purchased _____ Serial No. _____