


背面

### Welcome

Official package including  
Headphone\*1  
Charging cable\*1  
AUX audio cable\*1  
External microphone\*1  
User manual\*1



**Bluetooth Headphone**

Please read this manual carefully before you operating. You set and retain it for future reference.

### Before use

#### Important Safety Instructions

1. Read these instructions.
2. Read these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not use attachments/accessories specified by the manufacturer.

8. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


#### WARNINGS/CAUTIONS

- Do NOT use the headphones at a high volume for any extended period.
- To avoid hearing damage, use your headphones at a comfortable, moderate volume level.
- Turn the volume down on your device before placing the headphones on your ears, then turn the volume up gradually until you reach a comfortable listening level.
- Do NOT use your headphones while driving or phone calls or any other purpose.
- Do NOT use the headphones with noise cancelling on at the same time the ability to hear surrounding sounds may present a danger to yourself or others, such as while riding a bicycle or walking in or near traffic, a construction site or railroad, etc., and follow applicable laws regarding headphone use.
- Remove the headphones, or raise the headphones with noise cancelling off and adjust your volume, to ensure you can hear surrounding sounds, including alarms and warning signals.
- Be aware of how sounds that you rely on as reminders or warnings may vary in character when using the headphones.

- Do NOT use the headphones if they emit any loud unusual noise. If this happens, turn the headphones off and contact KFC customer service.
- Remove headphones immediately if you experience a warming sensation or loss of audio.
- Do NOT use mobile phone adapters to connect headphones to analogue seat jacks, as this could result in injury or property damage due to overheating.
- Do NOT use the headphones as aviation communication headsets.
- Contains small parts which may be a choking hazard. Not suitable for children under age 3.
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.
- To reduce the risk of fire or electrical shock, do NOT use headphones or product to melt liquids or moisture.
- Do NOT expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near this product.
- Do NOT make unauthorized alterations to this product.
- Use this product only with an agency-approved power supply that meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.
- Do not expose products containing batteries to excessive heat (e.g., from storage in direct sunlight, fire, or the like).
- Do NOT wear the headphones while charging.

Company Shenzhen Qiao Technology Co., Ltd.  
Address: Room 315-316, Building D, Nianxin Industry International, Nanchang District, Donggong City, Guangdong Province, China  
Website: <http://kfc.cn>  
Email: [support@185.com](mailto:support@185.com)

### Overview



### Specifications

Model: HSP-HFA200A/VRCP  
Bluetooth version: V5.3  
Power input: DC 5V  
Noise reduction depth: >38dB  
Charging interface: TYPE-C USB  
Battery capacity: 100mAh  
Charging time: about 2 hours  
Supporting agreement: HSP/HFA200A/VRCP

The headphones do not play audio while charging.


**Buttons**

For assistance with this product, please contact our customer service at the website where you purchased the product, leave a message or email us, we will answer as soon as possible.

### How to charge

For the first time use, please fully charge the product.  
Charging: The powerheadphone light is solid red  
Full power: The red light of the power indicator is off  
Charging time: 2 hours  
Low battery alarm: Voice prompt once when the battery is low.

### Instruction

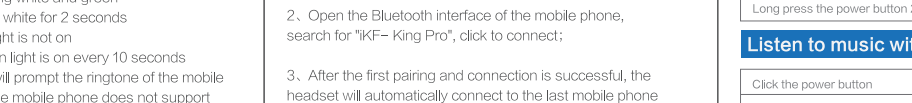

Power button  
ANC button  
Signal light  
Charging port  
Signal light

### Warnings

When charging the headset, avoid damage to the battery. It is recommended to use a 5V/2A charging head to charge. The power of the charging head should not exceed 24W. Avoid using car-charged power supply power bank or charging head with unknown power for charging. There may be situations where charging cannot be performed or the power consumption is too fast and the signal is poor.

### Headphone Status

#### LED Indicator

Turn on: Signal light flashing white and green  
Turn off: The signal light is white for 2 seconds  
Headphone is in standby mode when the signal light is off  
Incoming call status: Green light is on every 10 seconds  
(When a call comes in, it will prompt the ringtone of the mobile phone synchronously. If the mobile phone does not support synchronization ringtone, prompt tone "Discontinuous")

#### How to check the Battery Status of Headphones

After power on, click the ANC button, the power indicator will light up for 2 seconds  
Cycle through "Voice Mode/Auxiliary Mode/Ambient Sound Mode"  
Green light flashes 3 times slowly: 75%~100%  
Green light flashes 3 times slowly: 50%~74%  
Green light flashes 2 times slowly: 25%~49%  
Green light flashes 1 times slowly: <24%  
Note: After plugging in an external microphone, ANC mode cannot be entered on an external microphone.

#### Power button and Turn off

Turn on: Long press the power button 2 seconds and hear the prompt "tune" that it is turned on;  
Turn off: Long press the power button 3 seconds and hear the prompt "tune" that it is turned off;

### How to connect

1. Long press the power button 2S and hear the English prompt "Power on" that it is turned on;
2. Open the Bluetooth interface of the mobile phone, search for "KFC-King Pro", click to connect;
3. After the first pairing and connection is successful, the headset will automatically connect to the last mobile phone with a connection record every time it is turned on, and there is no need to repeat pairing.

#### Call with headset

Operation	Answer
Double-click the power button	Hand up
Press the power button	Long press the power button 2S
Long press the power button 2S	Incoming telegram (reject)

#### Listen to music with headset

Operation	Answer
Click the power button	Play/Pause
Click the + button	Volume up
Click the - button	Volume down
Long press the + button 2S	Next song
Long press the - button 2S	Previous song
Triple tap the power button	Voice up-voice assistant

#### Three modes switch

[Long press] "ANC" button for 2 seconds  
Cycle through "Voice Mode/Auxiliary Mode/Ambient Sound Mode"  
Note: After plugging in an external microphone, ANC mode cannot be entered on an external microphone.

#### Turn on/Turn off game mode

3 click the "ANC" button, and you will successfully enter the game mode when you hear the prompt "game"  
3 click the "ANC" button, and you will successfully exit the game mode when you hear the prompt "game";

### Wired connection

Use the audio cable to connect a non-wireless device or if the headphone battery is depleted.  
1. Insert the cable into the 3.5 mm jack on the right earcup.  
2. Insert the other end of the cable into the 3.5 mm jack on your device.  
\*Bluetooth cannot be turned on under wired connection

### TIPS

1. Make sure the headset and the connected device are within a valid connection range and there are not too many obstacles that interfere with the signal;
2. It is normal for the headset to be disconnected occasionally, just like WIFI, occasionally the connection is unstable. It may be due to interference in signal transmission. Please wait a moment or change the location to resolve;
3. When the headset cannot be connected to the device, please check whether the headset has power or is connected to other devices;
4. Please fully charge the headphone once a month. If the Headphone is not used for a long time, the battery of the Headphones may be damaged.

The sound insulation and sound leakage of headphones are related to the way of wearing the headphones and the volume of the headphones.  
Please wear the headphones in a proper way. The wrapping of the headphones in time according to the actual comfort of use. Please close the earhead foam part of the headphone as much as possible.  
Please use a standard-compliant charging head.  
Insert the configured microphone into the microphone jack. Calls/voices are clearer.  
There may be third-party software incompatibility problems during the use of the external microphone, resulting in the inability to receive audio, and the actual experience may be slightly different.

### Limited warranty

Warranty period: 1 year from the date of product receipt

During the warranty period of the product, due to the quality of the product itself, please contact us with the warranty card and shopping records to receive a return authorization / free maintenance and shipping instructions.

#### Fault Table

1. Bluetooth headset cannot hear sound;
2. The other side cannot hear the voice during the call;
3. Unable to charge Bluetooth headset

The following conditions will not provide free repair

1. Unauthorized maintenance, misuse, collision, neglect, abuse, accident, alteration, or damage or alteration of the appearance of the product;
2. The product exceeds the warranty period specified by the company;
3. Damage caused by self-disassembly;
4. Failures caused by accidents such as water ingress or falling, squeezing, etc.

5. Normal wear and dirt caused by use, such as scratches, damage caused by contact with chemical reagents, contact with sharp objects, etc.

6. Outer packaging and accessories (e.g., services other than the products promoted by the sales staff, and additional configurations and gifts).

7. Improper storage of the product is expected to abnormally humidity and temperature for a long time, the performance is damaged;  
8. Damage or damage caused by force majeure

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) if this device does cause interference, the user must stop using the device immediately.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

The equipment generates, uses, and can radiate radio frequency energy, and if not used and not maintained in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to take the following steps to resolve the problem:

1. Reorient the equipment to a different location or orientation.
2. Reorient the external antenna.
3. Reconnect the equipment to a different power outlet.
4. Contact the dealer or an experienced radio/television technician for additional suggestions.

The dealer or user should be contacted if the problem persists.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device has been tested and found to comply with the following requirements. This device can be used without a separate license under certain restrictions.