

六折页 单面90x170mm 材质120G 双铜

SAFETY PRECAUTIONS

- When the room temperature is below 32°F / 0°C, please empty the water tank. If the water is allowed to turn to ice it can damage the components.
- Please use purified or distilled water so that your atmosphere will not be damaged due to impurities in the water. If you use normal tap water you may notice a white buildup of calcium or lime in the diffuser.
- The maximum water volume is 16.9 oz/500 mL. Exceeding the max capacity will affect the atomization effect or cause water leakage and damage to the machine.
- Do not let water splash into the base to avoid damaging the internal parts.
- After you use, please turn off the power switch. When the water tank is present damage to the components. Do not leave the water sitting in the tank for several days without use.
- When cleaning or adding water to the device, always remove the AC adapter from the outlet. Do not insert or remove the AC adapter with wet hands.
- Do not replace the power cord without authorization.
- In case of abnormality, do not attempt to disassemble or repair the device yourself. Please contact the nearest authorized service center for assistance. Please stop operation and send an email to support for help.

WARNING Cancer and Reproductive Harm
www.p6swarnings.ca.gov

1

CONTROL Panel

 


Function selection	
Switch	Power on / Power off
Timer	Power: 1-4 hours Start delay: 1-4 hours
Timer or start delay	• Press the power cable, press the icon to start the timer. • To cancel the start delay timer, press the power switch
Light brightness	1. Low 2. Medium 3. High
Lighting effect	Flashing light Purple-Red-Gradient
Mist level	1. Low (soft flame effect) 2. High (violet flame effect) 3. Sleep mode (light off with low mist level)
Low water icon	Use automatically power off (Click power switch to cancel this low water warning. If the water diffuser will restart after water refilling)

- Notes:
- When power on, there will be a beep sound.
 - There will be a beep each time you press a button.
 - When there is no water in the tank you will hear 2 beeps over 5 seconds and the diffuser will automatically power down. The low water icon will appear on the control panel.
 - When the timer is on you will hear a long beep sound before the diffuser automatically shuts down.

2

PARTS

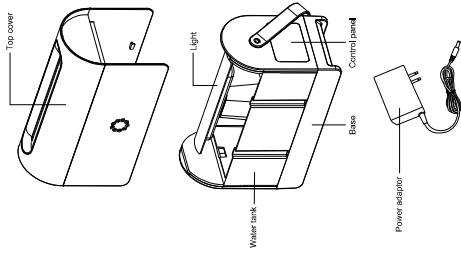

Note: The accessories in the package are exclusively used for the product. The appearance and quantity may be different for different batches. Please contact support if you have any questions.

3

SPECIFICATIONS

Model	LF500MS
Rated Voltage	DC 24V
Rated Power	12W
Water Tank Capacity	500 ml / 16.9 oz
Mist Output	35-65 ml/hr
Timer Setting	1-6 hours
Weight	2.0 lbs
Dimensions	9.4 x 5.9 x 6.3 in

OPERATION

- Remove the top cover.
 - Add water to the max fill line.
- Note:
- The maximum water volume is 16.9 oz/500 mL. Exceeding the max capacity will affect the atomization effect or cause water leakage and damage to the machine.
 - When the purified or distilled water so that your atmosphere will not be damaged due to impurities in the water. If you use normal tap water you may notice a white buildup of calcium or lime in the diffuser. While not harmful, these deposits may cause a white powdery residue on the surface of the machine. These deposits can be cleaned with distilled white vinegar.

4

TROUBLESHOOTING

Symptom	Possible Causes	Approach
The power indicator light does not light up and the diffuser cannot be started	No power	Reconnect the power adaptor and try again
The indicator light is on, but there is no mist produced	The water tank is short of water or has too little water	Add purified water to the tank
The humidifier emits a weird smell	Too much water	Pour water lower than the max capacity line. Exceeding the max capacity line will affect the atomization effect.
Too little mist produced	There is scale in the water tank and place it in the tank for 12 hours to verify	Remove the scale in the water tank and place it in the tank for 12 hours to verify. Clean the water tank with pure water.
The diffuser is too noisy	There is dirt on the atomizing pipe or the water tank	Clean the water tank and add pure water
The diffuser is too noisy	Too much water	Pour water lower than the max capacity line will affect the atomization effect.
The diffuser is too noisy	Too little water	Add water to the tank

■ The above methods cannot be improved. Please consult the customer service for further assistance.


5

CLEANING INSTRUCTIONS

- Drain the water remaining in the water tank.
- Ensure the air outlet side is facing up during cleaning to avoid moisture getting inside the machine.
- Do not use any benzene, paint thinner, alcohol, or other types of chemicals during cleaning. Doing so may cause damage to the machinery.
- Use a soft cloth to clean the water tank, the diffuser, and the nozzle-type ultrasonic remaining inside once the trigger of emitting noxious gases. Disinfect while using is recommended for cleaning.
- If you do not intend to use the product for an extended period of time, clean it and dry it thoroughly before storage.

6

3. Place the top cover back onto the diffuser.

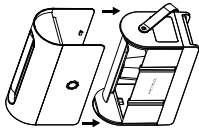

4. Insert the power adapter cord.



5. Press the power button and you will hear a beep sound.

- The default settings are as follows:
- Power: 1 hour
 - Brightness: High
 - Lighting effect: Full bright

4

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference that may be received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device has been tested and found to comply with the requirements for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the shielded power cord to a different outlet than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for this equipment to ensure proper use. Please follow operation instructions as documented in this manual. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. The maximum SAR for this device is 1.6 W/kg. The availability of some specific channels and/or operational frequency bands are country dependent and are determined programmed at the factory to match the intended destination. The maximum SAR is not accessible by the end user.

10

Step 3

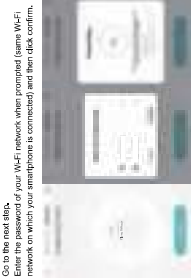


Important note:

The flame diffuser must be connected to a 2.4 GHz Wi-Fi network. If your router supports both 2.4 GHz and 5 GHz Wi-Fi networks, please select the 2.4 GHz Wi-Fi band.

Step 4

The device is now connected successfully.

You can find the diffuser in the device list.

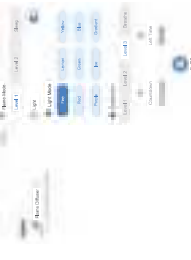

6

6. Entering the Wi-Fi connection mode.

- Make sure your Wi-Fi router supports 2.4GHz (NOT 5GHz) and 802.11n/b/g/n.
- Make sure your Wi-Fi router supports 2.4GHz band or dual band.
- A smartphone or tablet supporting a 2.4GHz network.
- Download the App named ARIA from the App Store (iOS devices) or Google Play (Android devices).



Step 1

Long press the on the control panel, and the on the screen will blink quickly.



Step 2

Click the power button on the 2.4 GHz network. The flame diffuser will use the 2.4 GHz network.



5

LIMITED WARRANTY

We provide a 1-year warranty. For more information, please visit www.airthermal.com/warranty.

- **What's covered?**
Defects due to faulty materials and/or workmanship of the product.
- **What's not covered?**
1. Damage caused by the owner when attempting to fix or altering the product.
2. Damage caused by misuse, abuse, neglect, alterations or unauthorized repair.
3. Natural degradation.
- **Warranty Period**
The limited warranty is effective from the date of original purchase and will last for 1 year.
- **Who's covered?**
The limited warranty is only effective for the original purchaser. It is non-transferable.
- **How to request warranty services?**
If you have a problem with your product, please email support@airthermal.com. Our technical service will address your issue as soon as possible.

ATTRIBUTIONS

Apple App Store is a trademark of Apple Inc., registered in the U.S. and other countries. The use of the Apple logo, Apple, or its affiliates' trademarks of Apple Inc., registered in the U.S. and other countries, is a trademark of Apple Inc., registered in the U.S. and other countries. The Bluetooth wordmark and logo are registered trademarks owned by Bluetooth SIG, Inc. All other trademarks are the property of their respective owners.



11

LIMITED WARRANTY

We provide a 1-year warranty. For more information, please visit www.airthermal.com/warranty.

- **What's covered?**
Defects due to faulty materials and/or workmanship of the product.
- **What's not covered?**
1. Damage caused by the owner when attempting to fix or altering the product.
2. Damage caused by misuse, abuse, neglect, alterations or unauthorized repair.
3. Natural degradation.
- **Warranty Period**
The limited warranty is effective from the date of original purchase and will last for 1 year.
- **Who's covered?**
The limited warranty is only effective for the original purchaser. It is non-transferable.
- **How to request warranty services?**
If you have a problem with your product, please email support@airthermal.com. Our technical service will address your issue as soon as possible.

ATTRIBUTIONS

Apple App Store is a trademark of Apple Inc., registered in the U.S. and other countries. The use of the Apple logo, Apple, or its affiliates' trademarks of Apple Inc., registered in the U.S. and other countries, is a trademark of Apple Inc., registered in the U.S. and other countries. The Bluetooth wordmark and logo are registered trademarks owned by Bluetooth SIG, Inc. All other trademarks are the property of their respective owners.



11