


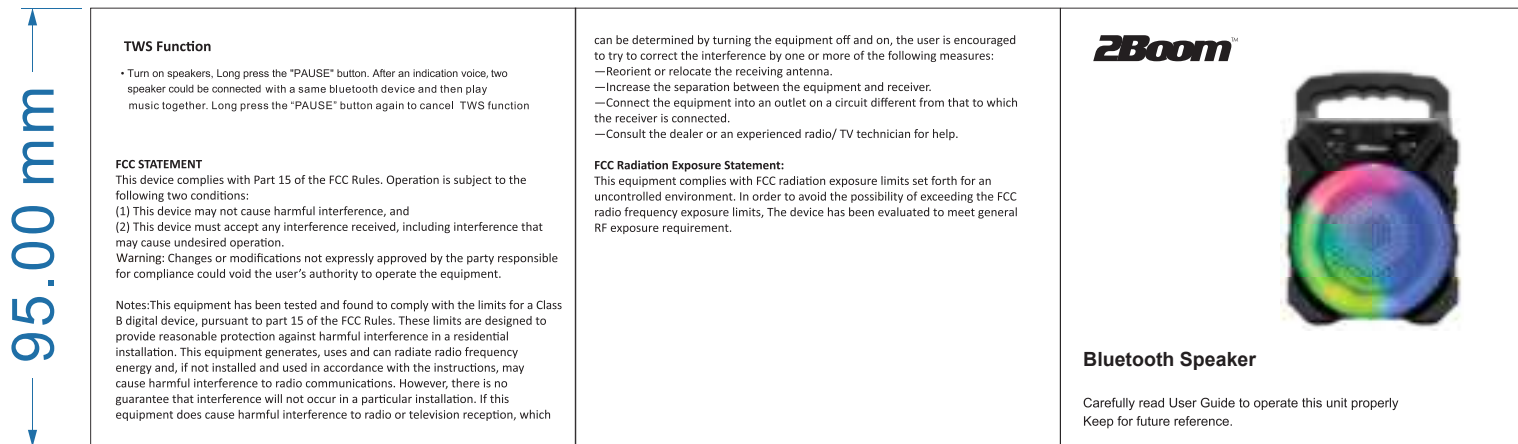

Instruction Manual

You are welcome to purchase.

To ensure the safe use of this product and to achieve the best results, please read this manual carefully.

This product can be connected to PC, TV, CD, VCD, DVD, TUNER, TAPE, USB, TF, BT and other audio equipment, it is easy to carry, multi-functional with perfect design, excellent sound quality performance, we believe it will bring you New feeling.


Warm prompt

When charging the unit, please turn off the power switch, so as not to damage the battery, do not constantly use the machine for a long time. In order to keep the battery in good condition, Please charge and discharge the battery for every 30 days or so.

Technical Parameters

Bluetooth version: V5.0	Playing time: 1-1.5 hours (50% volume)
Driver size: 3in	Charge time: 2-3 hours
Driver output: 5W	S/N: ≥ 80 db
Distance: 32.8ft	
Frequency Response: 100Hz-18kHz	FCC ID: 2AIDL-BX116
Battery: 500mAh	

 PANEL FUNCTION DECLARATION



1. Play/Pause (FM: Automatic search)
2. Previous song: Press the button for a second to lower the volume.(FM: Previous channel)
3. Next song: Press the button for a second to enlarge the volume.(FM: The next channel)
4. Short press: Switch modes between USB/FM/MT
Long press: Change Light modes and turn ON/OFF light
5. Charging socket (DC 5V)
6. USB socket
7. Micro SD card socket
8. OFF/ON Speaker power off , speaker power on

Connect to BT

- Click the "MODE" button for Bluetooth mode
- Turn on your smartphone's BT and search for the device and select "2BOOM-BX116".
- Connect with Model. Click the "ok" on smartphone. Voice notice appear when connected successfully.
(play and select music with smartphone when connected through BT).

Micro SD Function

- Press "MODE" button on the product to switch to TF mode or just insert a Micro SD card. TF mode will start automatically
- Press "PLAY/PAUSE" button to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.

USB Function

- Press "MODE" button on the product to switch to USB mode or just insert a USB flash drive. USB mode will start automatically
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to the previous song.

- FM Radio Function

- Press "MODE" on the product to switch to FM mode. Radio will start automatically
- Press "PLAY/PAUSE" button for seconds to enter automatic FM channel searching. Short press the button again to stay on the channel you want.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.