

English

Instruction Manual



Model: XR-636DP-99

Note:

please read this instructions carefully and retain for future reference, when you use meet any problems and do not know how to use,please contact our service team,this contact information on the last page of this user manual.

HIGHLIGHTS

- Bluetooth® Wireless
- USB Input
- Micro SD Input
- FM Radio
- Three-Speed Record Playback Mode:33/45/78
- Portable
- 3.5mm Headphone and RCA Outputs
- Aux Input

PACKAGE CONTENTS

- 1x Retro Tweed Series Turntable
- 1x Power Adaptor
- 1x Instruction Manual
- 1x USB Power Cable
- 1x Spare Styluses

SPECIFICATIONS


- Bluetooth®:
 - Version: V4.2
 - Chip set: AC6901
 - Profiles: A2DP/AVR CP
 - Range: 10m
- Power Supply: 5VDC.2A
- Sensitivity: 84dB
- Total Power Output: 6W RMS/10W Peak
- Driver: 2x40x70mm
- Max.Size for USB Drive: 32GB
- Frequency Response: 90Hz-18kHz
- SD Card: Up to 32GB

IDENTIFYING PARTS-1



- 1.Lid/Dust Cover----if broken can be exchange for free, contact seller service.
- 2.Turntable Plate
- 3.Cartridge
- 4.Headphone Jack
- 5.Speaker
- 6.Power Led Indicator Light
- 7.Power Switch/Volume Control
- 8.Speed Switch:33/45/78
- 9.Auto Stop Switch
- 10.Carry Handle

IDENTIFYING PARTS-2

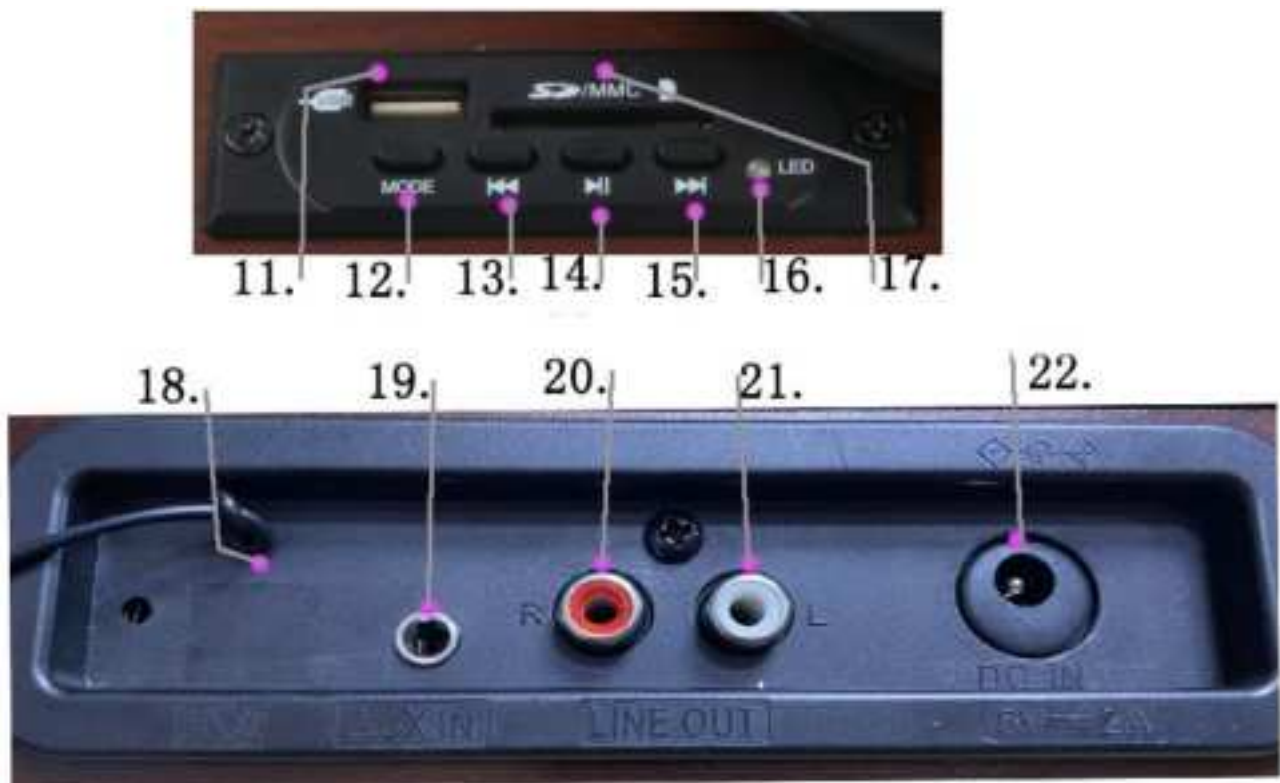

- 11. USB Input
- 12. MODE Button
- 13. Previous Track Button
- 14. Play/Pause Button
- 15. Next Track Button
- 16. LED Indicator Light
- 17. SD Card Input
- 18. FM Antenna
- 19. Aux Input
- 20. Right RCA Out Port
- 21. Left RCA Out Port
- 22. 5 V DC Power Port

INSTRUCTIONS FOR USE

POWERING THE TURNTABLE

Connect the supplied power cable into the 5V DC Power Port on the back of the Retro Tweed, then plug the other end of the cable into a 5V 2A powered USB port

TURNING ON AND OFF

To turn on, rotate the Volume Control clockwise until you hear a click. The Retro Tweed will power on and go into Bluetooth® Mode, the Power Indicator LED will light up. To turn off, rotate the Volume Control counter-clockwise until you hear a click.

PAIRING WITH BLUETOOTH® DEVICES

Your Retro Tweed must be paired to a Bluetooth® device before it can be used. It is only necessary to pair your Retro Tweed once with each device.

1. Open the Bluetooth® Menu on the device you wish to pair. Some devices require you to select "Search for Devices" or "Add New Device" in order to create a Bluetooth® pairing.
2. With the Retro Tweed turned off, rotate the Volume Control clockwise until you hear a click. The Retro Tweed will enter Bluetooth® Mode by default. If it does not, short press the **MODE** Mode Button to navigate to Bluetooth® Mode, the LED Display will say "disconnected".
3. Wait until you see "Retro" on your device's screen.
4. Select "Retro" on your device and follow any further prompts to pair. Once pairing is complete and a connection is established, the Retro Tweed will chime once and the LED Display will say "BT".

NOTE: If you are unsure on how to access your Bluetooth® Menu on your device, please refer to your device's instruction manual.

BLUETOOTH® TRANSMITTER

1. Turn on the "dl" Retro Tweed Turntable, double press the **MODE** Mode Button.
2. It will now be in Bluetooth® Transmitter Mode, with the LED Display showing "Send".
3. Make sure that your available Bluetooth® speaker is in "Pairing Mode".
4. When the "dl" Retro Tweed Turntable and Bluetooth® speakers are both in "Pairing Mode", after a few seconds you will hear a beep sound indicating a successful connection.
5. Press the **MODE** Mode Button to select Phono, USB or Micro SD Card playback modes.
6. Double press the **MODE** Mode Button to disconnect the current paired device.

NOTE: If you are unsure on how to access your Bluetooth® Menu on your device, please refer to your device's instruction manual.

CONTROLS

To navigate between the USB, Micro SD Card, Bluetooth®, FM, Phonograph and Aux Modes short press the **MODE** Mode Button.

1. Adjusting the Volume

| Function | Operation |
|--------------------------|---|
| Increase/Decrease Volume | Rotate the Volume Control • Clockwise to increase the volume • Counter-clockwise to decrease the volume |

2. Audio Control

| Function | Operation |
|---|--|
| Bluetooth® USB & Micro SD Card Modes | |
| Navigate to Next Track | Short press the ►► Next Track Button |
| Navigate to Previous Track | Short press the ◄◄ Previous Track Button |
| Play or Pause Track | Press and hold the ► Play/Pause Button |
| Phonograph Mode | |
| Turn Auto Stop On/Off | Flick the Auto Stop Switch to the respective position |
| To set the Playback Speed | Flick the Speed Switch to the respective position |
| Playing A Phonograph Record | 1. Lightly place the record that you wish to play on the Turntable plate. 2. Unclip the Tonearm protector and push the Cue Lever back. 3. Slide the Tonearm over the record, at this point the record will start spinning. Pull the Cue Lever forward. The Tonearm will slowly lower itself until it rests on the record; the Retro Tweed will start playing the record. |
| Stop Playing a Phonograph Record | 1. Push the Cue Lever back. 2. Slide the Tonearm to above the Safety Clip. 3. Pull the Cue Lever forward and allow the Tonearm to rest on the holder. 4. Clip the Tonearm Protector into place. 5. Remove the record from the Turntable |

3. FM Controls

| Function | Operation |
|------------------------------|---|
| Navigate to Next Station | Short press the ►► Next Track Button |
| Navigate to Previous Station | Short press the ◄◄ Previous Track Button |
| Auto Search for FM Stations | Press and hold the ► Play/Pause Button |

AUX MODE

Plug the supplied Aux Cable into the Aux Input on the Control Panel of the Retro Tweed. Plug the other end of the cable into the device that you wish to play audio from.

Note: In Aux Mode all audio played through the Retro Tweed, excluding volume, is controlled through your device.

RECORDING MODE

Insert a USB Drive or Micro SD Card into the USB Drive or Micro SD Card inputs. Press and hold the **MODE** Mode Button until the LED Display changes to "REC" (Record).

Press and hold the **MODE** Button until the LED flashing.

The recording will begin.

To stop recording, press the **MODE** Button to stop the Turntable.

REPLACING THE STYLUS NEEDLE

Push back the Arm Lock to release the Tonearm.

Unclip and remove the Stylus Needle from the Cartridge then replace with a new one.

INSTALLING A NEW STYLUS CARTRIDGE

Note: Please exercise extreme care whilst performing this operation so as to avoid the Tonearm and Audio Line wires from being damaged.

Gently unclip the Cartridge from the Tonearm.

Gently pull out the audio wires attached to the Cartridge.

Replace with a new Cartridge. Ensure the audio wires are fitted securely, then clip back onto the Tonearm.

TROUBLESHOOTING

1.My mobile phone can not find any new Bluetooth devices?

- Ensure the Device has entered the pairing mode.
- Ensure the Device is within effective working range.

2.Bluetooth device cannot pair up?

- Ensure your mobile phone allows new connections and has not reached the maximum number of allowed devices.

3.The Device does not play music or answer calls when it is connected to a Bluetooth mobile phone?

- Ensure your mobile phone support sA2DPandHSF(Hands-free) profiles.
- Ensure your mobile phone is within effective working range.

4.When paired with my computer,Windows asks for a new driver.

Can you supply this?

- We recommend you find compatible drivers for your computer online.

5.Why can I not remotely control the pause,play function when music is playing?

·This feature needs the Bluetooth device paired with the Retro Tweed to support AVR CP(Audio/Video Remote Control Profile) .Please ensure your device supports this.

CLEANING AND CARING INSTRUCTIONS

We advise you to clean your records with a soft, anti-static cloth to prolong their life and protect them from dust.

We also recommend that your Stylus should be replaced periodically(approximately every 250 hours) .Dust the Stylus from time to time using a very soft brush dipped in Alcohol,brushing from back to front of the Stylus Cartridge.

When Transporting Your Retro Tweed:

- Replace the protective cap on the Stylus.
- Place the Tonearm into the rest clip.

SAFETY PRECAUTIONS

- The product should only be used with the parts provided by the manufacturer.
- Never use the Retro Tweed Turntable near water or in areas where it can come into contact with water. Never handle the Retro Tweed Turntable if it is dropped in water or any other liquid. If the product comes into contact with water while switched off, but still plugged in, this is a safety hazard.
- Always make sure your hands are dry before touching the plug or power connections.
- Do not operate the product with a damaged cord or plug, or after it malfunctions, has been dropped, or damaged in any manner.
- The Retro Tweed Turntable is intended for personal use only. Commercial use invalidates the warranty and the supplier can not be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.
- This Retro Tweed Turntable is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with the turntable.

ENVIRONMENTALLY FRIENDLY DISPOSAL

● At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



WARNING

This product can expose you to chemicals including styrene, ethylbenzene, and cumene, which are known to the State of California to cause cancer. For more information go to www.P65Warning.ca.gov.

DISCLAIMER

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by "dl" is under license. Other trademarks and trade names are those of their respective owners.

All product and company names are trademarks™ or registered® trademarks of their respective holders. The use of them does not imply any affiliation with or endorsement by them.

WARRANTY

This Retro Tweed Turntable comes with a standard 12-month limited warranty against manufacturing defects and faults.

Should your Retro Tweed Turntable be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase.

Kindly retain your proof of purchase as well as the packaging for your warranty period.

NOTE:

The warranty does not apply to a product that:

- a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- b.) Has been misused or neglected.
- c.) Has been damaged accidentally or by Force Majeure including fire and flooding.
- d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase/Seller can not accept any returned products that have not been returned in accordance with this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase/Sellers Returns Policy for details.

SERVICE CONTACT

When you meet any use problems, please contact our service and technology teams. They are 24 hours on line.

Mail: DLservice19@163.com / wsmatservice@hotmail.com

Whatsapp: +86 17825411170 / +86 18948322408

Facebook/LINE: DLITIME,

Web: www.DLITIME.com

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body