

SIZE:145*210MM

MAGNAVOX

PORTABLE KARAOKE SYSTEM

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MHT777

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

 
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING:


To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LOCATION CONTROLS:

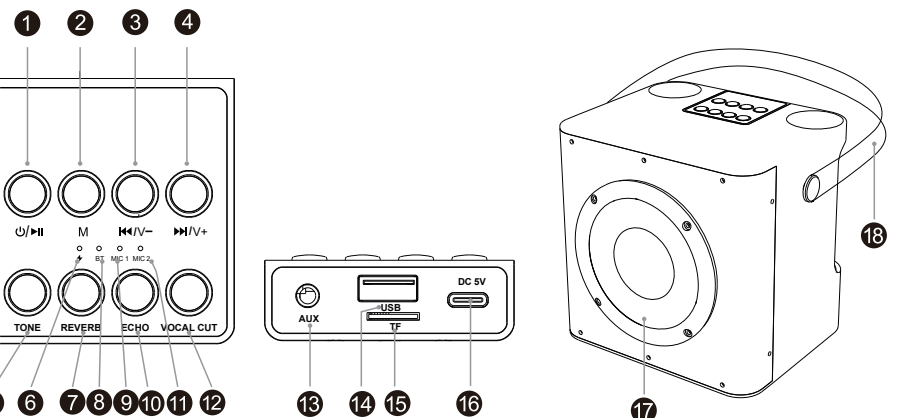

1. Power ON-OFF/Play-Pause Button
2. MODE/LED Control Button
3. < (Previous/Volume -) Button
4. > (Next/Volume +) Button
5. TONE (EQ) button
6. Charging Indicator
7. RECERB Button
8. Bluetooth Indicator
9. Left side Microphone's Bluetooth Indicator
10. ECHO ON-OFF Button
11. Right side Microphone's Bluetooth Indicator
12. VOCAL REMOVE Button
13. AUX IN Jack
14. USB Sot
15. TF (Micro SD) Card Slot
16. DC 5V Charging port
17. Speaker
18. Handle

 MICROPHONE OVERVIEW:

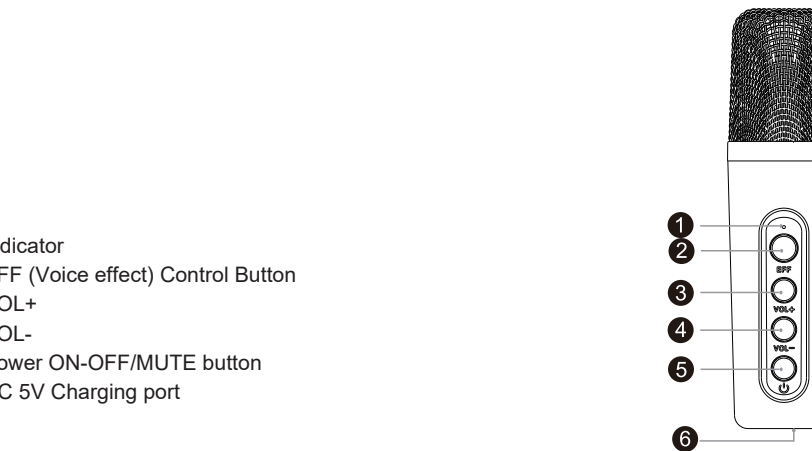


1

POWER SOURCE:

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

 
1. Connect the small plug from the supplied USB Connection Cable to the DC 5V (TYPE C) Port on the unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the personal computer or USB Charger(Computer and USB charger no included).

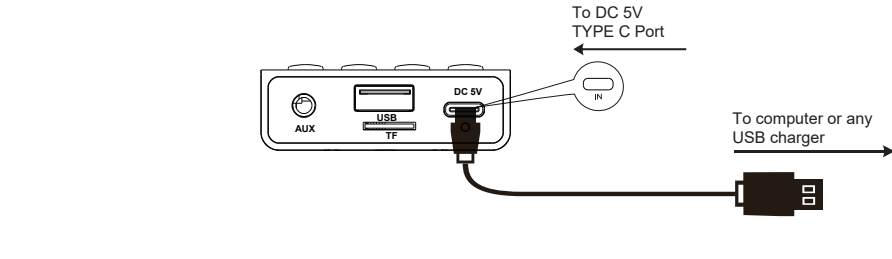

3. When charging, the Red LED Charging Indicator on the unit will illuminate. When charging is complete, it will turn off.
4. When charging, you can also play and listen to music at the same time.

The Wireless microphone has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

 1. Connect the small plug from the supplied USB Connection Cable to the DC 5V (TYPE C) Port on the Wireless microphone.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the personal computer or USB Charger(Computer and USB charger no included).

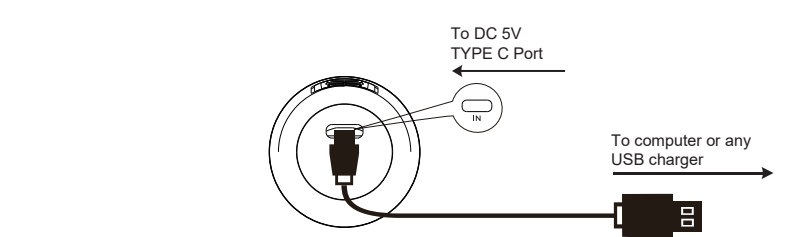

3. When charging, the Red LED Charging Indicator on the unit will illuminate. When charging is complete, it will turn off.
4. When charging, you can also use the microphone as usual.

NOTES:

Your battery will last longer if you're following these simple guidelines for caring and storing:

- A. Before first time use, recharge the unit approximately 5 hours until the unit is fully charged.
- B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
- C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
- D. Battery life naturally shortens slowly over time.
- E. The rechargeable battery incorporated in this product is not user replaceable.

2

OPERATION:

General Operation:

1. Recharge the built-in Li-ion battery as previously instructed.
2. Press and hold the </> Button to power on the unit. The Decorative LED Lights on the speaker will illuminate.
3. Press and hold the Mode Button repeatedly to switch to desired playback mode. You will sound a prompt with your selection (see list below):

Playback Modes:	Showing on Display
BT (Bluetooth)	Bluetooth ready for connection
FM Radio	Radio
USB	USB
Micro SD Card	Memory Card
AUX (Aux/Line in)	Aux In

Note:

If the AUX (Aux/Line in) plug, Micro SD (TF) Card and/or USB Device have NOT been inserted into the unit, the corresponding selection will not be available.

4. During playback, press and hold the </> or > Buttons to adjust volume level as desired. When turn to maximum or minimum volume you will hear the prompt tone.
5. Press the TONE Button to change 7 different kinds of sound effect.
6. Press the Mode Button to change the lights mode totally 7 different effects and turn off the Decorative LED Lights; press again to turn it back.
7. When finished listening, press and hold the Power ON/OFF Button to shut off the unit.

BT Mode:

BT (Bluetooth) pairing:

First time use or re-pairing the unit to a new BT Device, pairs as follows:

1. Power on the unit and enter to BT mode as previously instructed. You will hear "Bluetooth ready for connection". And Blue indicator will illuminate and blink.
2. Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, you will hear "Bluetooth connected". And Blue indicator will stop blinking
3. If pairing is complete you may now play music with your external BT Device. The Blue indicator will blink.
4. During playback:
 - Press and hold the </> or > Buttons to adjust volume level as desired.
 - Press the </> Button to pause, the Blue indicator will stop blinking. Press again to resume normal playback, the Blue indicator will blink.
 - Press the </> or > Buttons repeatedly to skip tracks.
5. When finished listening, press and hold the Power ON/OFF Button to shut off the unit.

Notes:

When the external BT Device searches for the unit, our model number "MHT777" will appear on the display of external BT Device. If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. You will hear "Bluetooth ready for connection".
3. Wait a few seconds until the unit is automatically paired to the external BT Device. And you will hear "Bluetooth connected".

3

4. After pairing is complete you may now play music with your external BT Device.

FM Radio

1. Power on the unit and enter to radio mode as previously. You will hear "Radio". The RGB lights will turn off.
2. In first time use(or relocated the unit to a new location), search and store the available FM stations by double press the </> Button. The unit will automatically to search and store all available FM radio stations then play the first stored FM station.
3. During playback:
 - Press and hold the </> or > Buttons to adjust volume level as desired. When turn to maximum or minimum volume you will hear the prompt tone.
 - Press the </> Button to mute the sound, the Blue indicator will stop blinking. Press again to turn the sound back, the Blue indicator will blink.
 - Press the </> or > Buttons select and play the desired stored radio station.
4. When finished listening, press and hold the Power ON/OFF Button to shut off the unit.

 
Antennas:

This unit has a built-in FM antenna, which provides adequate reception in most areas. If reception is weak reassemble the other direction/location to improve reception, also can use the supplied USB Connection Cable as an External antenna to increase the radio effect.

USB:

To play the music in USB Device:

1. In power off mode, connect the USB Device(not included) into the USB Port on the unit as illustrated below:

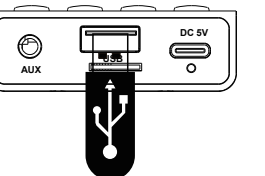

2. Power on the unit and enter to USB mode as previously instructed: You will hear "USB".

 
Music in the USB Device will be playback automatically.

5. During playback:
 - Press and hold the </> or > Buttons to adjust volume level as desired. When turn to maximum or minimum volume you will hear the prompt tone.
 - Press the </> Button to pause, the Blue indicator will stop blinking. Press again to resume normal playback, the Blue indicator will blink.
 - Press the </> or > Buttons repeatedly to skip tracks.
4. When finished listening, press and hold the Power ON/OFF Button to shut off the unit.

Micro SD (TF) Card:

To play the music in Micro SD (TF) Card:

1. In power off mode, insert the Micro SD (TF) Card (not included) into the Micro SD (TF) Card Slot on the unit with contacts facing up as illustrated below:

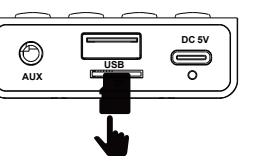

2. Power on the unit and enter to Micro SD (TF) Card mode as previously instructed: You will hear "Memory Card".

Music in the card will be playback automatically.

4

3. During playback:

- Press and hold the </> or > Buttons to adjust volume level as desired. When turn to maximum or minimum volume you will hear the prompt tone.
 - Press the </> Button to pause, the Blue indicator will stop blinking. Press again to resume normal playback, the Blue indicator will blink.
 - Press the </> or > Buttons repeatedly to skip tracks.
4. When finished listening, press and hold the Power ON/OFF Button to shut off the unit.

 
Notes:

- Up to 16 GB Micro SD (TF) Card/USB Device supported.
- When inserting the Micro SD (TF) Card/USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the Micro SD (TF) Card/USB Device or the unit. If it doesn't work, please check if the direction is correct.
- Before replacing Micro SD (TF) Card/USB Device, make sure the unit has been powered off.
- You also need to download the desired music in MP3 format into the Micro SD (TF) Card/USB Device before insert into the unit.

AUX (Aux/Line in):

Listen from an external Audio Player such as MP3 Player, Discman...etc.

1. In power off mode, connect one end of the supplied Audio Connection Cable to the AUX Out/Line Out/ Phone Jack on the external Audio Player.
2. Connect the other end of the cable to the AUX (Aux/Line in) Jack on the unit as illustrated below:

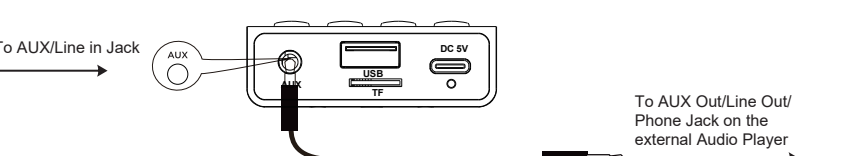

3. Power on the unit and enter to AUX (Aux/Line in) mode as previously instructed. You will hear "Aux In".

Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)

5. During playback:
 - Press and hold the </> or > Buttons to adjust volume level as desired. When turn to maximum or minimum volume you will hear the prompt tone.
 - Press the </> Button to mute the sound, press again to turn the sound back.
6. When finished listening, press and hold the Power ON/OFF Button to shut off the unit.

To sing with playing music:

To sing while music is playing:

1. Power on the unit and plays music in any modes as previously instructed.
2. Press and hold the </> Button on MIC to power on the two wireless MIC (included) in the same time (blue indicator on main unit will light on) . The two MIC will connect the main unit automatically. After connected the blue indicator on microphone will keep lighting, and the green indicator on unit will keep lighting too.
3. Press the REVERB Button to mute the MIC sound at once, and the sound will resume then voice input at once.
4. Press the ECHO Button to cancel the ECHO effect or resume it.
5. Press the Vocal Cut Button to cancel the original singing or resume it.(Only BT/USB/TF mode)
6. Press the EFF Button to change 5 different kinds of voice effects. During change voice you will also hear the prompt tone.
7. Press and hold the VOL+/VOL- Buttons to skip tracks(only in BT/USB/TF mode). Short press to adjust the MIC volume to your desired level. When turn to maximum or minimum volume you will hear the prompt tone.

Note:

If feedback noise (high audio frequency noise) is hearing from the speaker, turn the ECHO Button to cancel the MIC sound level or power off the MIC.

5

TROUBLE SHOOTING GUIDE:

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built-in battery drained	Recharge the battery as page 2
	The unit in power off mode	Switch the Power ON/OFF Button to ON position to power on the unit
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume level by press the > Button
	Volume level of paired/ connected device is in low level	Rise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by tpress the < Button
	Volume level of the paired/ connected device too high	Reduce the volume level of the paired/ connected device
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit as page 3
	The external BT device too far from the unit	Place the external BT device close to the unit

GENERAL SPECIFICATIONS:

Power Source:	Built-in DC 3.7 V, 2400 mAh (8.88 WH) rechargeable Li-ion Battery; recharge by DC 5 V through the DC 5V (TYPE C) Port
Impedance of Speakers:	8W ; 4 Ω
Audio Power:	Total 4.5W (RMS)
BT Version:	5.0
BT Operation Distance:	Up to 32 Feet in open area

PACKAGE INCLUDES:

- 1 x Owner's Manual
- 1 x USB Connection Cable (For Charging only)
- 1 x Audio Connection Cable with 3.5 mm plugs
- 2 x Wired Microphone

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

6

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$10 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics, LLC
PO Box 279130, Miramar, Fla. 33027-9997

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig and Craig is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: magnavox@craigelectronics.com

Printed in China

MHT777_WC_E0FK1_B0US

7

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.