Part III: Appendices

Appendix A	Safety
Appendix B	Installation troubleshooting
Appendix C	Specifications
Appendix D	Field Replaceable Units
Appendix E guidelines	Cable installation and power separation

DRAFT

Appendix A

Safety

This appendix contains specifications for CommScope OneCell, including FCC information and technical data.

Radiation Exposure Statement	A-2
Human exposure limits for OneCell deployments	A-2

Radiation Exposure Statement

Important: Changes or modifications not expressly approved by CommScope LLC could void your authority to operate the equipment.

FCC Part 15

The Baseband Controller and RP5100 have been tested and found to comply with the limits for Class A equipment, pursuant to Part 15 of the FCC Rules.



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference at his own expense.

For more information, see the publication femtocells and Health at http:// www.femtoforum.org or visit the FCC website at www.fcc.gov.

EN55032



This equipment is compliant with Class A of EN55032. In a residential environment, this equipment may cause radio interference.

Human exposure limits for OneCell deployments

The human exposure limits for the OneCell product is calculated by using the Maximum Permissible Exposure (MPE) method associated with fixed-type transmitter devices at a minimum exposure distance of 20 cm.

Table A-1 includes values for one Radio Point (RP5000 series) and four Radio Points per chassis.

Parameter	RPM-A5A11- B66	RPM-A5A11- B02	RPM-I5A11- B01	RPM-I5A11- B03	RPM-I5A11- B07
Tx Power (dBm) per antenna	24.13	24.23	24.25	24.00	24.70
Tx Loss (dB)	0	0	0	0	0
Tx Antenna Gain (dBi)	4	4	4	4	4
Transmitter Duty Cycle %	100	100	100	100	100
Number of Antennas (MIMO)	2	2	2	2	2
Contribution due to multiple antennas (dB)	3.0103	3.0103	3.0103	3.0103	3.0103
Derived Total EIRP (dBW)	1.140	1.240	1.260	1.010	1.710
Bands	66	2	1	3	7
Frequency Range (MHz)	2110-2200	1930-1990	2110-2170	1805-1880	2620-2690
Point Source Total EIRP (watts)	1.300	1.331	1.337	1.262	1.483
Power Density (W/m2) @ 20 cm	2.587	2.647	2.569	2.510	2.950

Table A-1. RF exposure for OneCell at maximum power internal antennas for RP5000 series

1. For persons with implants, the maximum calculated distance of 30cm. This applies to any combination of up to four radio modules in Bands 1,3 and 7.

2. For general public and workers, a measured distance of 5mm was determined. This applies to any combination of up to four radio modules in Bands 1,3 and 7.

For general public and workers, a calculated distance of 20cm was determined. This applies to any combination of up to four radio modules in Bands 2 and 66.

Parameter	RPM-I5A11- B17	RPM-A5A11- B12	RPM-A5A11- B14	RPM-A5A11- B05	RPM-A5A11- B30
Tx Power (dBm) per antenna	21.70	21.88	21.45	21.58	0.00
Tx Loss (dB)	0	0	0	0	0
Tx Antenna Gain (dBi)	4	4	4	2	5
Transmitter Duty Cycle %	100	100	100	100	100

Parameter	RPM-I5A11- B17	RPM-A5A11- B12	RPM-A5A11- B14	RPM-A5A11- B05	RPM-A5A11- B30
Number of Antennas (MIMO)	2	2	2	2	2
Contribution due to multiple antennas (dB)	3.0103	3.0103	3.0103	3.0103	3.0103
Derived Total EIRP (dBW)	-1.290	-1.110	-1.540	-3.410	-21.990
Bands	12	12	14	5	30
Frequency Range (MHz)	734-746	729 - 746	758 - 768	869-894	2350-2360
Point Source Total EIRP (watts)	0.743	0.775	0.702	0.456	0.006
Power Density (W/m2) @ 20 cm	1.478	1.541	1.396	0.907	0.013

Table A-2 includes values for one Radio Point (RP2000 and RP2100) and four Radio Points per chassis.

Table A-2. RF exposure for OneCell at maximum power internal antennas for RP2000 series

Parameter	Indoor RP-A2014 & RP-I2014		Rugged RP-A2114 & RP-I2114			
Tx Power (dBm) per antenna	21	21	21	21	21	21
Tx Loss (dB)	0	0	0	0	0	0
Tx Antenna Gain (dBi)	0	5	11.8	12	12.5	13.5
Transmitter Duty Cycle %	100	100	100	100	100	100
Number of Antennas (MIMO)	2	2	2	2	2	2
Contribution due to multiple antennas (dB)	3.0103	3.0103	3.0103	3.0103	3.0103	3.0103
Derived Total EIRP (dBW)	-5.990	-0.990	5.810	6.010	6.510	7.510
Bands	12,13,17	1,2,3,4,7,10,25	12,13,17	3	1,2,4,10,25	2620- 2690
Frequency Range (MHz)	729-756	1805-2690	729-756	1805-1880	1930-2170	2620- 2690
Point Source Total EIRP (watts)	0.252	0.796	3.811	3.991	4.477	5.637
Power Density (W/m2) @ 20 cm	0.501	1.584	7.582	7.939	8.908	11.214

Reference documents

[1] Federal Communications Commission Document OET Bulletin 65, Supplement C, 2001, Evaluating Compliance with FCC guidelines for Human Exposure to radio frequency Electromagnetic Fields, US Federal Communications Commission, Office of Engineering and Technology June 2001.

[2] Federal Communications Commission Document OET Bulletin 56, "Questions and answers about biological effects and potential hazards of radio frequency electromagnetic fields", Federal Communications Commission Office of Engineering and Technology, August 1999.

[3] ICNIRP Guidelines for limiting exposure to time varying electric, magnetic and electromagnetic fields up to 300 GHz. International Commission on Non Ionizing Radiation, published in Health Physics 74 (4): 494-522; 1998

[4] ICNIRP Statement on EMF-Emitting New Technologies, International Commission on Non-Ionizing Radiation, published in Health Physics 94 (4):376-392, 2008

[5] 3GPP Document 3GPP TS 36.104 version 10.11.0 Release 10," LTE Evolved Universal Terrestrial Radio Access (E-UTRA); Base Station (BS) radio transmission and reception"

Appendix B

Installation troubleshooting

This section contains information on troubleshooting the OneCell installation. It includes the LED patterns for the Baseband Controller and Radio points.

Baseband Controller LED patterns	B-2
Radio Point LED patterns	B-4

Baseband Controller LED patterns

The Baseband Controller has four LEDs on the front panel. The following table shows

- Display pattern for each LED
- What the pattern indicates
- Action to take, if any, to resolve the issue

LED	Display Pattern	Indicates	Action to Take
STATUS	Green, solid	Power On Sectors up	None
	Amber, solid	Self-test failure	Replace Baseband Controller
	Green, blinking	Firmware upgrade from DMS Sectors not up	None
	Amber, blinking	No configuration from DMS	Check DMS availabilityCheck if the provisioning is correctEscalate to operator
	OFF	BC rebooting after upgrade	None
	Red, solid*	Error in system - software or hardware issues detected	Replace Baseband Controller Module
RP ERROR	Green, solid	Power On	None
	Amber, solid	Self-test failure	Replace Baseband Controller
	Amber, blinking	No Radio Points connected	Check RP cable
-	Off	Radio Points connected, firmware upgrade from DMS	None
	Red, blinking	Radio Point alarm - PLL state unlock; service impacting alarm from Radio Point (alarm in one or more RP)	Check 1588 VLAN configuration

LED	Display Pattern	Indicates	Action to Take
TIMING LED	Green, solid	Power On, timing	None
	Amber, solid	Self-test failure	Replace Baseband Controller
	Amber, blinking	No timing	Check GPS antenna connection feed
	Off	Firmware upgrade from DMS	None
	Red, solid*	Error in system GPS module down Software/Hardware issues	Replace Baseband Controller Module
CORE LED	Green, solid	Power On Connection to MME	None
	Amber, solid	Self-test failure	Replace Baseband Controller
	Amber, blinking	No connection to MME IPsec is up	Check the MME configuration on the BCCheck if MME is reachable
	Off	Firmware upgrade from DMS	None
	Red, blinking	Internet connection IPsec down	Check if Security Gateway is reachableCheck security credentials
	Red, solid*	No Internet Interface hardware issues	Replace Baseband Controller Module
* Note: When all of t	he LEDs are solid red, t	here is a BC hardware failure.	

Radio Point LED patterns

This section contains LED patterns for RP5100 series and RP2000 series.

RP5100i LED patterns

The Radio Point RP5100i supports six LEDs on the front cover.

Indicators are for

- four radios (one for each)
- ETH 1 MR PORT:POE++, POE+, Ethernet link
- ETH 2– SR PORT:POE++, POE+, Ethernet link





The following table shows:

- Display pattern for each LED
- What the pattern indicates
- Action to take, if any, to resolve the issue

LED	Display Pattern	Indicates	Action to Take
RADIO 1	Green, solid	Power On, transmitting	None
RADIO 2 RADIO 3 RADIO 4	Amber, solid	 RFTxState OFF No Controller Assigned No Timing 	 Check 1588 VLAN configuration Verify that the Radio Point is in STANDBY because more than 32 RPs are connected
	Red, solid	No connection to ControllerHW errorLow Power	Hardware error – replace Radio Point
	Green, blinking	Firmware upgrade	None
	Amber, blinking	RF module Self-Test Failure	Replace Radio Module
Eth 1	Green, solid	Power On, PoE++ power	None
	Amber, solid	Link up, no power	Check that the Ethernet cable is connected to the Radio Point
	Green, blinking	PoE+ power	None
	Amber, blinking	Platform Self-Test Failure	Replace Radio Point
	Red, solid	Ethernet port error	 Connect the Ethernet cable between the Baseband Controller and Radio Point Replace Radio Point
Eth 2	Green, solid	Power On, PoE++ power	None
	Amber, solid	Link up, no power	Check that the Ethernet cable is connected to the Radio Point
	Green, blinking	PoE+ power	None
	Amber, blinking	Platform Self-Test Failure	Replace Radio Point
	Red, solid	Ethernet port error	 Connect the Ethernet cable between the Baseband Controller and Radio Point Replace Radio Point
* Note: Whe	en all of the LEDs are soli	d red, there is an RP hardware fai	ilure.

RP5100r LED patterns

The Radio Point RP5100r has one LED. The following table includes the LED patterns.



	Display Pattern	Indicates	Action to Take
r	Green, blinking	Not all available radio modules are in useRFTx ON for all radio modules	No action required
	Green, solid	All available radio modules are in useRFTx ON for all radio modules	No action required
	Red, solid	Error in the system.No module connected to the BCAll modules have low power	Replace Radio Point
	Red, blinking	No modules in use Note: The radio modules may be connected to the BC.	Check the connection between the RP and BC.Check that the BC admin status is UP.
	Green, fast blinking	Software upgrade	No action required

RP2000 series LED patterns

The RP2000 and RP2100 Radio Points have one LED. The LED for the RP2000 (Indoor) is on the front cover. The LED for the RP2100 (Rugged) is on the bottom of the Radio Point where the Ethernet cable port is located. The following table shows:

- Display pattern for each LED
- What the pattern indicates
- Action to take, if any, to resolve the issue

LED	Display Pattern	Indicates	Action to Take
STATUS	Green, solid	Power On RFTx state is ON	None
	Amber, solid	Self-test failure	Replace RP
	Green, blinking	Firmware upgrade Connected to Baseband Controller	None
	Amber, blinking	PLL state – unlock RFTx state – OFF or suspended L2 path verification failed Admin state – STANDBY	 Check 1588 VLAN configuration Verify RP is in STANDBY because more than 32 Radio Points are connected to the same Baseband Controller
	Red, blinking	No connection to Baseband Controller (http)	 Connect the Ethernet cable between the Baseband Controller and Radio Point Replace RP
	Red, solid	Error in system – software or hardware issues Interface issues detected AdminState – UNLOCKED	 Connect the Ethernet cable between the Baseband Controller and Radio Point Upgrade Radio Point Replace Radio Point

Appendix B Installation troubleshooting

Appendix C

Specifications

This appendix contains specifications for CommScope OneCell, including FCC information and technical data.

Environmental and physical specifications	C-2
SPF/SPF+ specifications	C-3

Environmental and physical specifications

The following table lists the electrical ratings and technical data for the Baseband Controller, RP5100 series and RP2000/RP2100.

Baseband Controller	
Environmental	Operating Temperatures: 0°C to 40°C
	Operating Humidity 10%-90% Non-Condensing
Power Requirements	120/230 VAC,1.7/0.85 A, 50/60 Hz
Power Consumption	204W Typical / 216W Maximum
Dimensions	1 Rack Unit Chassis hosts 2 Baseband Controller module units 19" W x 1.75" H x 18.8" D (483mm W x 44.4mm H x 477mm D)
Weight	Single BC 13.1 lbs (5.9 kg) Dual BC 19.1 lbs. (8.7 kg)
RP5100i	
Environmental	Operating Temperatures: 0 to 50°C (Plenum rated: UL-2043) Operating Humidity 10%-95% Non-Condensing Operating temperatures: 0°C to 50°C Active Cooling/Fans, acoustic noise: 39.5 dBA at 25C
Power Requirements	IEEE802.3bt-type 4 PoE++
Power Consumption	Up to: 72W (26W + 11.5W per RM)
Dimensions	13.54" W x13.54 H x 3.35" D (344.0 mm W x 344.0 mm H x 85.0 mm D)
Weight	8.82 lbs (4 kg)
RP5100r	
Environmental	Operating Temperatures: 0 to 50°C (Plenum rated: UL-2043) Operating Humidity 10%-95% Non-Condensing Operating temperatures: 0°C to 50°C Active Cooling/Fans, acoustic noise: 39.5 dBA at 25C
Power Requirements	IEEE802.3bt-type4 PoE++
Power Consumption	Up to: 72W (26W + 11.5W per RM)
Dimensions	14.9" W x 12.64" H x 4.06" D (378.7 mm W x 321.1 mm H x 102.5 mm D)

Table C-1. Environmental and Physical specifications

Weight	21.7 lbs (9.85 kg)
RP2000	
Environmental	Operating Temperatures:0°C to 50°C (Plenum rated: UL-2043) Operating Humidity: 10%-95% Non-Condensing
Power Requirements	802.3at PoE+
Power Consumption	22W Typical / 25.5W Maximum
Dimensions	7.4" W x 9.25" H x 1.75" D (188mm W x 235mm H x 45mm D)
Weight	2.6 lbs (1.2 kg)
RP2100	
Environmental	Operating Temperatures: -40C to 60°C
Power Requirements	802.3at PoE+
Power Consumption	22W Typical / 25.5W Maximum
Dimensions	9.3" W x 9.1" H x 3.0" D (236mm W x 230mm H x 76mm D)
Weight	8 lbs (0.6 kg)

 Table C-1.
 Environmental and Physical specifications (continued)

SPF/SPF+ specifications

The following table lists the SPF and SPF+ specifications required for the Baseband Controller.

1G SFP LC SX Transceiver; 220M to 1K M	
1G SFP LC LX transceiver, 550M 10K M	
10G SFP+ LC SR Transceiver; Multi mode 26M to 300M	X
SFP-10G-LR Transceiver; Single mode 10KM	
10G Direct attach SFP+ cable; Twin ax Cable; 7M (must be compatible with HP & Cisco switches	

Appendix D

Field Replaceable Units

This appendix contains instructions for replacing Baseband Controller modules and Radio Points in the OneCell system.

FRU overview	D-2
Replacing Baseband Controller modules	D-2
Replacing RP5100 series Radio Points	D-16
Replacing RP5100i RF modules	D-47
Replacing RP2000 series Radio Points	D-52
RP post-replacement verification	D-85

FRU overview

Field Replaceable Units (FRUs) are modules that can be replaced on-site in case of equipment failure. On-site and off-site activities are required when replacing modules. The off-site activities are achieved by using DMS.

This appendix contains details for replacing Baseband Controllers (BC) modules and Radio Points (RP).

Replacing Baseband Controller modules

The following procedure provides instructions for replacing the OneCell Baseband Controller (BC) module in a live network environment.

This procedure is divided into four sections:

- Prerequisites
- Off-site activities
- On-site activities
- Post-Install Verification

Prerequisites

The following table contains a checklist of prerequisites for replacing a BC.

Prerequisite
UDEF file for DMS import
SSH password
Replacement OneCell BC module
Laptop for Web GUI access
Config.tar file containing operator information Note: This file should be saved on the Laptop that will be used for WebGUI access.
License file (if applicable) Note: This file should be saved on the Laptop that will be used for WebGUI access.

Prerequisite
Configuration details for WebGUI commissioning Note: These parameters are derived from the failed unit being replaced.
Ethernet cable Note: Required for connecting the laptop to the OneCell Baseband Controller Management port
DMS FTP IP address

Off-site activities

Before replacing the BC module, import a new EDF file to the DMS. This file contains the BC MAC address and HeMs password specific to the new BC.

- **1** Access the FTP location on DMS using ftp protocol, port 2100.
- **2** Upload the EDF file to */appdata/dms/import/factory*.
- **3** Access the DMS Network console from a supported Web Browser.

NOTE: The DMS GUI supports Internet Explorer versions 9, 10 and 11 and Chrome version 36 Web browsers, and a screen resolution of 1024 x 768 and higher.

4 Enter the IP address for the Network Management portal.

http://<IP Address DMS server>/networkconsole

The Sign In dialog box displays.

Usernamie	
4	
Paravarit	
1. C	
T Remember nm	

- **5** Enter Username and Password. The Search Device screen displays.
- 6 Enter the device Mac ID.

The Network Management Portal opens.

- 7 Select Import tab located in the left margin of the Device console.
- 8 Select File Import.



9 Browse and select the desired import file. The EDF file format is xml.

File Import			
New File Import			
File Type:	Factory File	÷	
File-Name.	Select file name		8
Import Method		Ŷ	
Import Ca	incel		

- **10** Click **Import**.
- **11** Click **Import Progress**. Wait for the import to be completed.

Import F	rogress							
Hallow	Summer Party	married Mathematica	(the time)	Sec. in	rest lines			Orner Inparied
File import	und factory Web (DDDEEA 10, Sim, CD and	FACTORY	2018-88-10 18-48 11 167		IL Propent	6	Mark Danaba	
Pia input	servicesetting_Serveralistings_reacting	COMPLETE	2010-05-10-10.00.01107		II Pictresi	0	They Dennet	
Yes insure	excitenting_Secondedreps_rest_30100420140034 and	AUTO	2010-05-10:00 (4:30:107		(+ 715grain)	0	Local Density	3
the input	severating Severalships reason	AUTO	2015-05-15 22-49-20-057		In Program	5	Inter Partners	
Fix import	serviceating_Servicedebigs_new.ml	4070	2015-84-50 11 32 00 107		in Program	6	View Doctor	112
Fin import	servicesting_ServiceTellings_res_20103420145838.org	COMPLETE	2010-04-30 10:30-02-07		In Program	6	Tree Dents	112

12 Click the Operational History icon in the upper right corner of the page.



The Operational History page displays. Check that the file import was successful.

0	per	ali	or	ual	Н	ist	or,	Ľ.

wi free	Delagery	(Pathati	19.5em	Constant Target	Owner Date			
19-00-15 W HI MI MI	Poste Investor	1.44	214	Parent	Baires		1.000	÷
nal-siemer'	Service Package		111000 (1.0.7.0 ARDS 10	Seven Partage	Batant			1
9-05-14 HDE:M	Serves Partage			Names Photoge	Baunes		Contraction of the	2
886年月17年14	Teorete	Pee Report Generation	Farms TE_CMAD.300	Peri Report	Same		Version 1	
0405-05-05-022-42	Nagerts	Paul Negati Generation	Formal TD_Clarks XMD	Pas Report	former		internet.	1
時間市均無何	Device Package		81000-1-0-1-0-MP08-10	Service Package	Balante		The Deliver	1
15-06-16 FEDF.30	Service Parkage		11-1222 - 1.2 1 (-640.06.1c)	Service Parkage Save	Same	+	Color Same	12
11 1000 CH-1000	The regist	#962310897	sadd factory rivel controlling the plan and	FACTORY	Bacant		Contraction of the	I.
15-06-15 (2188.10)	The implet	RADIORS	und factory-548-000556410_56e_001.unit	FACTORS	Dates	*	Concerned of	F
19-19-16-18-1912	Page	SPE AND NEW YORK		STEAL MARKING	Secon	*	-	1
5-25-7-30.30.96	Hearts		Million LTDATION, Cells and a cordy 2015-05-15-	Denne Deta Report	Bates		The local	17
9-8-5 mm	(Reports	Pers Hagent Derection	Parma TR_CHAR. AM.	The Peper.	hrom		and see a	r
5-8-6 8.000	Pargonia	SPS Aust Report Generation	975, AuGIT_REPORT_2016-06 16:05 30:02	SPE Auto Report	Balan		In a Densel	1
0.0000	Negerie	Country State General	Numerican and a 2016-05-15-05-30	Denire State Pagent	Ballets	1	Con Denks	



Osimanie	
4	
Processorie	
14. C	

14 Enter the MAC ID of the replacement Baseband Controller.

NOTE: Your CommScope service engineer will provide the new BC MAC ID.

Erner MAG	10
1.	4
oox 2000E	a-da-Hite

15 Select the Device configuration tab on the left margin.

R	Dashboard
٢	Thining Source
A	Alarms
p	Device Configuration
00	Desice Pacametter
e	agt a friend

16 Configure the same parameters from the BC being replaced.

17 Select the Dashboard menu item.

R	Dashboard
0	Timing Source
A	Alarms
p	Device Cortliguration
00	Desice Pacameter
s	agt a grand

The Controller will display "Out of Service" until the On-site installation is completed.

shboard			
mmary 000589 LTE, Ex	wrpnae, CRANSC, Cwn 0005B96ACB1	OUN PC MACID	(Delification)
Device Details			Providencing Status
stand-time	AL anamond Printee fast		and the second
Defining Version	2200		O perdinent O bereinet
Heldowie Vestion	www.		BP Sinha Count
Device DAM (III)	172 17 19 190		D-State
First Contact Tony	3117-08-17 17-53-40007-177		
Last Actuality Tene:	301148-1815-0502285-07		
Cast Contract Torres	301749538162246582287		
Alams		- 61-	
	1		- Cardforder

On-site activities

After the off-site activities are complete, you are ready to replace the BC module onsite.

1 Power off the OneCell Baseband Controller.



- **2** Make a note of the existing cables connected to the failed OneCell BC.
- **3** Label the cables identifying the port locations on the BC. Disconnect the cables.



4 Remove the GPS antenna cable from the BC (if applicable).



5 Turn the mounting screws on the BC front panel counterclockwise to loosen them and remove the BC module.



6 Insert the new BC module into the chassis and tighten the mounting screws.



7 Re-connect the cables as noted in step 3.

DRAFT

8 Power on the controller.



9 Configure the BC. Follow configuration procedures starting with Accessing the Web GUI on page 8-19.

Post-Install Verification

On-site

The operational state of the OneCell system can be determined by the LED status on the BC's front panel. Additional information can be attained from the WebGUI status screens.

Start the verification with Verify the OneCell system installation on page 9-2 and continue through the end of the chapter.

Off-site

1 Open a supported Web browser.

NOTE: The DMS GUI supports Internet Explorer versions 9, 10 and 11 and Chrome version 36 Web browsers, and a screen resolution of 1024 x 768 and higher.

2 Enter the IP address for the Device Management portal. http://<IP Address DMS server>/deviceconsole The Sign In dialog box displays.

Username
4.
Paseword
1
Remember me

3 Enter Username and Password. The Search Device screen displays.

Search	Device	
	Enter MAC ID:] q.

4 Enter the MAC ID of the new BC.

The BC Dashboard displays. The Summary at the top of the page should show "Ready."

Device Details	9	Provisioning Status
Aistid Name	54	O Transferrer 10 Produces
follower Verline	3,732,029	
Harthouse Vorskold	1	RP Status Count
Desite ORM IP	200100.124 (B	Par Sector
Fait Contact Time:	2019-10-19-02,12356-001-0707	-
Liet Activation Time	2019-08-01112/W3A-P11-07C	
Last Conduct Terror	2019-04-03 t2-46.22/474-UTC	\sim
Local Time Paner	107-630	In hervice: 2 * Out of Service
Extending Maximum	+	Textor Status

NOTE: Provision the remaining Device configurations to align with the failed BC configuration on the DMS Device Configuration page.

5 Scroll to the bottom of the page to view the Device PnP status.

If all of the PnP boxes have green checks, the BC replacement is successful. Stop here.

If one or more of the PnP boxes are red, those activities failed. Go to the Device PnP page to identify the failed activity.

Replacing Radio Points prerequisites and on-site activities

Prepare the network for the Radio Point replacement.

- Prerequisites
- On-site activities

Prerequisites

The following table contains a checklist of prerequisites for replacing an RP.

Prerequisite
SSH password
Replacement OneCell RP module

URAF

Prerequisite
Laptop for Web GUI access
Ethernet cable Note: Required for connecting the laptop to the OneCell Baseband Controller Management port

On-site activities

Before replacing the RP, delete the RP from the system using the WebGUI.

1 Connect the Ethernet cable to the MGMT port on the BC's front panel.



- **2** Open a supported browser.
- 3 Enter the IP address for the GUI, using the format below. https://<IP address of Management Interface>:6002
 Example: https://192.168.8.1:6002
 The Sign In dialog box appears.

Use	maine		
Pas	eword		
		Sign in	

4 Ensure the Management Mode tab is selected. The Dashboard displays.

Dateset	(and the second						
Derive Information Story View	tre lancing	GF	e terre terre PS ¹ terre	0			The second secon
lander of Sector		Une	~	100	-	inge kundenslog Sammer (ansemble)	
Seres Sata							
-					Generation	-inc fame	
man land		Darker of Print	tions Tax		(Marcal)	here in the second s	(0.0) (0.0) (0.0)
The local later	Three 1	-	-	(Allante)	(and a low of	trapping the second second	(M)
The Investor Same	6	Constant of	100	3494000	(shinks)	which have	16.6
Stores Seems Arrest	10,000,001,00	0.079.11	1861	ini-physical ar-	Operation C	with an Carlynamicy	
Service descent services	3891.22	200-11	100	-	Universite Auto	Coefficient Stream	141.0
American Party	-	-	hai '	14			
Northankar Martinia Barrito	and the lattice pro-	and the second	10.10				
		-	et			Armet	
And the owner.		-				-	equipado atomic



5 On the Dashboard, click the Radio Points link. The Radio Points Dashboard displays.

6 Click the RP Information tab.

Rathe Pulster								000
internal determine	-	-						
Max In Prover Selling Sector 2.58	Sale 2.00						-	int from blood had
theme it in particular								
🖸 brighten * boor		Distant Participants	Anneline -	Addition .	Swette late :	Despire the	PARTN.	And And Provident State
1	8	4 10	* 20	4 30	14 M			
· · · ·	1		Louise	-	-	and the second s	-	
	-	6B	idotti	100	OWALLE	(consta	manaan	#
denning (to (of) and the								Parties [4] mar

- 7 If one of the Radio Points is Down, select that RP by checking the box next to it.
- 8 Click Delete.
- **9** Check the Radio Point Information table to ensure the RP is deleted.

Replacing RP5100 series Radio Points

The following procedures provide instructions for replacing a OneCell Radio Point (RP) module in a live network environment.

- Replacing a ceiling RP5100i (above tile)
- Replacing a flown mounted RP5100i

5
- Replacing a pole mounted RP5100i
- RP post-replacement verification

Replacing a ceiling RP5100i (above tile)

1 Remove the ceiling tile next to the mounted RP to allow access to the mounting hardware and Ethernet cable.



2 Remove the RP cover.





- **3** Disconnect the Ethernet cable.



4 Replace the cover and twist the RP clockwise to remove it. Set the failed RP aside.



5 Attach the mounting plate to the replacement RP.

NOTE: Apply thread locking compound to the screws prior to installation.





6 Attach the RP to the octagonal mounting plate and twist to engage.



7 Remove the cover and connect the Ethernet cable to the MR port.

NOTE: The cover is attached to the RP with two lanyards.



8 Attach the plastic cover to the RP.

9 Replace the ceiling tile.



10 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a ceiling Indoor RP (on tile)

1 Remove the RP cover.

NOTE: The cover is attached to the RP with two lanyards.





2 Disconnect the Ethernet cable from the RP.



3 Replace the cover and twist the RP clockwise and remove the failed RP.



4 Attach the plate to the replacement RP.

NOTE: Apply thread locking compound to the screws prior to installation.





5 Attach the RP to the octagonal mounting plate.

6 Secure the RP to the plate by twisting the RP counterclockwise.



7 Remove the cover and connect the Ethernet cable to the MR port.NOTE: The cover is attached to the RP with two lanyards.





- **8** Attach the plastic cover to the Radio Point.

9 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a flown mounted RP5100i

1 Remove the RP cover.

NOTE: The cover is attached to the RP with two lanyards.



2 Disconnect the Ethernet cable.



3 Replace the cover and twist the RP clockwise.





- **4** Remove the failed RP.

DRAFT

5 Attach the mounting plate to the RP.

NOTE: Apply thread locking compound to the screws prior to installation.







6 Attach the RP to the octagon box.



7 Twist the RP counterclockwise.





8 Remove the RP cover.

NOTE: The cover is attached to the RP with two lanyards.



9 Connect the Ethernet cable to the MR port.





10 Replace the RP cover.



11 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a pole mounted RP5100i

1 Remove the RP cover.

NOTE: The cover is attached to the RP with two lanyards.





2 Disconnect the Ethernet cable.



DRAFT

3 Loosen the clamp and remove the RP.



4 Attach the bracket to the replacement RP.





5 Attach the replacement RP to the pole using the clamp.

6 Remove the cover and connect the Ethernet cable to the RP.NOTE: The cover is attached to the RP with two lanyards.





7 Replace the cover on the RP.



8 Verify the RP installation. The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing RP5100i RF modules

The following procedures provide instructions for replacing a OneCell Radio Point RF module.

WARNING

Disconnect the Ethernet cable(s) on the RP to remove the power. Failure to do so will cause damage the RP.

1 Remove the RP cover.



2 Disconnect the Ethernet cable on the RP.



3 Unscrew the RF module.



4 Remove the RF module.



5 Install the replacement RF module.

6 Secure it in the slot.



7 Connect the Ethernet cable.







$\mathsf{OneCell}^{\circledast}\;\;\mathsf{Hardware}\;\mathsf{Installation},$ Release 4.5

8 Attach the RP cover.



9 Verify the RF module installation. The operational state of the RF module can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing RP2000 series Radio Points

This procedure provides instructions for replacing a OneCell RP2000 series Radio Point in a live network environment.

Replacing a ceiling Indoor RP (above tile)

1 Remove the ceiling tile below the mounted RP to allow access to the mounting hardware and Ethernet cable.


2 Loosen the locking screw.

NOTE: The locking screw is not on newer RP2000s.



3 Disconnect the Ethernet cable.



4 Twist the RP to remove it.



DRAFT

5 Remove the mounting plate from the failed RP and attach it to the replacement RP.

Set the failed RP aside.

NOTE: Apply thread locking compound to the screws prior to installation.



6 Attach the RP to the octagonal mounting plate and twist to engage.



7 Connect the Ethernet cable to the RP.



T

8 Replace the ceiling tile.



9 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a ceiling Indoor RP (on tile)

1 Disconnect the Ethernet cable from the RP.



- **2** If there is a locking screw, loosen it.
- **3** Twist the RP.





4 Remove the RP. Remove the mounting plate from the RP and set the RP aside.

5 Attach the plate to the replacement RP.

NOTE: Apply thread locking compound to the screws prior to installation.



6 Attach the RP to the octagonal mounting plate.



7 Secure RP to octagon plate.



8 Connect the Ethernet cable to the RP.



9 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a flown mounted Indoor RP

1 Disconnect the Ethernet cable.



2 Remove the RP.



- **3** Remove the mounting plate from the RP and set the failed RP aside.

4 Attach the mounting plate to the replacement RP.

NOTE: Apply thread locking compound to the screws prior to installation.



5 Attach the RP to the octagon plate.



6 Secure the RP.





7 Connect the Ethernet cable to the RP.



8 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a pole mounted Indoor RP

1 Disconnect the Ethernet cable.



2 Loosen the clamp, remove the RP and set it aside.



3 Remove the bracket from the failed RP and attach it to the replacement RP.



Bracket

4 Attach the replacement RP to the pole using the clamp.



5 Connect the Ethernet cable to the RP.

DRAFT



6 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a vertical pole mounted Rugged RP

1 Disconnect the Ethernet cable and the antenna couplers from the RP.

Appendix D Field Replaceable Units



2 Remove the screws on the bottom of the RP and loosen the top screws.



3 Lift the RP off of the mounting plate and set it aside.



4 Insert two screws into the upper holes on the replacement RP.NOTE: Do not tighten the screws.



Ensure that the RP is oriented correctly with the two antenna connectors at the top of the RP.



5 Hang the RP to the mounting bracket using the installed screws. Align holes at bottom location of bracket and install two additional screws.





6 Insert two screws on the bottom of the RP and tighten all four screws.

NOTE: The torque requirement for the mounting screws is 20-21 in-lbs.



7 Connect the antenna couplers on the top of the RP.

NOTE: Check the antenna coupler manufacturer's documentation for torque requirements.

8 Connect the Ethernet cable RJ45 end to the bottom of the RP.



9 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a horizontal pole mounted Rugged RP

1 Disconnect the Ethernet cable and the antenna couplers from the RP.



2 Remove the screws on the bottom of the RP and loosen the top screws.

DRAFT



3 Lift the failed RP off of the mounting plate and set it aside.



4 Insert two screws into the upper holes on the replacement RP.NOTE: Do not tighten the screws.



5 Attach the RP to the mounting plate. Tighten the top screws on the RP and insert and tighten the bottom screws on the RP.

NOTE: The torque requirement for the mounting screws is 20-21 in-lbs.



6 Connect the antenna couplers on the top of the RP.

NOTE: Check the antenna coupler manufacturer's documentation for torque requirements.

7 Connect the Ethernet cable RJ45 end to the bottom of the RP.



8 Verify the RP installation. See The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

Replacing a wall mounted Rugged RP

1 Disconnect the Ethernet cable and the antenna couplers from the RP.



2 Remove the screws on the bottom of the RP, loosen the top screws and remove RP from mounting plate. Set RP aside.



3 On the replacement RP, insert two screws into the upper holes.



4 Attach the RP to the mounting plate. Tighten the top screws on the RP and insert and insert and the bottom screws on the RP.



NOTE: The torque requirement for the mounting screws is 20-21 in-lbs.

5 Connect the antenna couplers on the top of the RP.

NOTE: Check the antenna coupler manufacturer's documentation for torque requirements.

6 Connect the Ethernet cable RJ45 end to the bottom of the RP.

DRAFT



7 The operational state of the RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

For verification procedures, see RP post-replacement verification.

RP post-replacement verification

The operational state of the replaced RP can be determined by the LED status on the RP. Additional information can be attained from the WebGUI status screens.

1 Connect the Ethernet cable to the MGMT port on the BC's front panel.





- **2** Open a supported browser.
- **3** Enter the IP address for the GUI, using the format below.

https://<IP address of Management Interface>:6002

Example:

https://192.168.8.1:6002

The Sign In dialog box appears.

	Sign in to continue
	Isername
1	assword
	Sign in

DRAFT

Datteri	(a month	A TOTAL CONTRACTOR NOTES						10
Party Internation Street Internation	the line time time	GF	ng banto tama PS ^{tama} tam				timi.	4
lania (* 2005) Anno (2005)		Une	~	:=		15,0 Audit100	*	3
Income Statum								
Inclusion in the	24	- Part Faret			Cit ferrer 1	offgentive.		
and income	-	Contractor in	B	•	(and 1)			
Phy Section	Tank 1	-	Acres	(Allanter)	(all last	Trapped Transmission	140	
The Investor Sea	61111B	Contractor of	1001	3404000	Ophianel	with the logical	96.6	
States International Advantation	10,000,001,00	10.079-10	100	the particular in-	Operation C	with an Carlynnian		
Sector Sector sectors	1001-22	100-11	100	-	list-sait-kin	Contrast lines	-	
Renting Table	-	-	hai.	14				
Normalize Stations for	interior Des 2011 (C. Mari	at alters and an	10.00					
		-	-7.			Armet		
Ramal Victoria		The Distance in the Article of the Article			THE D PROFESSION OF THE PARTY O			

4 Ensure the Management Mode tab is selected. The Dashboard displays.

5 On the Dashboard, click the Radio Points link. The Radio Points Dashboard displays.



6 Click the RP Information tab. The RP Information page displays.



Ratio Puints						
internal descenter.	-					
Nach Poet (Mag. Server 2.58)	Sector 2.00				tons in	a lawy base had
them to Martine						
C bela factor * bear	Description	American - And	the street	white : Despises the .	17 Autom	Autoritate Press State (
	8.4 8	* 10.4	- <u>H</u>	8		
Diang a	1 A A	Lincold and	e parata	e identia	101212125	
D + Stone State IP in	tempton (Second Second	(000)	e even	000410 U	914444.00	bil.
a						Parties (A) and

7 Make sure the replaced RP is UP.