
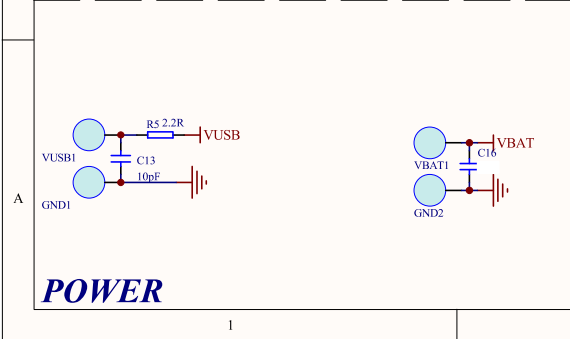


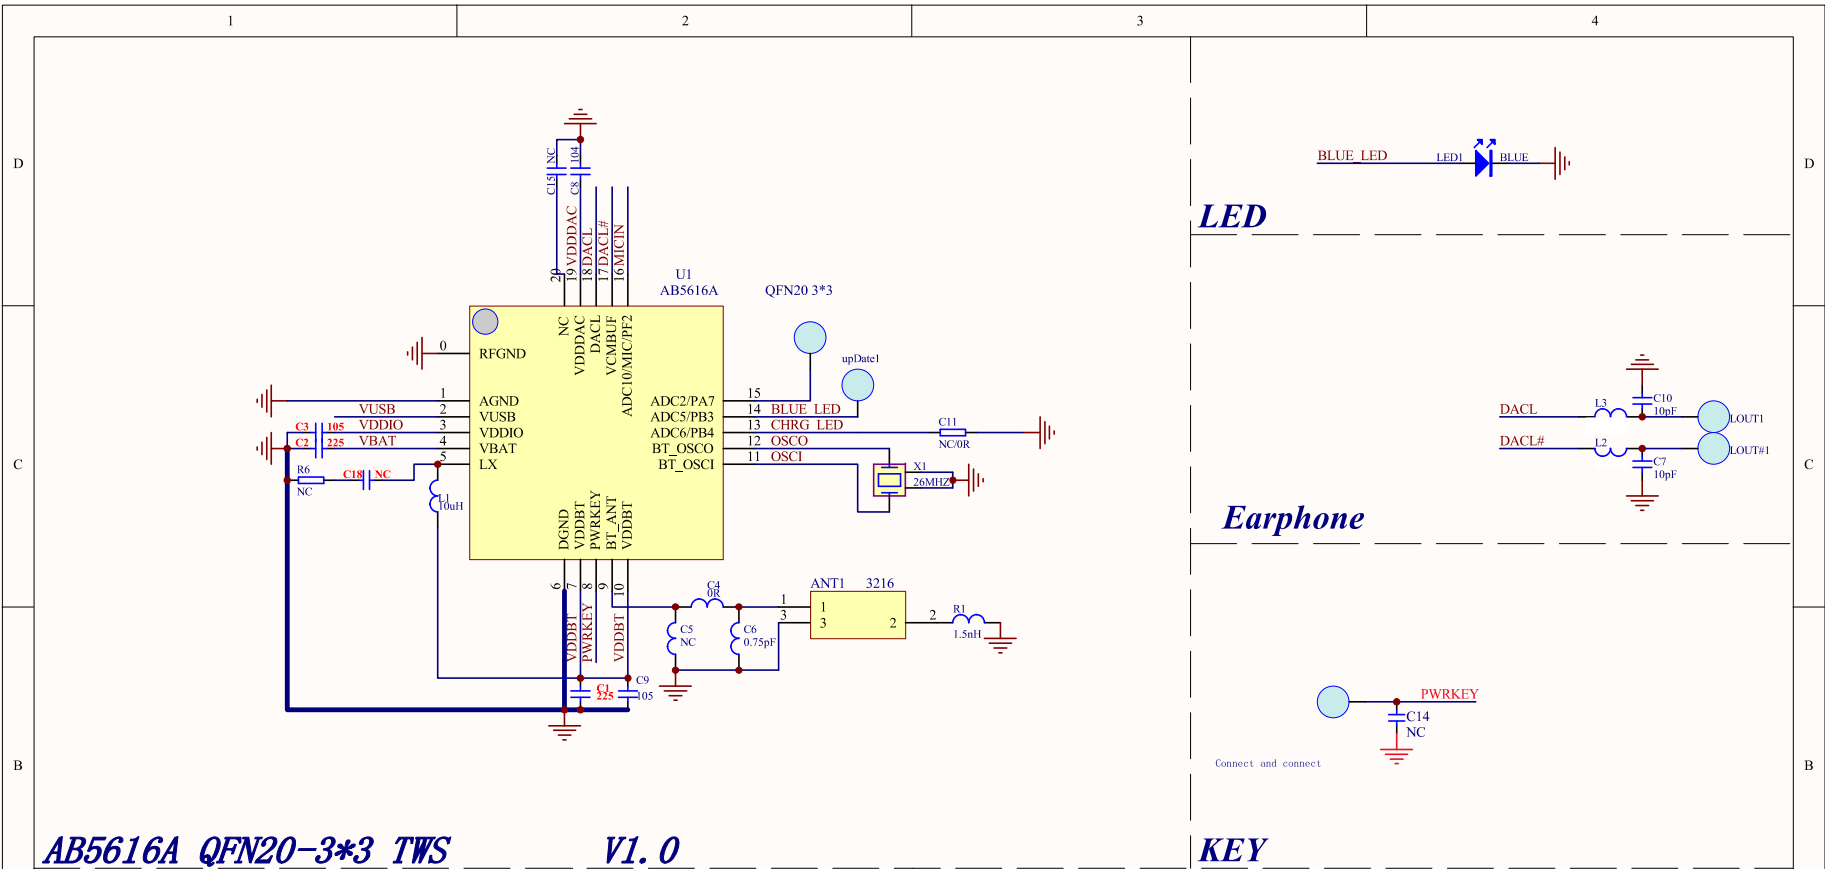

Connect the interface using the Xlink upgrade tool. The computer has set up the upgrade interface. The upgrade prototype turn on and upgrade automatically. Wait for the upgrade to complete.

Upgrade interface reserve:

Group 1: YBAT/GND/PB3

*upDate*

