
Phenomenon	Cause	Troubleshooting	
Wireless charging not working	Power supply doesn't meet requirements. Poor contact in power interface.	Use an adapter that meets requirements. Ensure secure connection of power port.	
Wireless charging slow	Product body temperature too high. Misaligned wireless charging area.	Let the product cool to room temperature. Place the phone in the center of the charging area for better alignment.	

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.

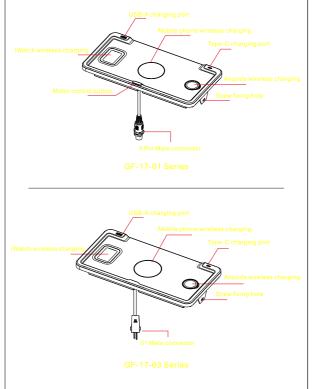


×						

GCteq吉成 Power freer• 用电更自由





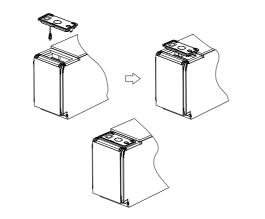

GF-17系列英文说明书

材质:75g普通书写纸

工艺: 单色双面印刷、风琴折

印刷要求:色相正确、印迹军固、套印准确、各色套印不漏杂色;套印误差≤0.1mm

说明书边角为直角、不做R角

240.00 mm