



**NO.1 POPULAR
ANC+ENC TWS EARPHONE**

BELETH EARSET PRO1

User Manual

Warning

Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to.

To reduce the risk of injury:

- Keep batteries out of reach of children,
- Do not heat, open, or dispose of battery pack in fire
- Do not allow metal objects to touch the battery on the device.
- Do not expose battery pack to excessive heat.

Product Specification

- Bluetooth version: V5.4+BR+EDR
- Bluetooth decoding: SBC, AAC
- Bluetooth working frequency: 2.402GHz-2.480GHz
- Frequency response: 20Hz-20KHz
- Speaker size: 13mm Speaker impedance: 320Ω±15%
- Effective distance: 10m
- Earphones battery capacity: 50mAh
- Charging case battery capacity: 400mAh
- Playing time: about 8 hours (80% Volume, ANC OFF), 6-7 hours (80%Volume, ANC ON)
- Talk time: 7 hours
- Earphone charging time: about 1.5 hours
- FCC ID:2AS7V-G54

Paring

1. Auto Pairing

Opening the charging case and, the earphones will automatically turn on and pair. Open up Bluetooth setting on your smart device and scan for Pret. If the earphone is not connected to the device within 3 minutes after power on, it will automatically power off.

Operation

1: Power on/off.

- Open the charging case, the earphone automatically turn on; Place earbuds into charging case and close the case, automatically turn off.
- Long press 5 seconds to turn on
Long press 5 seconds to turn off.

2: Play/Pause music.

When listening to music.
Tap the left/right earphone once to play or pause the music.

3: Volume +/-

When listening to music,
Triple tap the left earphone to decrease the volume.
Triple tap the right earphone to increase the volume.

4: Play Next Track

Double tap the left earphone to play previous track
Double tap the right earphone to play next track.

5: Transparency mode/ANC ON/ANC OFF

When taking the earphones out of the charging case, it is regular Bluetooth mode. Long press right earphones for 2 seconds to enter Transparency mode, Long press right earphones for 2 seconds again to enter Noise reduction mode, Long press right earphones for 2 seconds again to enter Regular Bluetooth mode

6: Answer/Hang up

When there is an incoming call.
Tap left or right earbud once to answer the call.
Tap left or right earbud once again to end the call.

7: Reject

When there is an incoming call
Long press the left or right earbud 2 seconds to reject the call

8: Voice assistant

Long press the left or right earbuds 2 seconds to activate voice assistant.

Charging Function

Fully charge the case and earphones before using for the first time.

1: Charging the charging case

• There is a Type-C cable included in the packaging. Connect it to the Type-C charging port and the other end into a USB powered source to charge your case.

2: Earphone charging

When the earphone is low battery, it will prompt "battery low" every minute and it will power off when the earphones completely out of battery.

a. Put the earphones into the charging case and close the case. The charging case will automatically charge the earphones, and the left and right pillars of the display on the charging case will flash.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

1

2

3

4

Dimensions: H90xL90mm
H90xL180mm

