











 



 


| | |
|--|--|
| <div>SwitchBot</div> <div>Remote</div> <div></div> | <p>radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">-Reorient or relocate the receiving antenna.-Increase the separation between the equipment and receiver.-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.-Consult the dealer or an experienced radio/TV technician for help. <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> |
| <div>In the Box</div> <div><div><div>remote</div></div><div><div>manual</div></div></div> <div><div><div>CR2450 Button Battery (In the Remote)</div></div><div><div>Add-on Hook & Loop</div></div></div> | <div>Option 3: Use a strap-hole and add a lanyard for portable uses. You need to purchase a lanyard separately.</div> <div></div> |
| <div>Device Instruction</div> <div><div><div>Concave Key</div></div><div><div>Convex Key</div></div></div> <div><div><div>Battery Box</div></div><div><div>Strap-hole</div></div></div> | <div>Pairing</div> <p>You can pair a Remote to control your target device like a Bot or a Curtain.</p> <p>Please place your phone, Remote and the target device close to each other before pairing. The rule of thumb for the distance would be within your eye sight.</p> <p>Tap the Remote icon on the App Home Page, and select setup/edit. The Remote will start scanning the target devices around. Follow the App instruction and map the keys to actions.</p> |
| <div>Installation</div> <p>1. Before using, please install the SwitchBot App and sign up/sign in your SwitchBot account. Then open the Battery Box.</p> <div></div> | <div>Mapping Keys</div> <p>You can set the keys on the Remote to map one action. One key on the Remote Button can trigger one action of your target device.</p> <p>For example, the Convex Key can trigger the Curtain to close OR open. And Concave Key can trigger the Bot to press once.</p> |
| <p>2. Remove the plastic battery isolation tab, and you should see the light flashes once.</p> <div><div>Light</div></div> | <div>Low Battery</div> <div></div> <p>When you see a red battery icon on the App Home Page next to the Remote, you need to change the battery.</p> |
| <p>3. Put back the Battery Box and turn on the Bluetooth on your phone. Tap Add Device in the left side menu and choose Remote. Follow the App instruction and add your device.</p> <div></div> | <div>Factory Reset</div> <p>Long press both keys together for 15 seconds until the light stop flashing. You should see the light lights up for 1.5s after releasing the button.</p> <div></div> <p>Caution: You may lose all the settings after Factory Reset and you may need to add the device and pair again.</p> |
| <div>Placement</div> <p>After you add the Remote, you may place it anywhere</p> <p>Option 1: Place it on your table.</p> <div></div> | <div>Specification</div> <p>Model Number: W0301700 Color: White Material: ABS plastic with UV-Resistant coating Product Size: 37.1mm x 43.1mm x 13.4mm Product Net Weight (with battery): 17.7 g Power: CR2450 Connectivity: Bluetooth 5.0 Long Range</p> |
| <p>Option 2: Use the Add-on Hook & Loop to place it on a vertical surface.</p> <div></div> | <div>Return and Refund Policy</div> <p>SwitchBot Curtain has one-year warranty (start from the purchasing day). The situations below do not fit the Return and Refund Policy</p> <ul style="list-style-type: none">Intended damage or abuse.Inappropriate storage (drop down or soaking in water).User modify or repair.Using loss.Force majeure damage (Natural disasters).The batteries are not in the warranty. |
| <div>FCC Warning</div> <p><small>FCC Warning This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes, modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to</small></p> | <div>Contact and Support</div> <p>Setup and Troubleshooting: support@switch-bot.com Support Email: support@wondertechlabs.com</p> <p>Feedback: Please send feedback via the SwitchBot App in the left side menu with the details of the issue.</p> |