


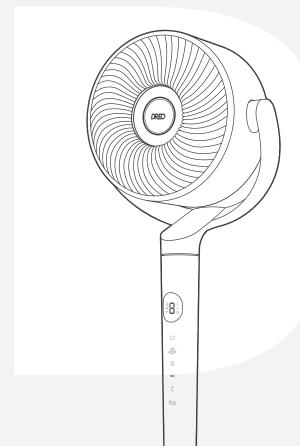

USER MANUAL



"

Thanks for Choosing **DREO!**

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

CONTENTS

01

IMPORTANT SAFETY INSTRUCTIONS

1-3

03

CONNECTING TO YOUR APPLIANCE

7

05

USING YOUR APPLIANCE

10-15

TROUBLESHOOTING

19

02

ASSEMBLING YOUR APPLIANCE

4-6

04

KNOWING YOUR APPLIANCE

8-9

06

CLEANING AND MAINTENANCE

16-18

08

DREO CUSTOMER CARE

20-22

IMPORTANT SAFETY INSTRUCTIONS





READ ALL CAUTION-ARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUC-TIONS IN THE USER MANUAL BEFORE



Do not cover the air inlet and outlet while in operation.



Do not use the air

circulator near

combustibles

flammables and

General Safety

- 1. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
- 2.Use the appliance as deścribed in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
- 3.This appliance can be used by children aged above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.

Operation Safety

- 1. Place the appliance on a flat, dry surface before use.
- 2.Do not immerse in water and any other liquids.
- 3. Do not use the appliance until the base is installed.
- 4.**Do not** insert your fingers, pencil and any other objects into the grilles under any circumstances.
- 5.Do not dismantle, repair, or modify. All servicing should be performed by qualified personnel.
- 6. Do not operate the unit close to the curtain. Do not hang foreign objects on the grille to prevent damaging the balance of the fan or rotational structure.
- 7. **Do not** operate the fan under overly humid, high-temperature, dusty environment or the place where acid or alkali is stored.

- 8. Fans should never blow directly on infants, the elderly, and patients for a long time.
- When the unit is not operated during maintenance period, please cut off the power and then unplug the power plug.
- 10. Do not pull the power with wet hands.
- 11. Do not put or install the fan on the oblique plane to prevent inclination or other abnormal phenomenon.
- 12. During the operation process, do not insert your fingers or sharp objects into grille to prevent personal injury or damage to the fan.
- 13. Do not operate the unit close to fire source or inflammable objects.
- 14. WARNING: NOT SUITABLE FOR USE WITH SOLID-STATE SPEED CONTROLS.
- 15. Ensure that the fan is switched off from the supply mains before removing the guard.

Electricity Safety

WARNING:

- 1. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
- 2. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
- 3.Do not operate any air circulator with a damaged cord or plug. Discard air circulator or return to an authorized service facility for examination and/or repair.
- 4.Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 5. WARNING: To reduce the risk of fire or electric shock, do not use this air circulator with any solid-state speed control device.
- $6. \mbox{Use} \ 24 \mbox{V/1.5A}, \mbox{Class} \ 2 \mbox{ power adapter only. Turn off the appliance before plugging.}$
- 7. WARNING: To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
- 8.If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- WARNING: To reduce the risk of fire, electric shock and injury to persons, the unit body must be installed with the chassis that are marked (on their cartons) to indicate the suitability with this model. Other chassis cannot be substituted.

FOR HOUSEHOLD USE ONLY **READ AND SAVE THESE INSTRUCTIONS**

Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.

Loud noise, unusual smell or excessive heat.


Specifications


Model No.:	DR-HPF008S
Power Supply	24V==1.5A
Rated Power	36W
Power Adapter	Input: 120V~60Hz 1.0A Output: 24V == 1.5A
Battery Type	CR2025 3V


ASSEMBLING YOUR APPLIANCE

Assembly Instructions

When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

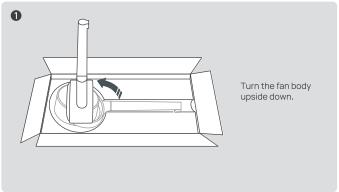

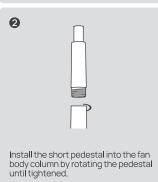

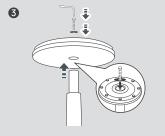

Push the column into the base, then thread the screw through the flat washer and use the included screwdriver to drive the screw into the bottom of the column.






Hold the main body while rotating the Adjustment Collar counterclockwise to raise or lower the pedestal air circulator fan to the desired height.



Tighten the adjustment collar and install the remote control holder

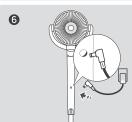

Connect the power adapter to the input (located at the back of the appliance), and then plug the appliance into the power outlet.




①

CAUTION

Do not operate the pedestal air circulator fan if the base has not been installed.

Please exercise caution and handle the base with care during installation.

Package Contents

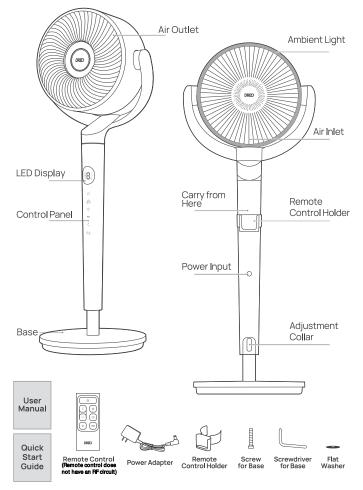

CONNECTING TO YOUR APPLIANCE



Before connecting the appliance to your mobile device, please scan the QR code on the left or go to the app store and search "DREO", then select and download the app.





Look for "PolyFan 508S" when connecting your new appliance.



You can use the DREO app to connect your appliance to **Amazon Alexa** or **Google Home**. Please follow the in-app instructions to set up your voice assistant.

NOTE: You must create a DREO account to access voice assistants.

- Launch DREO and sign in or create account by following in-appinstructions.
- 2 Enable Bluetooth on your mobile device and plug in your appliance.
- Hold the Oscillation button for 5 seconds to start WiFi connection settings.

 (Tip: The WiFi icon will keep flashing when pairing.)
- Tap+ Add Device and select PolyFan 508S.
- 5 Follow in-app instructions to complete WiFi connection.
- You're now ready to control the appliance on your app.

 (Tip: To restart connection settings, hold the Oscillation button again for 5 seconds.)

Long press 10 seconds power button (1) to unpair WiFi and restore factory settings.

KNOWING YOUR APPLIANCE

04

Control Panel



Power Button (On/Off)

- Turn fan On/Off
- Long press for 10 seconds to restore factory settings.



Fan Speed Button (1-9 Levels - Turbo)

· Long press for 3 seconds to start timer settings.



Ambient Light Button (On/Off)

· Long press for 3 seconds to mute/unmute



Ambient Light Color Button



Vertical Oscillation Button

0°/30°/60°/90°



Horizontal Oscillation Button

- 0°/30°/60°/90°/120°
- · Long press 5 seconds to start network settings and device pairing.

LED Display









Fan Speed/Timer Hour








USING YOUR APPLIANCE




Getting the Most out of Your Pedestal Air Circulator Fan

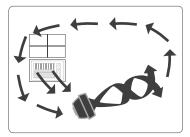

Summer:

Use with Air Conditioner


Position the pedestal air circulator fan in front of your AC to circulate cold air and provide better cooling.

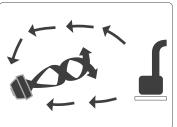

Winter:

Use with Heater

Send the heat to corner of the room and circulate warm air faster.

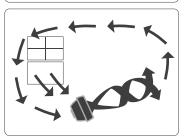

Spring & Fall:

Circulation

Make the indoors as fresh and pleasant as the outdoors.

Working Modes

(You can switch modes through the DREO app).



Normal Mode

Fan runs at the fixed speed.



Auto Mode (Available in the DREO APP)

Fan automatically increases speed when room temp is higher and decreases speed when temp is lower.



Turbo Mode

Fan runs at the maximum speed.



Natural Mode (Available in the DREO app)

Fan speed goes up and down intermittently to replicate the natural breeze



Custom Mode (Available in the DREO app)

Fan speed changes according to temperatures or time you desire.



Sleep Mode (Available in the DREO app)

Balance comfort and noise by automatically decreasing fan speed as you fall asleep.

If the fan speed is higher than 4, it will decrease two times, one speed every 30 minutes, then it will remain constant.

If the fan speed is 3 or below it will remain constant.

Unlock custom light effects with the DREO app



Breath: Light dims up and down for a calming effect.



Constant: Light remains unchanged, ideal for providing a steady background light.



Circle: Light cycles through different colors, ideal for small parties or gaming setups.

Additional Features



Timer

When the fan is ON/OFF, touch the timer button (4) repeatedly to set a timer from 1 to 8 hours. When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

Note: When the auto off timer is enabled, display will return to fan speed after 3 seconds.

Display will show 8 if the timer is beyond 8 hours. To set a timer beyond 8 hours, please go to the DREO app.



Child Lock

Long press the Horizontal Oscillation button () and Vertical Oscillation button () at the same time for 3 seconds to turn on/off Child Lock.

Note: Child Lock doesn't apply to operations from the remote control and the DREO app. You can also turn off Child Lock by re-plugging in, resetting to factory settings, or through the DREO app.



Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.



Countdown Display

When long pressing buttons for Factory Reset, Child Lock, and Mute, a countdown will show on the display accordingly.



Firmware Update

Check the firmware version on the DREO app and update regularly for the air circulator to work more efficiently.

Do not operate until the update is completed.




Display Auto Off


Display turns off after 1 minute (after 5 seconds in sleep mode). Wake up the display with any button.

To disable this feature, please go to the DREO app.

Remote Control

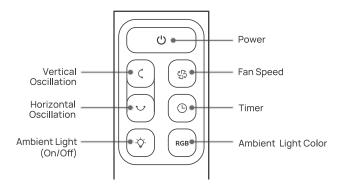

Battery Replacement

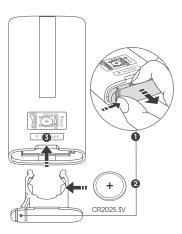

- Keep the locking tab pressed while pulling out the battery holder from the slot at the back
- 2 Replace with the same battery type with the (+) side facing up.
- 3 Push in the holder until securely locked in place.

Note: If the appliance doesn't respond when using the remote control in close range please consider replacing the battery.

MARNING

- INGESTION HAZARD: This product contains a button cell or coin battery
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN.
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Compatible battery type: CR2025.
- e) Battery nominal voltage: 3.0 Vdc
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above (rated temperature: 140 °F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- h) Ensure the batteries are installed correctly according to polarity (+ and -).
- i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

CLEANING AND MAINTENANCE





Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Base

The base can be disassembled in the reverse order of assembly.

CAUTION



- 1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
- 2. Do not immerse in water or get water inside the motor housing.
- 3. Do not use any chemical agents when cleaning the fan.
- 4. Store in a cool, dry place and cover it to protect from dust.


WARNING

To reduce the risk of electrical shock and injury to persons, turn off and unplug the appliance before any cleaning and maintenance.






Remove the screw on the front grille, rotate the grille counterclockwise to take off.

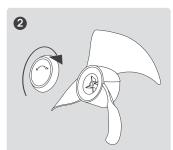


Remove the blade cap by rotating it as shown and take the blade assembly out of the shaft.



Rinse cap, blades, and grille under running water or with a clean, damp cloth

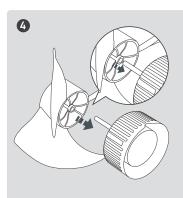

Dry up all parts, and insert the blade assembly back into the shaft by aligning the D-shaped points on the center.

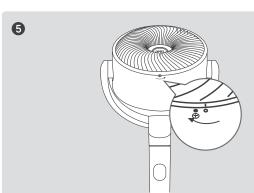

Align the point on the front grille with the right point on the casing, then rotate the grille clockwise and install the screw back in place.

TROUBLESHOOTING

My pedestal air circulator fan won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the pedestal air circulator fan.

My pedestal air circulator fan is shaky and wobbling!

- 1. Place the pedestal air circulator fan on a flat, level surface.
- 2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in page 4-5.

My pedestal air circulator fan is making vibration and noise!

- 1. Place the pedestal air circulator fan on a flat, level surface.
- 2. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our Customer Support (see page 22)

DREO CUSTOMER CARE



Default 12-Month Warranty

This appliance is covered by DREO warranty for 12 months from the date of its original purchase.

Extend Your Warranty

Extend your warranty by registering your new appliance on our website https://dreo.com/warranty.

The warranty will not apply in cases of:

- 1. Accident, misuse, or repairs performed by unauthorized personnel.
- 2. Any unit that has been tampered with or used for commercial purposes.
- 3. Normal wear and tear of wearable parts.
- 4. Use of force, damage caused by external influences.
- **5.** Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- 6. Partially or completely dismantled appliances.
- 7. Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by DREO.

We can only provide after-sales service for products that are sold by DREO or DREO authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an

uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

Model No.: DR-HPF008S Rev_1.1_EN

We're Here to Help!

(888) 290-1688 (Mon-Fri, 9:00 am-5:00 pm PST/PDT)

www.dreo.com

support@dreo.com

26F, Bldg A7, Creative City, Shenzhen, China





www.dreo.com

Looking for help?

Contact us to get expert support.





