


Size: 414x57mm, 材质：128g铜板纸，双面印刷，
蓝色线为刀模线，不需要印刷

HYPER® QUICK START GUIDE


TRUE WIRELESS STEREO EARBUDS

USING THE PORTABLE CHARGING CASE

We recommend that you keep the earbuds in the portable charge case when not in use. While on-the-go, the case doubles as a charging solution for the earbuds. Simply put the earbuds into the charging case. Press the button on the charging case to turn on the case. And the earbuds will begin to charge, a full charge of the earbuds takes 1.5 hours.



Connect the Micro USB cable to the charging port on case. A full charge of the case battery takes up 2 hours. When the case is charging, the LED light flashes red. The red light will turn to blue when fully charged.



Red is charging. Blue is fully charged!

1

Your earbuds come pre-paired. If they lose connection, please follow the below steps to reconnect.

Press and hold multifunction buttons on both earbuds to power on both earbuds, then wait till the indicator lights flash red and blue on both earbuds.

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

2

The two earbuds will pair to each other automatically. The indicator lights of both earbuds will flash blue three times to indicate they are paired successfully.

- Press and hold the button on Right or Left earbud for 3 second to turn earbuds on/off.

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

3

Turn on Bluetooth on your phone or tablet. Choose "HY-T2W". Enter "0000" if asked. You're paired! Both earbuds flash blue every 6 seconds.

4

To turn OFF press and hold the multifunction button on either earbud until the LED flashes red for three times.

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

USING EARBUDS FOR DIFFERENT DEVICES

The earbuds can be paired to different devices. For example, you can use one earbud with a smart phone and the other earbud for a tablet.

1

Turn on one earbud by press and hold the multifunction button for 3 seconds. The earbud flash red and blue. Leave the other earbud turned off.

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

2

Select "HY-T2W" from the Bluetooth menu of your first device. Enter PIN code "0000" if asked. This earbud is ready to use.


3

To pair the other earbud, make sure your other wireless device is nearby. Same pairing operation as the first earbud. Choose "HY-T2W". Enter "0000" if asked.

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

MUSIC CONTROLS (using as pair)




- Press the button on Right or Left earbud once to pause/play your music.
- Double press the button on Left earbud to decrease the volume.
- Double press the button on Right earbud to increase the volume.
- Triple press the button on Left earbud to skip backward.
- Triple press the button on Right earbud to skip forward.
- Press and hold the button on Right earbud for 1 second to use Siri / Google Assistant.

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

PHONE CALL CONTROLS (using as pair)



- Press the button once on Right or Left earbud to answer or end call.
- Press and hold the button on Right or Left earbud for 1 second to reject a call.
- Press and hold the button on Left earbud for 1 second to redial last call made.

NOTE: When answering calls, the call can be heard and controlled by the master earbud only.

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

CONNECTION LOST?

- If only one earbud works, turn off the earbud and reconnect earbuds as a pair.
- If paired two earbuds don't work, turn off the earbud and reconnect earbuds as a pair.
- Make sure your earbuds are within range of your smart device.
- If you hear a long beep, you need to recharge your earbuds. Connection may be lost due to low battery.

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AANZT2W BT ID: D044460

HYPER® QUICK START GUIDE

TRUE WIRELESS STEREO EARBUDS

WARRANTY

This product is covered by a 3 month limited manufacturer's warranty. Contact us if you have any problems at support@dglusa.com.

WARNING

Keep away from water and moisture.
Keep away from heat sources.
Do not disassemble.

