



LTX™ Activity Monitoring System transmitter module installation procedure



Warning (In according to FCC part 15.19):

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.



Caution (Pertaining to FCC part 15.21):



Modifications to this equipment not expressly approved by GOJO Industries, Inc. could void the user's authority to operate the equipment.

This unit is certified to FCC Part 15 Part C for intentional unlicensed radiators. FCC ID O76-T4SG0910A

1. Press the LTX door latches inward to release the door.




2. Pull the top of the door forward.

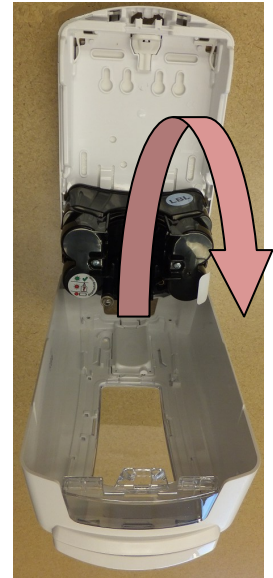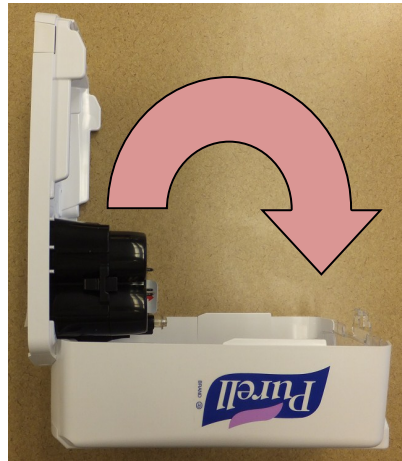


3. Use a flathead screwdriver to lift the slot cover away from the cabinet.




4. Remove and discard the slot cover.

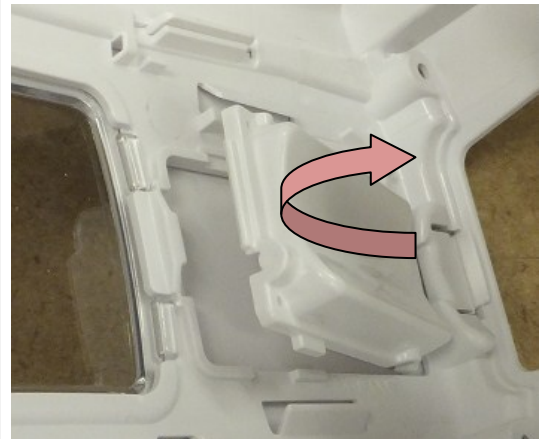


5. Remove the LTX transmitter module from the packaging and straighten the antenna wire.

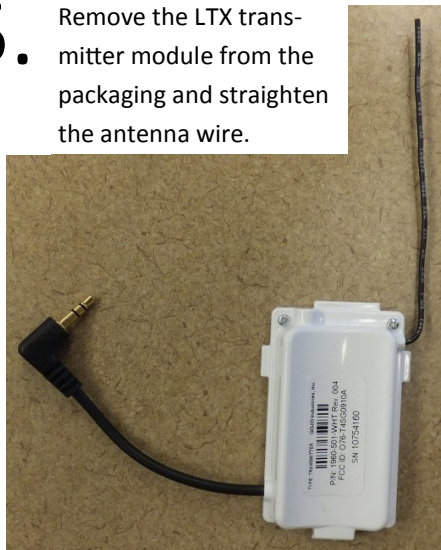

6. Align the transmitter module base into the fitting in the door, and feed the antenna wire up through the retainerslots.

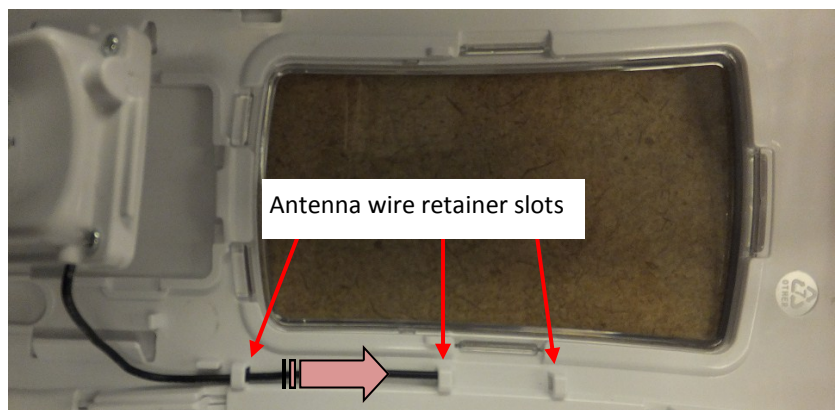

- 7.** With the antenna wire in place, swing the top of the module down and snap into place to secure the module.

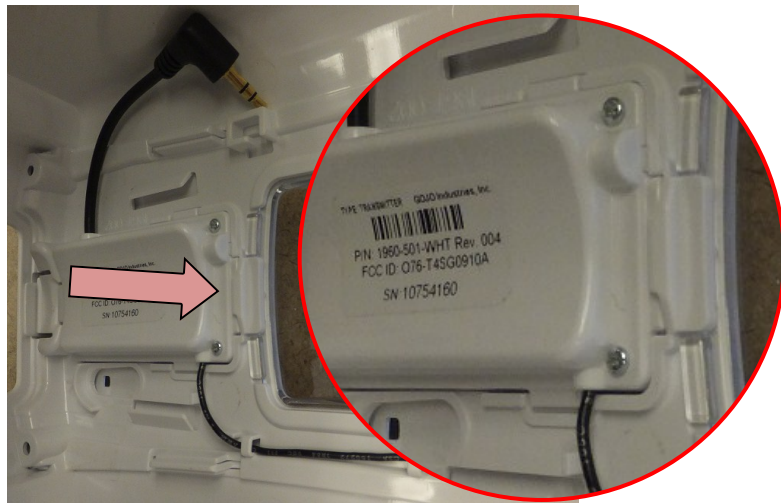


- 8.** Check to ensure that the battery tab is present. If the battery tab is not present, place a battery tab into the slot before proceeding to the next step.




Battery tab

- 9.** Insert the module cable into the jack on the front of the pump house, and press in firmly to secure the plug.

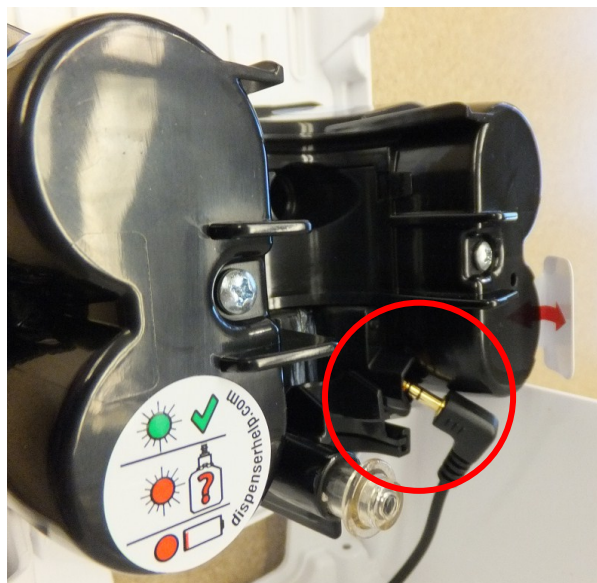

- 10.** Remove the battery tab to apply power to the LTX dispenser.

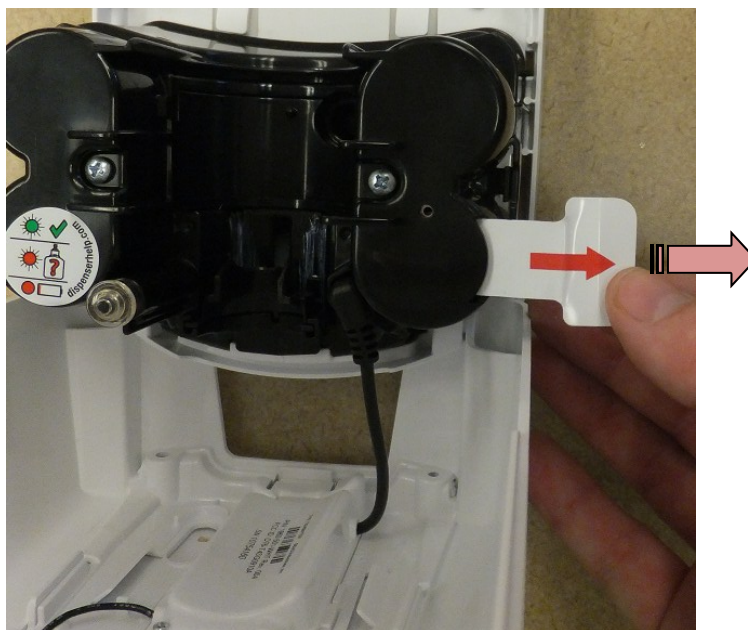

- 11.** Load the dispenser with an appropriate product refill if needed. Close the dispenser door and watch for the green light to start flashing after a few seconds. If the light flashes red, or does not flash at all, reopen the door and check for problems.

Status light

