User manaul

Model: X300 DP

Brand: OBDSTAR

Safety Precautions

Before using Key Master DP, please read the following safety information carefully.

- 1. Never collide, throw, or punch Key Master DP, and avoid falling, extruding and blending it.
- 2. Do not use Key Master DP in exceptionally cold or hot, dusty, damp or dry environments.
- 3. In places where Key Master DP is forbidden or using Key Master DP may cause interference or generate a potential risk, please turn off it.
- 4. To ensure a safe driving, please do not use Key Master DP while driving.
- 5. Turn off Key Master DP before boarding any airplane.
- 6. Never place Key Master DP into apparatus with strong electromagnetic field.
- 7. Do not dismantle Key Master DP by yourself. If there is any inquiry, please contact the dealer.
- 8. Keep Key Master DP far away from magnetic devices because its radiations may erase the data stored on the devices.
- 10. Do not use Key Master DP in high temperature and other environment with flammable gas, such as gas station.
- 11. Store Key Master DP out of reach of children and do not allow children to use it unsupervised.
- 12. Please use the included battery and charger. Otherwise, explosion may happen.
- 13. Adhere to laws and regulation, respect people's privacy and legal rights, during operating Key Master DP
- 14. Follow the instructions strictly when using USB cable, otherwise, it will damage your Key Master DP and PC.

Precautions on Using Key Master DP

- •The ignition switch should be OFF while plugging or unplugging the diagnostic connector.
- •Do not disconnect the vehicle inner consumer when the ignition switch is on. High voltage transients may encounter at the moment of disconnecting, which may damage the sensors and the ECU.
- Keep the computer from magnetic object.
- Do cut off the power supply of ECU system before welding on the vehicle.
- Pay more attention to the ECU and the sensors when the operation is next to them.
- Ground yourself when you disassemble PROM, otherwise ECU and sensors will be damaged by static electricity.
- Do connect ECU harness connector firmly, otherwise electronic elements, such as IC inside ECU, will be damaged.

Content

1	INTRODUCTIONS	1
	1.1 PRODUCT PROFILE	1
	1.2 FEATURES	1
	1.3 KNOWLEDGE OF KEY MASTER DP	2
	1.3.1 Key Master DP Whole Set	2
	1.3.2 Key Master DP Tablet Computer	2
	1.3.3 Key Master VCI Connector	3
	1.4 TECHNICAL PARAMETERS	3
	1.5 PACKAGE LIST	4
2	PREPARATIONS	5
	2.1 CHARGE Key Master DP	5
	2.2 USING BATTERY	5
	2.3 POWER ON/POWER OFF Key Master DP	6
	2.3.1 Power on	6
	2.3.2 Power off	6
	2.4 ABOUT DESKTOP	6
	2.5 CUSTOMIZE YOUR DESKTOP	6
	2.5.1 Add items on the desktop	6
	2.5.2 Move items on the desktop	6
	2.5.3 Delete items from the desktop	6
	2.5.4 Change your wallpaper	7
	2.5.5 Create a folder on the desktop	7
	2.6 ON USING TOUCH SCREEN	7
	2.7 AUTO-ROTATE THE SCREEN	7
	2.8 LOCK & UNLOCK THE SCREEN	7
	2.8.1 Lock the screen	7
	2.8.2 Unlock the screen	7
	2.9 NOTIFICATION PANEL	8
	2.9.1 Turn on the notification panel	8
	2.9.2 Turn off the notification panel	8
	2.10 INPUT METHOD	8
	2.11 HOW TO SET AS AIRPLANE MODE	9
3	HOW TO DIAGNOSE	9
	3.1 CONNECT VCI CONNECTOR	9
	3.2 BLUETOOTH SETTING	10
	3.3 DIAGNOSIS FLOWCHART	10
	3.4 USER REGISTRATION & DIAGNOSTIC SOFTWARE DOWNLOADING	11
	3 .4.1 User registration	11
	3.4.2 Diagnostic software downloading	12
	3 .4.3 Main interface of diagnostic software	13
	3.5 START DIAGNOSING	14

	3 .5.1	Read vehicle information	17
	3 .5.2	Read trouble code	17
	3 .5.3	Clear trouble code	18
	3 .5.4	Read data stream	19
	3.6 MAINT	ENANCE DATABASE	19
	3.7 VIDEO	CENTER	20
	3.8 ONE KE	Y UPGRADE	20
	3.9 SYSTEM	1 SETTING	21
	3.9 .1	VCI infomation	21
	3.9 .2	Language	22
	3.9 .3	Unit	22
	3. 9. 4	Data logging	23
	3.9 .5	User information	23
	3.9 .5.	1 User login	24
	3.9 .5.	2 User registration	24
	3.9 .5.	3 Forget password	25
	3.9 .5.	4 Registration information	25
	3.9 .5.	5 Information modifation	26
	3.9 .5.	6 Change password	26
	3.9 .6	Help	27
	3.9 .7	About	28
	3.10 REMO	TE ASSISTANT	28
	3.11 REPOR	RT CENTER	29
4 O	THERS		30
	4.1 EMAIL.		30
	4.1.1	Add an email account	30
	4.1.2	Delete an email account	31
	4.1.3	Send an email	31
	4.1.4	View email	31
	4.2 WLAN .		31
	4.3 BROWS	ER	32
	4.3.1	BROWSER	32
	4.3.2	Browse a webpage	32
	4.3.3	Zoom in / zoom out a page	32
	4.3.4	Save favorite webpage to bookmark	32
	4.3.5	Open multiple pages	
	4.3.6	Customize internet settings	33
		BLUETOOTH	
	4.4.1	Open Bluetooth	
	4.4.2	Allow other devices to search for Key Master DP	
	4.4.3	Search other devices and pair Key Master DP with it	
	4.4.4	Send file	34
	4.5 Video		34
	4.5.1	Open and close video	34

	4.5. 2	Take a photo	34			
	4.5. 3	View a photo	35			
	4.5. 4	Record a video	35			
	4.5. 5	View a video	35			
	4.5. 6	Customize camera setting	36			
	4.5. 7	Customize camcorder setting	36			
	4.6 GALLER	Υ	36			
	4.6.1	Open gallery	36			
	4.6.2	Browse images	36			
	4.7 MUSIC.		37			
	4.8 CALCUL	ATOR	37			
	4.9 CALEN	NDAR	37			
	4.10 AIAR	M	37			
	4.10.1	Add an alarm	37			
	4.10.2	Delect an alarm	37			
	4.10.3	Customize your alarm	38			
	4.10.4	Countdown setting	38			
	4.10.5	Second clock setting	38			
4.11 ES FILE BROWSER						
	4.12 DISPLA	ΑΥ	39			
	4.12.1	Brightness	39			
	4.12 .2	2 Auto-rotate the screen	39			
	4.13 SET SC	REEN LOCK	39			
	4.14 APPLIC	CATIONS	39			
	4.14 .1	View installed applications	39			
	4.14 .2	2 View the running applications	40			
	4.15 LANGU	JAGE & INPUT METHOD	40			
4.16 SET DATE&TIME						
	4.17 RESTO	RE KEY MASTER DP TO FACTORY SETTINGS	41			
	4.18 Storage41					
	4.19 APPS	S INSTALLAION &UNINSTALLATION	41			

1 INTRODUCTIONS

1.1 PRODUCT PROFILE

Key Master is a new Android-based vehicle trouble diagnostic device developed for internet applications. It inherits from OBDSTAR advanced diagnosing technology and it characterized by covering wide range of vehicles, featuring powerful function, and providing precise result.

Through Bluetooth communication between vehicle diagnostic OBD connector and variant mobile intelligent terminals, it achieves vehicle trouble diagnosis for full car model and full system vehicle.

Meanwhile, taking advantage of mobile internet, Key Master DP integrates more application and service, such as Maintenance Database, remote assistant, One Key Update etc.

1.2 FEATURES

- 1. Diagnostic function:
 - Can diagnose the electronic control system of prevailing vehicle models covering Asian, European, American and Chinese. Diagnosis functions include: Read DTCs, Clear DTCs, Read data stream, Special functions etc;
 - Classify special function: ABS, EEPROM Adapter Battery match CVT learning EPB
 Gear learning, Immobilizer TPMS(low tire)reset, Mileage adjustment, ECU programming steering angle reset.
 - Specially designed for Android platform with clear and user-friendly interface;
- 2. Maintenance database: equipped with powerful database.
- 3. Video center: large amount of videos help users to operate device easily.
- 4. One Key Upgrade: built-in wifi mode can realize application downloading and diagnostic function by one key upgrade.
- 5. System setting: set VCI formation, language, unit, data logging, user information, help function etc;
- 6. Remote assistance: to achieve remote assistance by this function.
- 7. Report center: to record maintenance data logging and create reports during operation.

1.3 KNOWLEDGE OF KEY MASTER DP

1.3.1 Key Master Whole Set

Key Master DP is composed of Key Master DP tablet computer and VCI connector.

1.3.2 Key Master DP Tablet Computer



1.3.3 Key Master VCI connector



1.4 TECHNICAL PARAMETER

Key Master DP:

- Operation system: Android 5.1
- CPU: Exynos4418 Dual Core ARM Cortex A9 1.4GHz
- Battery: 7400mAh, rechargeable polymer lithium battery
- Standby time: subject to the using environment, it can keep working for 7 hours generally.
- Extension memory card: 32G MicroSD (TF)card supported
- Memory capacity: 2GB
- Storage capacity: 16GB
- LCD: 7.0
- LCD resolution: 1280*800

- Touch screen: capacitive touch screen
- Camera: 5 mega rear view camera
- Wi-Fi: supported
- Bluetooth: supported
- Working temperature: -10° C~55 $^{\circ}$ C (14 $^{\circ}$ F~131 $^{\circ}$ F)
- Storage temperature: $-20^{\circ}\text{C}^{\circ}70^{\circ}\text{C}$ ($-4^{\circ}\text{F}^{\circ}158^{\circ}\text{F}$)
- Weight: about 1 Kg
- Dimension: 100mm*100*mm*10mm

VCI Connector parameter:

- Working voltage: 9~15V
- Working current: about 35mA
- Standby current: 25mA
- Working temperature: $-20^{\circ}\text{C} \sim 55^{\circ}\text{C} (-4^{\circ}\text{F} \sim 131^{\circ}\text{F})$
- Storage temperature: $-30^{\circ}\text{C} \sim 70^{\circ}\text{C} (-22^{\circ}\text{F} \sim 158^{\circ}\text{F})$
- Storage humidity: <80%
- Working humidity: <60%
- Net weight: about 26g

1.5 PACKAGE LIST

Please check the following accessories while purchasing:

- Key Master DP tablet computer
- Key Master DP User's Manual
- VCI box
- Diagnostic connector

•

2 PREPARATION

2.1 CHARGE KEY MASTER DP

- 1. Connect the included USB cable with charge.
- 2. Plug the charge into AC outlet.
- 3. When it starts to charge, battery logo indicates



4. When battery logo changes into



it indicates that the battery is fully charged and then disconnect

charger from AC outlet.

5. Unplug USB cable on the charge from Key Master DP.



2.2 USING BATTERY

- If the battery keeps unused for a long time or battery is completely discharged, it is normal if
 it can not be turned on while being charged. Please charge it for a period and then turn it
 on.
- Using data service will cause more power consumption and shorten the standby time.
- The charging time of battery varies with temperature condition and battery consumption status.
- While Key Master DP has low battery, a beep will sound. If it is very low, Key Master DP will be switched off automatically.

Note: Do one of the followings to save power:

- 1. When Key Master DP keeps unattended, press POWER key to turn off the LCD.
- 2. Shorten the standby time: Enter main menu, choose "Settings" > "DEVICE"> "Display" > "Sleep" to select a shorter standby time.
- 3. Decrease the brightness of LCD display: Enter main menu, choose "Settings" > "DEVICE" > "Display" > "Brightness", and then drag the slider to adjust it.
- 4. Change "Live wallpaper" into "Gallery".
- 5. Set Bluetooth off: Enter main menu, choose "Settings" > "Wireless & Network" > "Bluetooth", and then toggle the switch to OFF.
- 6. Set Wi-Fi off: Enter main menu, choose "Settings" > "Wireless & Network" > "Wi-Fi", and then toggle the switch to OFF.

7. Press VOLUME key to decrease the volume.

2.3 POWER ON/POWER OFF KEY MASTER DP

2.3.1 POWER ON

Press and hold Power button for three seconds to turn on Key Master DP. Note: set date, time and time zone.

2.3.2 POWER OFF

1. Press and hold Power button for three seconds to turn off Key Master DP.

2.4 ABOUT DESKTOP

2.5 CUSTOMIZE YOUR DESKTOP

2.5.1 Add items on the desktop

On the main menu, hold and press the desired item, the system will automatically enter the desktop and place the icon into the circle.

Hint: If many applications occupy the desktop, hold and press the desired one to move it to other extension desktop.

2.5.2 Move items on the desktop

- 1. Hold and press the item to be moved.
- 2. After a movable circle appears on the screen, drag it to the target location.

2.5.3 Delete items on the desktop

- 1. Hold and press the desired item, "X-Delect" appears in the upper middle of the screen.
- 2. Dragon the item to "X-Delect".
- 3. When the item and icon turn red and then release it.

2.5.4 Change your wallpaper

- 1. Hold and press a blank area on the desktop, a pop-up wallpaper will be shown on the screen.
- 2. Choose desired wallpaper.
- 3. Click upper left corner $\sqrt{\text{to set wallpaper.}}$

2.5.5 Create a folder on the desktop

- 1. Drag one icon to another icon, the system will create a folder.
- 2. Input the folder name.

2.6 ON USING TOUCH SCREEN

- Tap: Use your finger to tap desired items to confirm or open it.
- Long-press: press and hold the current interface, icon or input field to open the available operation options.
- Slide: use your finger to slide the screen horizontally or vertically.
- Drag: hold and press the desired item, then drag it to any location.

2.7 AUTO-ROTATE THE SCREEN

To perform such operations as browsing webpage, viewing images etc, rotate Key Master DP,当 the screen will automatically change the display direction. To disable this function, click "Settings" and click "display " to enter. Unselect the option "Auto-rotate the screen".

2.8 LOCK&UNLOCK

2.8.1 Lock the screen

- When Key Master is ON, press POWER key to lock the screen.
- The system will lock the screen automatically after Key Master DP remains idle for a long time.

2.8.2 Unlock the screen

Press POWER key to activate the screen and then drag the lock to "Unlock position."

2.9 NOTIFACTION BAR

The notice bar is used to display some activities, messages to remind and inform users.

2.9.1 Turn on the notification panel

- 1. When a new notification icon appears on the status bar, slide the status bar upwards to open
- 2. In the notification panel, click the desired notification item to open it.

2.9.2 Turn off the notification panel

Slide the panel upwards, and then specify the notifications as OFF to turn it off.

2.10 INPUT METHOD

Set input method:

Enter main menu, and then select "Settings"->"Language and keyboard" to choose desired input

The default input method is Sogou input can support powerful word stock engine, intelligent Sogou input and multiple keyboard mode. Android keyboard and Google input method and make input easier.

To start text input mode, please click any text input entry.

In text input entry interface, text and icon are defined as follows:





2: Voice input.



: Change input method skin.



Hot word interface can set input method, skin and lexicon.



: QR code.



: Hide keyboard. Tap again to display keyboard.



: Delete all content.





Insert white space.

123: Transfer into number input method.

Punctuation mark interface.

中/英: Transfer capital and small letter.

English association input.

2.11 HOW TO SET AS AIRPLANE MODE

According to the regulations of some countries or areas, PC device must be turned off before boarding on the airplane. The way to disable functions of X-431 PRO is to set it as airplane mode. In this mode, all wireless radio waves will be disabled, including mobile network, Bluetooth and WLAN.

Do one of the followings to enable or disable airplane mode:

- Press POWER key and choose "Airplane mode" from the pop-up option menu.
- Access the main menu, and choose "Settings" > "WLAN" > "More..." > "Airplane mode".


3 HOW TO DIAGNOSE

3.1 CONNECT VCI CONNECTOR

Procedure to connect VCI connector:

1. Locate vehicle's DLC socket. The DLC (Data Link Connector or Diagnostic Link Connector) is the standardized 16-cavity connector where diagnostic code readers interface with the vehicle's on-board computer. The DLC is usually located 12 inches from the center of the instrument panel (dash), under or around the driver's side for most vehicles. If Data Link Connector is not located under dashboard, a label should be there telling location. For some Asian and European vehicles, the DLC is located behind the ashtray and the ashtray must be removed to access the connector.

If the DLC cannot be found, refer to the vehicle's service manual for the location.

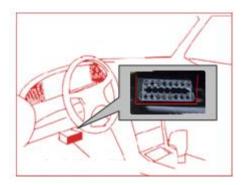

2. Plug the VCI diagnostic connector into the vehicle's DLC socket (It is suggested to use the OBD 2 extension cable to connect VCI connector and DLC socket.). For non-16PIN DLC socket, please select the corresponding non-16 pin connector adapter, then plug the non-16pin end of the adapter into the DLC socket, and then connect the standard 16pin end VCI connector.

3.2 Bluetooth Setting

- 1. Enter Key Master to set System setting, and choose VCI information.
- 2. Operate according to following prompt:
 - A."Please match: VCI_8888888888(Bluetooth name)"
 - b. "Connected: VCI_8888888888(Bluetooth name)"
- C. "Not connected: VCI_88888888888(Bluetooth Name)" Please connect VIC connector to vehicle, Key Master DP will connect automatically.

3.3 DIAGNOSIS FLAWCHAT

For new users, please follow the operation shown in 3-2 to get familiar with and start using Key Master DP.

VCI diagnostic connector VCI -> Bluetooth connection(USB connection)->user registration->user login->download or upgrade software->select function or vehicle type->proceed diagnosis

3.4 User registration and download diagnostic software

3.4.1 User Registration

Click to enter diagnostic software, select user information in system setting menu, then enter user registration window. As shown in following photo:



Fill in the information in each field (Items with * must be filled). After inputting, tap "OK" If you have registered to be a member,, click "user information" to enter user login page, as following picture shown:



3.4.2 Download Diagnosis Software

Tap "One Key Upgrade" to enter one key upgrade page, as following picture shown:




Tap "One Key Upgrade" to start downloading, enter main interface after finishing downloading. (Notes: Ensure internet connection is normal when updating. Besides, because of many software, it may take several minutes, please wait patiently) If need to cancel a software, just tap corresponding Check Box before its software, as following picture shown:



3 .4.3 Diagnostic software main interface introduction



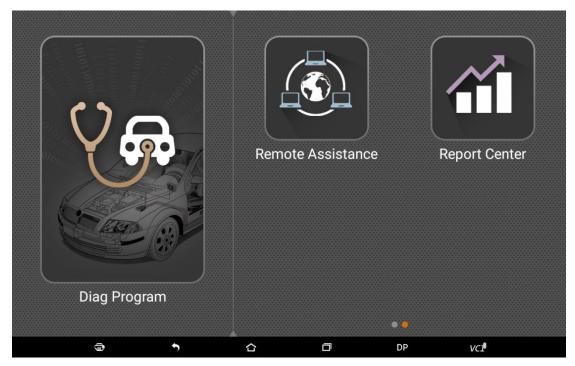

Function menu included as follows:

Diag Program: operate as a diagnostic tool.

Maintenance Database: Provides abundant automotive technology

handbook and repair case for your reference

Video Center: to guide users by video

One Key Upgrade: To download diagnostic software or upgrade diagnostic software to the latest

version

Settings: It include VCI information, language, unit, data records, user information, help, about.

Remote assistance: Can realize remote hosting operation.

Report Center: Can record maintenance data and diagnostic report

3.5 Start Diagnosing

Tap on the main menu screen, and then choose "DP" to enter the function selection and vehicle selection page. As following photo shown:



Hereinafter, take OBDII for example, to introduce how to start diagnosing.

Tap "OBDII engine", and tap "OBDII" icon. As following photo shown:




To select software version, as following photo shown:



To enter diagnostic function menu, as following photo shown:




To select auto scan, as following photo shown:

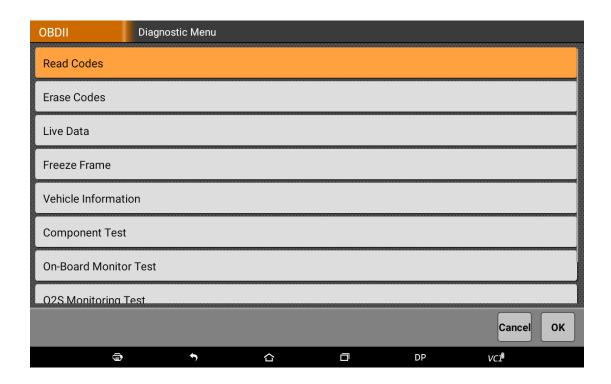

3.5.1 Read vehicle information


Tap "Read vehicle information", as following photo shown:

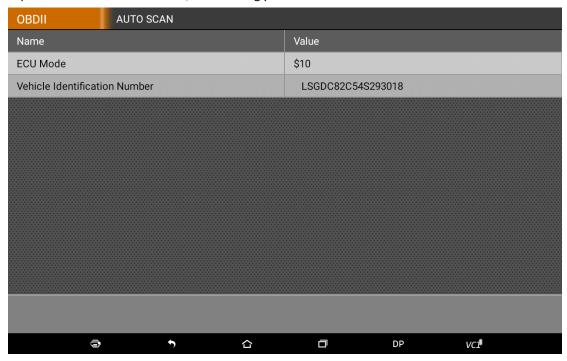


3.5.2 Read faulty code


Tap "Read faulty code", as following photo shown:

3.5.3 Clear faulty code

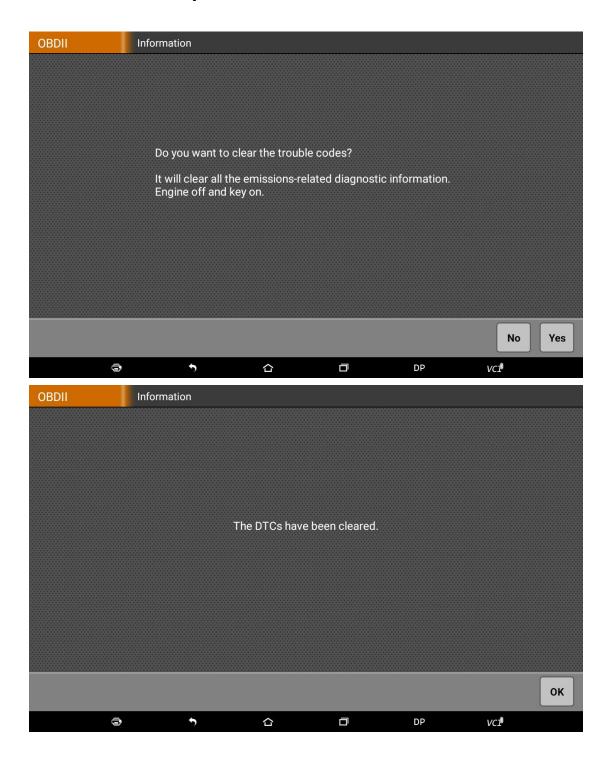

3.5.4 Read data stream

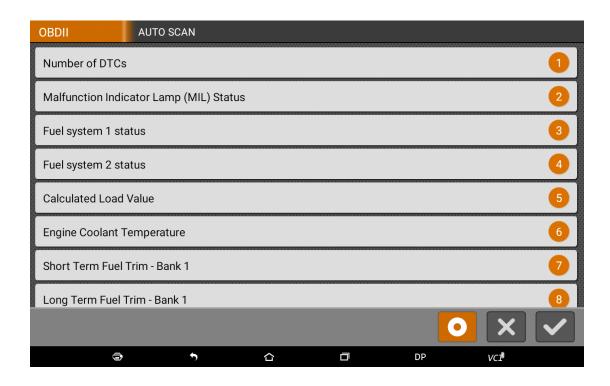

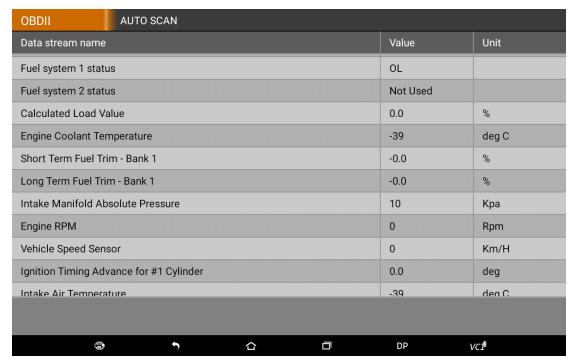

3.6 Maintenance Database

3.7 Video Center

3.8 One Key Upgrade

Can download and upgrade software by "One Key Upgrade"




Tap main screen "batch update", start downloading and upgrading




3.9 Settings

It includes VCI information, language, unit, data records, user information, help, about.


3.9.1 VCI Information

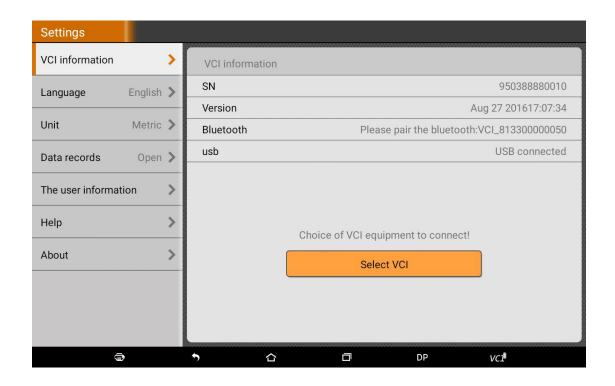


3.9.2 Language

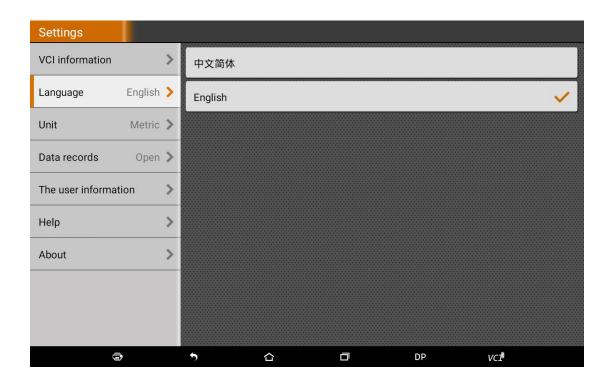

3.9.3 Unit

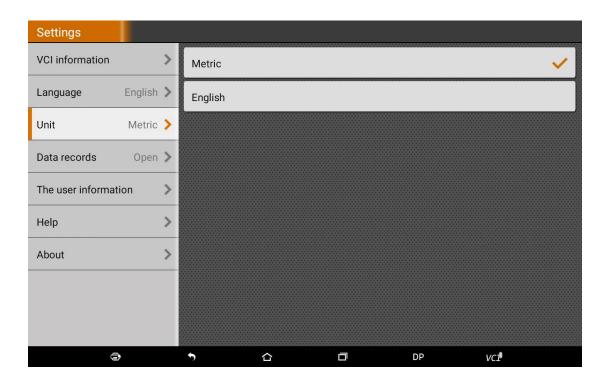

3. 9. 4 Data logging

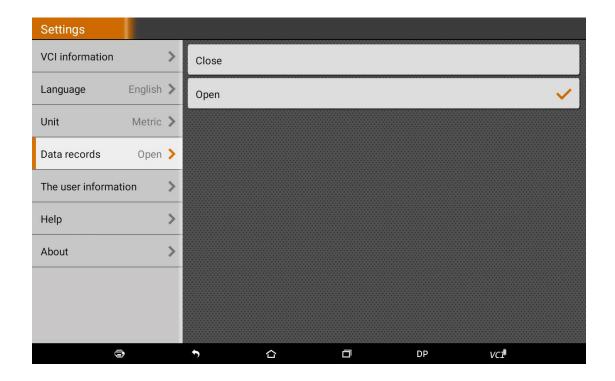

3.9.5 User information

It used to set and manage user's information.

3.9 .5.1 User Login



3.9.5.2 User Registration



3.9.5.3 Forget Password



3.9.5.4 User information




3.9.5.5 Modify Information




3.9.5.6 Modify Password



3.9.6 Help

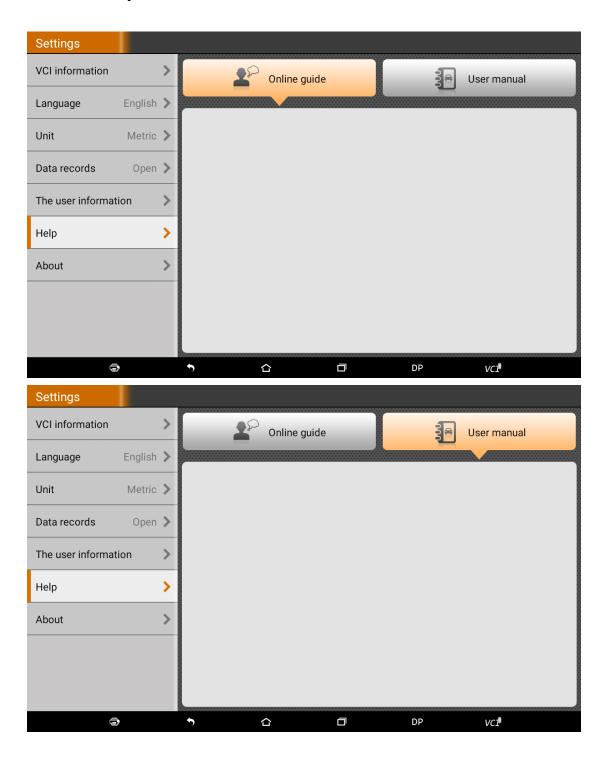

3.9.7 About

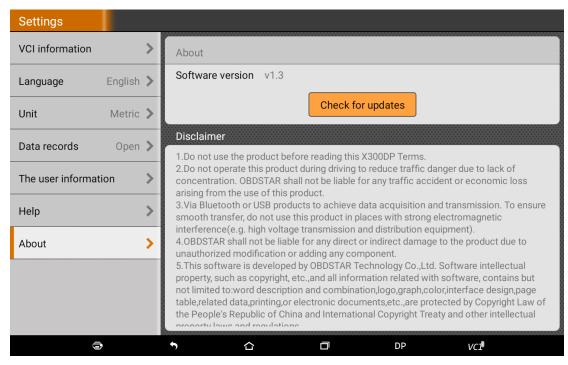

Tap "check for updates", can check if any upgrade software version


3.10 Remote Assistance

This application can realize remote hosting operation via the Third Party's software: QuickSupport.




3.11 Report Center

Diagnosis Report: Each diagnosis operation will create new diagnosis report. Those reports will be grouped by Month.

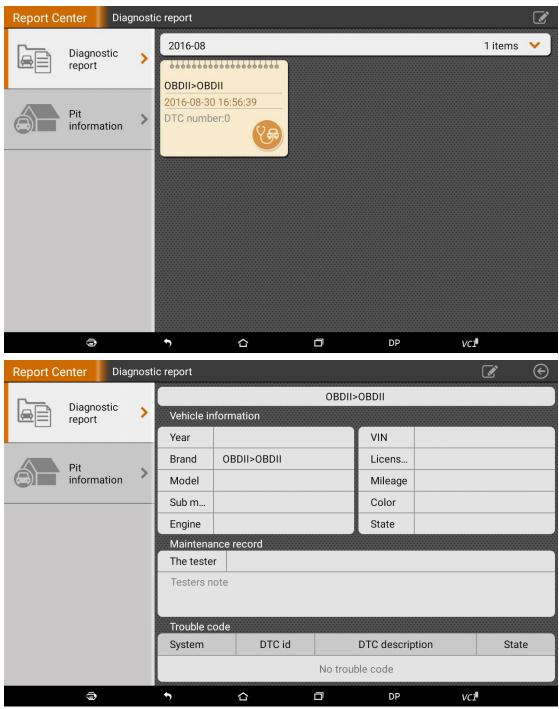

Maintenance Station Information: Can record related information of Maintenance Station.

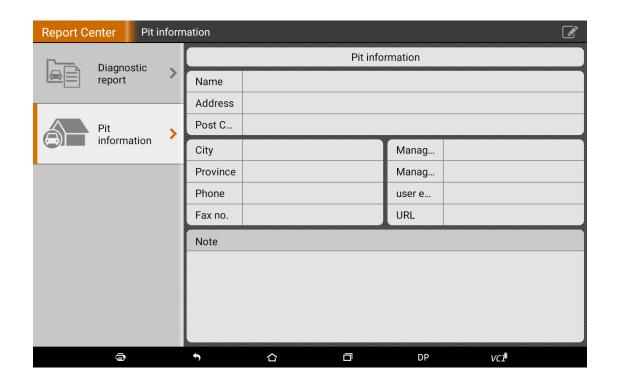

4 Other application

4.1 Email

The function allows you to send and receive email. You can add common web email service provider in Key Master DP. For example: Yahoo! ® , Sohu , 163 and other manufacturers of external PRO3 or IMAP email account.

4.1.1 Add an email account

Note: Before sending or receiving email, you have to set up an email account. In addition, this function required a stable network connection.

- 1. On the desktop, tap to enter main menu screen, and then tap
- 2. Input email address, tap "next step" or "manual setup"
- 3. Tap the desired account type (here take POP3 as example) to enter the incoming settings screen, tap "Next".
- 4. Configure some sending settings, and tap "Next" to enter frequency settings.
- 5. After setting, tap "Next" and the system will prompt account setup has been finished.
- 6. Tap "Next" to enter email main menu.

4.1.2 Delete an email account

- 1. Enter main menu screen, and tap to enter account screen.
- 2. Tap the desired account, and then tap to choose "Settings".
- 3. Tap the account to be deleted to enter, and then scroll the screen until "Remove account" appears, tap it to delete.

4.1.3 Send an email

- 1. Enter main menu screen, and tap to enter account screen.
- 2. Tap the desired email account.
- 3. Tap to enter new mail writing interface.
- 4. Input the receiver address in To field.
- 5. Input a title in Subject column.
- 6. Enter the content in Compose email area.
- 7. After inputting, tap, you can perform any one of the followings: attach file, add CC/BCC, save draft, discard and setting.
- 8. Tap to send email.

4.1.4 View Email

- 1. Enter main menu screen, and tap to enter account screen.
- 2. Tap the desired email account.
- 3. Tap to refresh the inbox.
- 4. Tap the desired one to read.

4.2 WLAN

This function enables you to enjoy surfing on the internet and downloading data from the internet via Wi-Fi.

4.2.1 Set Wi-Fi on

- 1. Enter main menu screen, choose "Settings" > WLAN
- 2. When the WLAN sign appears blue, , it indicates Wi-Fi has been activated already. Note: To prolong the battery life, please switch Wi-Fi off when it keeps unattended.

4.2.2 Connect to WLAN

Start WLAN, if Key Master DP within range of WLAN, Key Master DP can automatically detect and connect to current WLAN, select desired network and input password, then you can surf the internet by WLAN.

 
4.3 Browser

You can use any APP based on browse website and network.

4.3.1 Open browser

Enter main menu screen, tap to OBDSTAR the browser. You can choose the desired homepage or input the website address to browse.

1. Tap to input or edit the web link



3. Tap to open bookmarks , view history and saved web pages.

4.3.2 Browser webpage

- 1. Open the browser.
- 2. Input the web address, and tap "Go" on the keyboard to visit the website.

Tips: Alternatively, you can also tap , and then choose "Bookmarks/History" from the pull-down list to choose the web link you want to access.

3. After a webpage is open, slide the screen with the tip of your finger to view other hidden content.

4.3.3 Zoom in/Zoom out a page

There are two ways to zoom in/zoom out while browsing a webpage.

- To zoom in so that the text on a webpage appears in a column that fits your device's screen, double-tap with the tip of your finger.
- To zoom in manually, place two fingers on the screen and then spread them apart. To zoom out, either double-tap again or place two fingers apart on the screen and then pinch them together.

4.3.4 Save favorite webpage to bookmark

While browsing a webpage, tap and choose "Save to bookmarks".

- 2. Edit a label for the bookmark.
- 3. Tap "OK" to confirm and save it.

4.3.5 Open multiple pages

The browser allows you to open multiple web pages and you can toggle between these pages.

- 1. While browsing a webpage, tap and open new window.
- 2. Another web page will be displayed in the new window.

4.3.6 Customize internet settings

While browsing a webpage, choose "Settings", you can view or change browser settings, privacy & security setting and advanced setting etc.

4.4 Using Bluetooth

Bluetooth connection is supported on Key Master DP. Using it, you can connect Key Master DP PRO to other compatible devices for data transmission.

The effective distance between Key Master DP and other Bluetooth devices is max. 10 meters. Please note Bluetooth connection is likely to be disturbed by other objects, such as walls or other electronic devices.

Notes:

- Some areas may restrict or prohibit the use of Bluetooth and its accessories, please comply with local laws and regulations
- Please connect Bluetooth in safe, non-public place to ensure the security of your device.

4.4.1 Open Bluetooth

- 1. Enter main menu screen, tap "Settings" > "Wireless & networks" > "Bluetooth".
- 2. When the Bluetooth signal turns to blue, it indicates it is already on and a corresponding Bluetooth icon will appear on the status bar of Key Master DP.

4.4.2 Allow other devices to search for Key Master DP.

- 1. Enter main menu screen, tap "Settings" > "Wireless & networks" > "Bluetooth". Tap and choose "Visibility timeout".
- 2. Set the desired visibility option.
- Two minutes: Set the desired visibility within one hour, Allow other devices to search for Key Master DP

- Five minutes: Set the desired visibility within one hour, Allow other devices to search for Key Master DP
- One hour: Set the desired visibility within one hour, Allow other devices to search for Key Master DP
- Never timeout: Allow other devices to search for Key Master DP

4.4.3 Search other devices and pair Key Master DP with it

Before transmitting data with other Bluetooth devices, you have to pair Key Master DP with it.

- 1. Check and ensure Bluetooth is ON.
- 2. Enter main menu screen, tap "Settings" >" Wireless & networks" > "Bluetooth".
- 3. Key Master DP starts scanning all Bluetooth devices.
- 4. Choose the desired one from the search result to pair it with Key Master DP.

4.4.4 Send the file via Bluetooth

You can send pictures, video or audio files to your family and friends for sharing via Bluetooth. To transfer files via Bluetooth, please proceed following the steps described below:

- 1. Enter main menu screen, and tap "File Manager".
- 2. Access the corresponding folder and choose the desired picture, video or audio file.
- 3. Tap to select share and tap "Bluetooth" from the pull-down menu.
- 4. Tap the target device you want to transmit files in the searched Bluetooth device list.

4.5 Camera

4.5.1 Open and close camera

- Enter main menu screen, tap camera.
- In shoot mode, tap back button to exit the camera.

4.5. 2 Take a photo

 
- 1. Open camera, select whether remember the shoot spot of the photo? Tap the next step.
- 2. In shoot mode, aim the camera lens at the object you want to photograph and adjust it as desired.




4.5. 3 View a photo

- 1. After a picture is taken, the picture will be stored automatically. Swipe the screen leftwards to view the photo.
- 2. While browsing a picture, you can do any one of the followings:
- Tap to delete the picture.
- Share, tap to send this picture to your friend or upload it online.
- Edit, beatify the photo, and view the detailed information of the photo.
- Tap the back button on photo interface to return to the shoot mode.
- 3. Swipe the screen rightwards or leftwards to view the next/previous picture.

4.5. 4 Record a video




 - 1. Open the camera, and swipe the screen rightwards to display button video mode.
- 2. Aim the camera lens at the object you want to photograph and adjust it as desired.



4.5. 5 View a video

 - 1. After a video is recorded, the video will be stored automatically. Swipe the screen leftwards to view the video
- 2. The following operations can be done:
- · Delete, delete the video.
- Share, send this video file to your friend or upload it online.
- Tap to back button on the video interface to return to the view state.
- 3. When the video is playing, swipe the screen leftwards and rightwards to control the speed of



4.5. 6 Customize camera settings

In camera mode:



- a. Tap to set Camera scratchable latex mode;
- b. Tap to turn on /off flash mode;
- c. Tap to set timer of selfie, 3s or 10s

4.5. 7 Customize camrecorder settings

In video mode:

- Tap to enter video setting screen:
- Tap to turn on/off flash light;
- Tap to turn on/off scratchable latex mode

4.6 Gallery

This option is used to manage pictures and video files.

4.6.1 Open Gallery

Enter main menu screen, tap "Gallery" to access it. The system searches images and videos in Key Master DP and SD card automatically, and categorizes it into corresponding folders.

4.6.2 Browse images

- 1. Enter main menu screen, tap "Gallery".
- 2. Tap the picture folder you want to view.
- 3. Tap the desired image to browse.
- 4. Swipe the screen rightwards or leftwards to view the next/previous picture.

4.7 Music

Music files are stored into 4 categories: Artists, Albums, Songs and Playlist.

Tap the desired music to display music. Press the button on the right side to increase or decrease the volume.

Tips: While playing, tap back button to switch to other applications and the player will be running in background. Open the status bar and choose the audio file to return to the player screen.

4.8 Calculator

You can use calculator to operate algorithm of plus, subtract, multiply and divide, and function operation of sin, cos,tan and log.

4.9 Calendar

This function lets you view calendar or create to-do events.
Enter main menu screen, tap "Calendar". Swipe up and down to switch to month;
Tap some day , the followings can be done.



to refresh, search, hide control and setting.

4.10 Alarms

4.10.1 Add an alarm

- 1. Enter main menu, and tap "Alarm".
- 2. Tap to add alarms.
- 3. Set the detailed information of the alarm.
- 4. Tap to pack up the alarm to store the setting.

4.10.2 Delete an alarm

1. Enter main menu screen, tap "Alarms".

2. Tap the desired alarm.



Tips: After the alarm is deleted, you can choose to cancel delete alarm on the right side from the option menu.

4.10.3 Customize your alarm

- 1. Enter main menu screen, tap "Alarms".
- 2. Tap menu button, and then choose "Settings".
- 3. Alarm volume: Set the volume of alarms.
- 4. Set the duration of alarm.
- 5. Set the duration the alarm snooze next time.
- 6. Volume buttons: set what these buttons function when pressed during an alarm.
- 7. Set default ringtone: choose the alarm ringtone.

4.10.4 Count down set

- 1. Enter the main menu to tap

 to choose count down alarm:;
- 2. Set the time of count down;
- 3. Tap to add count down alarm, and tap to delete alarm;
- 4. Tap to start count down, and tap to stop count down;

Notice: after the count down ends, the device will ring alarm sound.

4.10.5 Seconds set

- 1. Enter the main menu to tap ot to choose second and clock;
- 2. Tap to start second and clock, and tap to stop second and clock;
- 3. Tap to reset second time;
- 4. Tap on the right side to display the smaller unit counter of second;

4.11 ES File viewer

Open ES file viewer, and enter main menu.

You can manage SD card, browse by category and browse all music, picture, video, document application, package, favorites, installation package, management recommended through catalogue.

4.12 Display

4.12.1 Brightness

- 1. Enter main menu screen, tap "Settings" > "Display".
- 2. Tap "Brightness" to enter.
- 3. Drag the slider leftward to lower the screen brightness. Drag the slider rightward to increase the screen brightness.

4.12 .2 Auto-rotate the screen

- 1. Enter main menu screen, tap "Settings" > "Display".
- 2. When setting the rotation of device, remain the orientation of the rotated screen.

4.13 Set screen lock

You can set the screen lock pattern, and when the screen is locked, it will not be unlocked until you draw the right pattern.

- 1. Enter main menu screen, tap "Settings" > "Security" > "Screen lock".
- 2. There are several options available for your selection. To define a pattern, follow the on-screen prompts to plot your pattern.
- 3. After drawing, tap "Confirm" to save your setting.

4.14 Application

4.14 .1 View installed applications

- 1. Enter main menu screen, tap "Settings" > "Apps" to open the downloaded application list.
- 2. The following operations are available:
- Tap the desired one to view the application information.

- Tap and choose "Sort by size" from the pull-down menu, the applications will be displayed in size order automatically.
- Tap and choose "Reset app preferences" from the pull-down menu, a confirmation dialog box will appear on the screen, tap "Reset apps"

to proceed; tap "Cancel" to abort.

- 3. To uninstall an application, tap it to enter the application information screen.
- 4. Tap "Uninstall" and then follow the on-screen instructions to finish it.

4.14.2 View the running applications

- 1. Enter the main menu screen, tap "Settings" > "Apps". Scroll the screen from right to left to RUNNING tab to open the currently running application list.
- 3. The following operations can be done:
- View the currently running applications;
- Tap any one to stop it.

4.15 Language & input

- 1. Enter the main menu screen, tap "Settings" > "Language & input">Tap language.
- 2. Tap "Language" and choose the desired language in the Key Master DP

 The setting of input method

The device provides several kinds of input methods. Tap setting before the desired input method.

4.16 Set date & time

Key Master DP is preset to use the network-provided date, time zone and time. Note: If Automatic date & time is set as Use network-provided time, date, time and time zone will not be defined.

- 1. Enter the main menu screen, and tap "Settings" > "Date & time".
- 2. Tap "Set date", and scroll the screen upwards and downwards until the desired numbers appear on the highlight area.
- 3. Tap "Select time zone", and choose the desired one from the time zone list. Scroll the screen upwards and downwards to view more.
- 4. Tap "Set time" and scroll the screen upwards and downwards to adjust the hour and minute. After setting, tap "Done" to confirm.
- 5. Select or deselect "Use 24-hour format" to switch between 12-hour format and 24-hour format.
- 6. Tap "Choose date format" to choose the desired date of Key Master DP format from the list.

4.17 Restore Key Master DP to factory settings

This option enables you to restore Key Master DP to the default factory settings. Once it is reset, all data (including downloaded applications) will be deleted. Note: Before resetting to factory data, please back up all important data saved in Your Key Master DP.

- 1. Enter the main menu screen, tap "Settings" > "Backup & reset" > "Factory data reset".
- 2. Follow the instructions on the screen to proceed.

4.18 Store

Enter the main menu, and tap setting> store check the store situation of the device. Store the download content in the default browser to the download content list.

4.19 Install / Uninstall APPS

- 1. Install: Put the application package under the root directory of SD card, enter "File Manager" and then tap the desired package to start installing.
- 2. Uninstall: Tap "Settings" > "Apps", and choose the desired one to uninstall.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.