

SIMOLIO®

JH-761M Manual

limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SIMOLIO®

Vintage Radio Bluetooth Speaker

 JH-761M

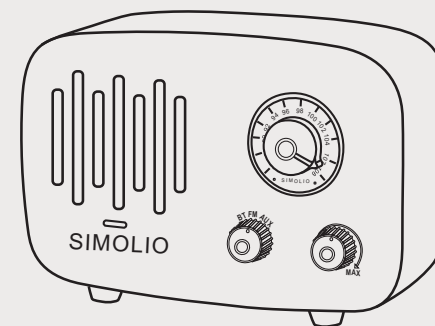

User Manual

www.amazon.com/simolio

Sales & Support Email: support1@simolio.com (for USA)
support_uk@simolio.com (for UK)

SIMOLIO® // *JH-761M Manual*

Thank you for choosing the SIMOLIO Bluetooth stereo speakers.
Please read this guide carefully and keep it in a safe place for future
reference. If you need any further assistance, please contact our
customer support team at:

support1@simolio.com (for USA)

support_uk@simolio.com (for UK)

Response Time: 2-24h, excl. holidays


SIMOLIO® // *JH-761M Manual*

Contents

1. Product Diagram	01
2. Package Contents	02
3. User Instructions	02
3.1 Charging the speaker	03
3.2 Using the speaker as a Bluetooth Speaker	03
3.3 Using the speaker as a FM Radio	03
3.4 Using the speaker as an AUX Player	04
4. Technical Specifications	04
5. Safety Instructions	05
6. Limited Warranty	05
7. Troubleshooting	06

SIMOLIO® *JH-761M Manual*

 
1. Product Diagram

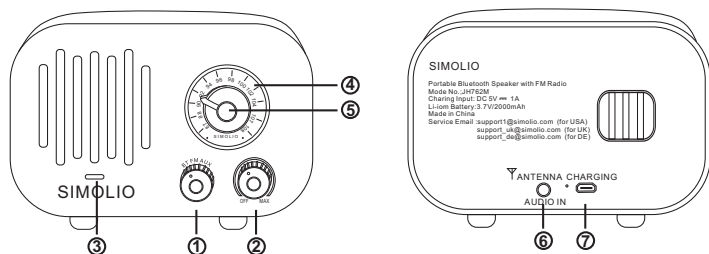

- ① Function selection knob
- ② Volume knob/Power switch
- ③ LED indicator
- ④ Frequency scale
- ⑤ Turning knob
- ⑥ AUX port / Antenna port
- ⑦ Micro USB charging port

SIMOLIO® *JH-761M Manual*

 2. Package Contents

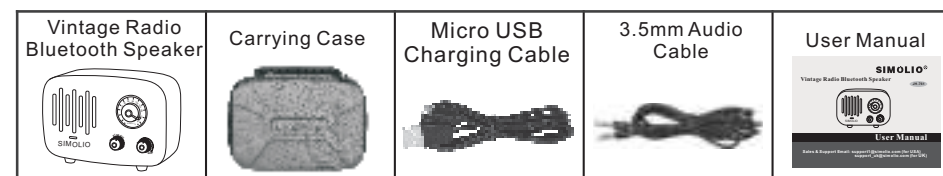

3. User Instructions

3.1 Charging the speaker

- * Plug the supplied USB cable to the power source.
- * The charging indicator will stay solid red when the speaker is in charge. After fully charged, the red light will go off, and the green light will be on.
- * It takes 5 hours for the internal 2000 mAh Li-ion battery to be fully charged.
- * When completely charged, the battery will be able to deliver 12-20 hours of radio play or 6-8 hours of Bluetooth speaker time or AUX player time. (depending on the volume)

 
3.2 Using the speaker as a Bluetooth Speaker

- * Turn the function selection knob to “BT”, the LED indicator turns to white.
- * Turn on the Bluetooth device such as a mobile phone to find the name of “Simolio” and click it to connect.
- * When Bluetooth is connected, there will be a beep, open the music player to listen to music.
- * After disconnected the Bluetooth, there will be a beep and the Bluetooth indicator will flash.

3.3 Using the speaker as a FM Radio

- * Turn the function selection knob to the “FM”.
- * The LED indicator will turn to solid green.
- * Rotate the turning knob to select a channel.

Note: The 3.5mm audio cable can also be used as an antenna, you can plug it into the speaker's AUX port to get better FM signal.

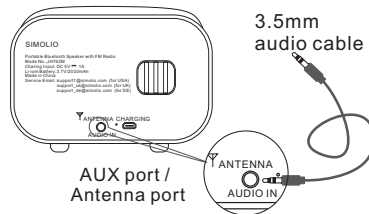

3.4 Using the speaker as an AUX Player

- * Turn the function selection knob to “AUX”.
- * The orange LED indicator is on.
- * Unplug the antenna from the rear of the speaker first, then insert one end of the supplied 3.5mm AUX cable to the speaker, and the other end to your phone or tablet etc. Open the music player to enjoy music.

4. Technical Specifications

FM Working Frequency	87MHz-108MHz	Input	5.0V/1A
Bluetooth Working Frequency	2.4GHz ISM	Range	30 feet
Bluetooth Version	4.0	Weight	366 g
Battery capacity	2000mAH	Size	134(L)*68(W)*92(H)mm
SNR	FM/BT>75dB; AUX>80dB	Audio output	9W (Max)
Maximum Distortion	<0.5%	Charging Time	5H

5. Safety Instructions

1. Please read this manual carefully and follow the instructions for all operations and use.
2. Always keep this product dry, and do not expose them to extreme temperatures.
3. Do not charge at the water source or in the rain to prevent electric shock.
4. Do not damage the cable, especially at the connector.
5. Switch off the speaker after use. Unplug the USB charging cable when it is not in use or during a thunderstorm.
6. Please keep the speaker away from heat sources(including all equipment that generates heat), such as stoves.
7. Do not disassemble the speaker. Please refer all servicing to qualified person only!

6. Limited Warranty

1. This vintage radio has full 12-month warranty against manufacturing defects from the date of purchase. Do not cover appearance damage or damage due to acts of nature, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the product.
2. The warranty period begins from the original date of purchase.
3. The warranty period is not extended if we repair or replace warranted product.

7. Troubleshooting

Problem	What to do
Speaker cannot connect with Bluetooth device	<ul style="list-style-type: none">* On your Bluetooth device: Turn the Bluetooth feature off and then on; Delete Simolio from the Bluetooth list on your device, pair again.* Move your Bluetooth device closer to the speaker and away from any interference and obstructions.* Check by pairing a different Bluetooth device.

Problem	What to do
No sound	<ul style="list-style-type: none"> * Increase the volume on your speaker, your Bluetooth device and music source. * Move your Bluetooth device closer to the speaker and away from any interference or obstructions. * Check by using a different music source. * Check by pairing a different Bluetooth device.
Poor sound quality	<ul style="list-style-type: none"> * Check by using a different music source. * Check by pairing a different Bluetooth device. * Move your Bluetooth device closer to the speaker and away from any interference or obstructions.
No sound or noise at a certain FM frequency	<ul style="list-style-type: none"> * Increase the volume on your speaker. * Extend the antenna to get better signal. * Move your speaker away from any interference or obstructions.
Poor sound quality from a device connected by AUX cable	<ul style="list-style-type: none"> * Make sure the AUX cable is connected in place. * Check by connecting another device.

Problem	What to do
No audio from a device connected by AUX cable	<ul style="list-style-type: none"> * Make sure the AUX cable is connected in place. * Increase the volume on your speaker, your Bluetooth device and music source. * Check by connecting a different device.
Battery won't charge	<ul style="list-style-type: none"> * Make sure the charging cable is connected in place. * If your speaker has been exposed to high or low temperatures, let the speaker return to room temperature and try charging again.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These