 


## FUNCTION:

### ① Forward



 
### ② Backward

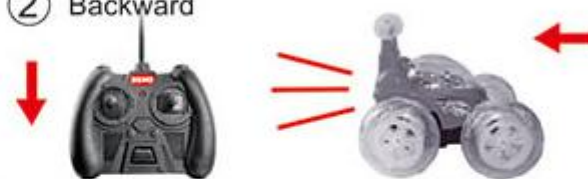

### ③ Rollover stunts




### ④ Upright with the front wheel forward hovering counterclockwise

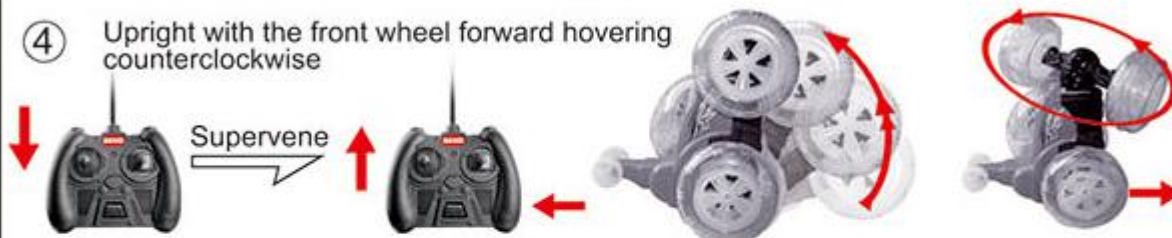

### ⑤ Upright and the front wheel forward circling clockwise



 1. Remove battery compartment screw using a screwdriver.
2. Slide back battery compartment lid.
3. Insert 2 x 1.5V "AA" batteries as shown.
4. Slide battery compartment lid closed and tighten screw.

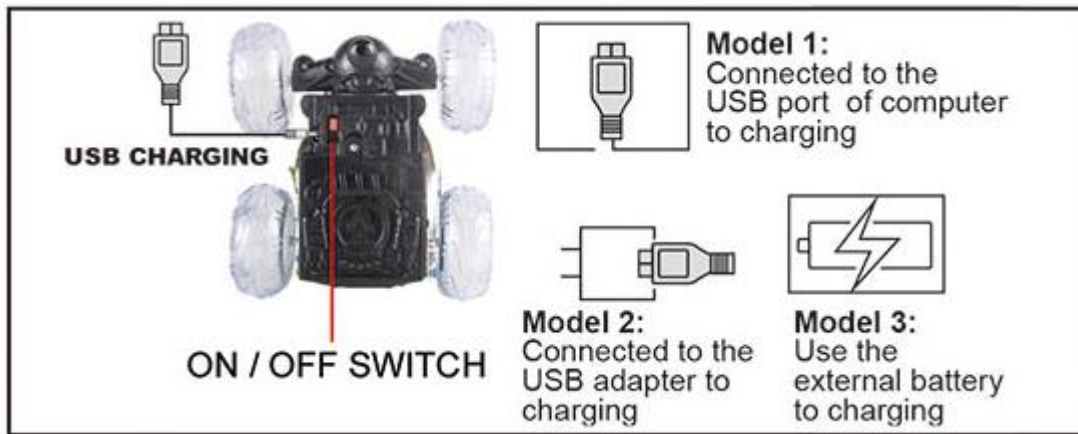

## Battery Handling

- non-rechargeable batteries are not to be recharged.
- different types of batteries or new and used batteries are not to be mixed.
- batteries are to be inserted with the correct polarity.
- exhausted batteries are to be removed from the controller.
- the supply terminals are not to be short-circuited.
- recharge only under adult supervision.
- do not use rechargeable batteries.

**Small parts warning: Choking hazard- small parts.  
Not for children younger than 3 years.**

Keep packaging for reference as it contains important information

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.