

名称：	P48 游戏手柄 说明书
材质：	128g铜版纸, 双面印刷, 中间折页
尺寸：	100x120 mm 展开尺寸200x120
颜色：	无
版本号：	2022. 07. 12 V1

100mm

120mm

User Manual

(DOUBLE SHOCK CONTROLLER)

Model: P48

About the Wireless Controller

• Before using this product, carefully read this manual and any manuals for compatible hardware.

• Retain instructions for future reference.

Product Specifications

Model: P48

Compatible with: P4 / PC

Working Current: 20 mA

Continuous Use Time: >8 H

Charging Time: About 3 H

Package Size: 166 x 70 x 118 mm

Connection: BT4.0

Cable Plug: Micro USB

Input Voltage: 5 V

Input Current: 1 A

Working Voltage: 3.7 V

Battery Capacity: 600 mAh

Battery Life and Duration

• Do not handle damaged or leaking lithium-ion batteries.

• The battery has a limited life span. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, conditions of use and environmental factors.

• Charge in an environment where the temperature range is between 50F-86F (10C-30C). Charging may not be as effective when performer in other environments.

• When the wireless controller is not used for an extendet period of time. It is recommended that you fully charge it at least once a year to help maintain battery functionality.

Use and Handling Precautions

1. Avoid prolonged use of this product. Take a break at about 30 minutes intervals.

2. Permanent hearing loss may occur if the headset or headphones are used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be demaging your hearing. If you experience ringing or any discomfort in yours ears or muffled speech, stop listening and have your hearing checked.The louder the volume, the sooner your hearing could be affected. To protect your hearing:

• Limit the amount of time you use headset or headphones at high volume.

• Avoid raising the volume to block out noisy surroundings.

• Lower the volume if you can't hear people speaking near you.

200mm

3. Avoid looking into the light bar of the controller when it is flashing. Stop using the controller immediately if you experience any discomfort or pain in any body parts.

4. This product is intended for use with the hands only.

5. The vibration function of this product may aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints , or muscles of your hands or arms.

6. Note that some software titles enable the vibration function by default. To disable the vibration function, select [Settings]-> [Devices] -> [Controllers] from the function screen, and then remove the checkmark from [Enable Vibration].

7. Do not expose the product to high temperatures, high humidity or direct sunlight.

8. Do not allow the product to come into contact with liquids.

9. Do not put heavy objects on the product.

10. Do not throw or drop the product or subject it to strong physical shock.

11. When using the motion sensor function, be cautious of the following points. If the controller hits a person or objects, this may cause accidental injury or damage.

• When using the motion sensor function, be cautious of the following points. If the controller hits a person or objects, this may cause accidental injury or damage.

• When using the controller, grip it firmly to make sure it cannot slip out of your hand.

• If using a controller that is connected to the PlayStation 4 system with a USB cable, make sure there is enough space for the cable so that the cable will not hit a person or objects.Also, take care to avoid pulling the cable out of the PS4 system while using the controller.

Exterior Protection

• Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored.

• Do not place any rubber or vinyl materials on the product exterior for an extended period of time.

• Use a soft, dry cloth to clean the product. Do not use solvents or the other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Registering (pairing) the Controller

1. Ps4 Console Connection

• In the sleep state of the handle, use the USB data cable to connect the PS4 host to complete the pairing. Press the PS button to connect wirelessly, unplug the cable to control wirelessly (automatically match the LED)!

• It has been successfully connected, no matter whether the PS4 host is sleeping, you can directly press the PS button, and the LED will flash slowly. Automatically connect back!

• 4 handles can be used at the same time, the RGB lights will be in the order of blue, red, green, pink. Turn on the lights and configure each gamepad!

PC Bluetooth Mode Connection

• Press and hold SHARE+PS to enter pairing, the LED flashes quickly, search and connect the Wireless Controller.

• Enter the computer Bluetooth for pairing, if the pairing is successful, you can play computer games!

• It has been successfully connected, you can directly press the HOME button, the LED will flash slowly in the form of a marquee, and it will automatically connect to the computer!

Wired connection instructions

1. Ps3 Console Connection

• Under the sleep state of the controller, use the USB cable to connect the PS3 host.

• After the connection is successful, the corresponding LED light is always on!

2. Pc Wired Connection

• Under the sleep state of the controller,use the USB cable to connect to the host to complete the pairing. (It is recommended to play games on the steam platform)

PDF Adobe

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.