 
Wireless Monster Speaker User Manual



- 1. Speaker
- 2. LFD indicator 3. Microphone 4. ON/OFF button

6. Micro USB socket

5. Strap Hole

Charging the Battery:

- Insert the charging Cable into the Micro USB input port. Connect the USB plug into DC 5V USB port, The Charging LED indicator will turn on.
- 2. After Charging is complete, the LED indicator will turn off. Noted: when music sound volume decreases and you hear warning tone, please charge the speaker. Bluetooth pairing for music/phone call/camera remote
- 1. Turn on the speaker by pressing "0" button for 3 seconds.
- 2. Turn on your Bluetooth device and activate the Bluetooth

- 3. Search for Bluetooth pairing name: Amor-AHA (Green) / Lee-AHA (Blue) and click to pair. The speaker will pair automatically and the blue indicator light will turn on. Press "O" button to answer the call when a call is coming in or take a photo when the camera is open on your device.
- 4. Turn off the speaker by pressing the "0" button for 4 seconds.

Note: 1. If you can't take a photo, if using an Android, please open "Settings" – "Camera" then set "Volume Kev" to "Shutter". if using IOS, you just need to refresh the Bluetooth connection.

- 2. If you can't play music, please reconnect the Bluetooth connection.
- 3. Self-Timer function is not compliant with all mobile phones.

Pairing 2 speakers

- 1. Make sure no speakers are connected to your device.
- 2. Power on 2 speakers (at the same time).
- 3. Double Click "O" button on the 2nd speaker. You should hear a chirp sound, then the other speaker should make a short connect sound. (If you do not hear a connect sound, double click the opposite speaker "0" button.
- 4. In your device Bluetooth menu, locate & Select the pairing name: Amor-AHA (Green) / Lee-AHA (Blue) and click to pair. You will now be connected to both speakers

Specification:

shutter:

Frequency Response	20HZ-20KHZ
THD	≤ 1%
S/N	≥ 80 DB
Bluetooth Version	Bluetooth V5.0
Product Size	41.5*45mm
Product Weight	40g

Safety Information

placed near the speaker.

- a. Battery Shall not be exposed to excessive heat such as sunshine, fire or the like.
- b. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. c. No open flame sources, such as lighted candles, should be
- d. Attention should be drawn to the environmental aspects of the battery disposal.
- e. The use of the speaker in moderate climates. I f. Do not use the speaker on airplanes
 - q. Do not attempt to modify or disassemble speaker.

Thank you for your purchase.



FIG. Distances that have been based and board to comply with the limit for a Class B digital device, pursuant to part has a suprement that have been based and thought to comply with the limit for a Class B digital device, pursuant to part has adjusted in the limit of the complete device of the com

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this explainment.

This device complex with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and C(!) this device must accept any interference received, including interference harmful relateded post

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.