


iHome

Model: iW18

POWERSVALET 2-in-1 Wireless Charger

OVERVIEW

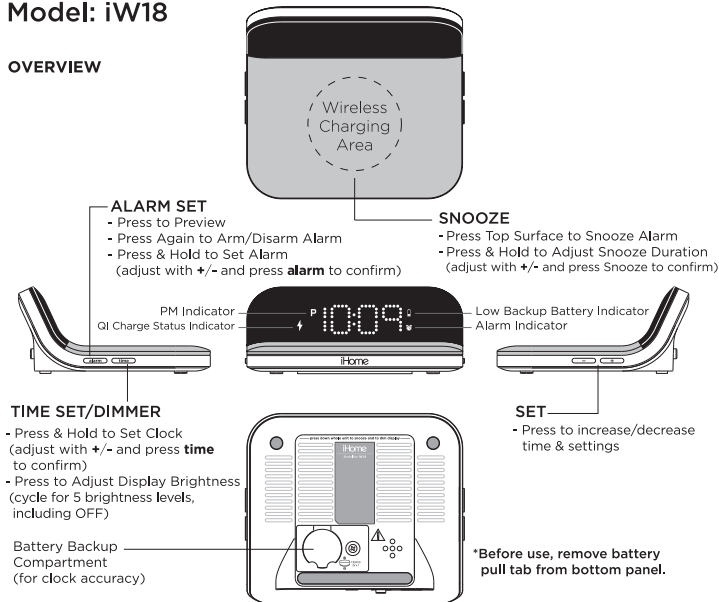

 
TIME SET/DIMMER

- Press & Hold to Set Clock (adjust with +/- and press **time** to confirm)
- Press to Adjust Display Brightness (cycle for 5 brightness levels, including OFF)

Battery Backup Compartment (for clock accuracy)

REAR CONTROLS

Connect AC adapter to DC Jack, and plug into outlet.



WIRELESS CHARGING

Supports:

- Qi compatible phones (also works with plastic cases up to 3mm thick)
- AirPods with wireless charging case

Place Qi compatible device face up on the charging rest. Charging status will be indicated on display:

Rapid blinking ⚡ icon: Device is not charging (reposition device)

Slow blinking ⚡ icon: Device is charging

Solid ⚡ icon: Device is fully charged

Note: Icon may continue to blink slowly when iOS devices are fully charged.

CAUTION: Remove phone's metal protective case before charging. Do not place magnetic or metal objects on charger during charging. Qi compatible phones with metallic looking finishes will charge normally.

For questions, full instructions, warranty, and additional safety information, please scan the QR code or visit:
www.ihome.com/help/iW18



WARNING:

- Do not ingest the battery. Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

IMPORTANT SAFETY INSTRUCTIONS

Please heed all warnings, read and follow all instructions and keep these instructions handy for future reference.

1. Do not use this product near water.
2. Unplug unit and clean only with damp cloth. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.
3. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
4. Heat - This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
5. Only use attachments/accessories specified by the manufacturer.
6. Unplug this product during lightning storms or when unused for long periods of time.
7. Damage Requiring Service - This product should be serviced by qualified service personnel when:
 - Plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain. The unit has been dropped or the enclosure damaged.
 - The unit exhibits a marked change in performance or does not operate normally.
8. No naked flame sources, such as lighted candles, should be placed on this product.
9. Attention should be drawn to the environmental aspects of battery disposal. Many electronics retailers now recycle batteries and other electronic components at no charge. To find a drop-off location near you, visit www.call2recycle.com
10. This product is suitable for use in tropical and/or moderate climates.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not dispose of batteries in the household trash or fire.
- The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

FCC Information

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your body.

iW18_new Qi_042221-G



© 2021 SDI Technologies, Inc.
All rights reserved

Printed in China