



User Guide

AC750 Wi-Fi Range Extender
RE200 / RE220

Contents

About This Guide	1
Chapter 1. Get to Know About Your Extender	2
1. 1. Product Overview.....	3
1. 2. Appearance	3
1. 2. 1.LED Explanation.....	4
1. 2. 2.Port and Button Description	4
Chapter 2. Set Up Internet Connection	5
2. 1. Power On the Extender	6
2. 2. Set Up the Extender	6
2. 2. 1.Method 1: Via the TP-Link Tether App.....	6
2. 2. 2.Method 2: Via a Web Browser.....	7
2. 2. 3.Method 3: Via the WPS Button.....	11
Chapter 3. Customize Your Network.....	13
3. 1. Check Internet Status.....	14
3. 2. Configure Wireless Network	15
3. 3. Change LAN Settings.....	16
3. 4. Specify DHCP Server Settings	17
3. 5. Adjust Wi-Fi Coverage	18
3. 6. Set Access Control	19
3. 7. Set High Speed Mode.....	21
Chapter 4. More Features of Your Extender.....	22
4. 1. Use Your Extender as a Wireless Adapter.....	23
4. 2. Transform Your Existing Wired Network to a Wireless One	23
4. 2. 1.To Set Up the Extender as an Access Point	23
4. 2. 2.To Connect Your Wireless Devices to the Extender via WPS.....	25
Chapter 5. Manage Your Extender	27
5. 1. Set System Time	28
5. 2. Control LEDs	28
5. 3. Set Power Schedule	29
5. 4. Upgrade the Firmware	30
5. 5. Backup and Restore Configuration Settings.....	31
5. 6. Change Login Password	32
5. 7. Check System Log	32
FAQ.....	34

About This Guide

This guide is a complement to Quick Installation Guide. The Quick Installation Guide provides instructions for quick internet setup, while this guide contains details of each function and demonstrates how to configure them.

When using this guide, please notice that features of the extender may vary slightly depending on the model and software version you have, and on your location, language, and internet service provider. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

Conventions

In this guide the following conventions are used:

Convention	Description
<u>Underline</u>	Underlined words or phrases are hyperlinks. You can click to redirect to a website or a specific section.
Teal	Contents to be emphasized and texts on the web page are in teal, including the menus, items, buttons and so on.
>	The menu structures to show the path to load the corresponding page. For example, Advanced > Wireless > MAC Filtering means the MAC Filtering function page is under the Wireless menu that is located in the Advanced tab.
 Note:	Ignoring this type of note might result in a malfunction or damage to the device.
 Tips:	Indicates important information that helps you make better use of your device.

More Info

The latest software, management app and utility are available from [Download Center](http://www.tp-link.com/support) at www.tp-link.com/support.

The Quick Installation Guide can be found where you find this guide or inside the package of the extender.

Specifications can be found on the product page at <http://www.tp-link.com>.

A Technical Support Forum is provided for you to discuss our products at <http://forum.tp-link.com>.

Our Technical Support contact information can be found at the Contact Technical Support page at www.tp-link.com/support.

Chapter 1

Get to Know About Your Extender

This chapter introduces what the extender can do and its appearance.

It contains the following sections:

- [Product Overview](#)
- [Appearance](#)

1.1. Product Overview

Bring Dead Zones Back to Life

Tired of Wi-Fi “dead zones”? The TP-Link extender is connected to your router wirelessly, strengthening its signal and expanding its coverage into areas that could not otherwise be reached.

Easy Installation & Quick Position

The extender works with any standard wireless router. Instantly connect the extender to a router by pressing the router’s WPS button (if available) followed by the extender’s WPS button. Alternatively, follow the Quick Setup instructions on the extender’s web management page.

Once the extender is connected to a router, you can relocate it to your preferred location with no further configuration required. The intelligent signal light can help to find the best location.

Easy Management with the TP-Link Tether App

Tether provides a simple, intuitive way to access and manage your extender with your smart devices.

1.2. Appearance



1.2.1. LED Explanation

You can check the extender's working status by following the LED Explanation table.

Name	Status	Indication
5GHz	On/Off	The extender is connected or not connected to the 5GHz wireless network of your host router.
2.4GHz	On/Off	The extender is connected or not connected to the 2.4GHz wireless network of your host router.
 (Signal)	Solid green	The extender is connected to your router's wireless network and is in a suitable location.
	Solid red	The extender is experiencing poor signal strength. Try relocating it closer to your host router.
	Off	No wireless connection is established.
 (Ethernet)	On/Off	The Ethernet port is connected or not connected to a powered-on device.
 (Power)	On/Off	The extender is on or off.
	Blinking	The system is starting up or firmware is being upgraded.
 (WPS)	On	WPS connection is established.
	Blinking	WPS connection is in progress.
	Off	WPS connection has been established for more than 5 minutes or WPS connection failed.

1.2.2. Port and Button Description

Ports or Buttons	Description
 (WPS Button)	Press the WPS button on your host router, and immediately press  on the extender for 1 second. The  LED of the extender should change to solid on, indicating successful WPS connection.
RESET (Hole)	Use a pin to press the button for 1 second to reset the extender.
Ethernet Port	Connect your device to the Ethernet port of the extender via an Ethernet cable to join the Wi-Fi network.

Chapter 2

Set Up Internet Connection

This chapter introduces how to boost your host wireless coverage. Please follow the step-by-step instructions to set up the internet connection.


It contains the following sections:

- [Power On the Extender](#)
- [Set Up the Extender](#)

2.1. Power On the Extender

Plug the extender into an electrical outlet [near your host router](#), and then wait until the Power LED is solid on.

■ Note: For safety, we suggest that you plug the extender in upright directions as shown below.

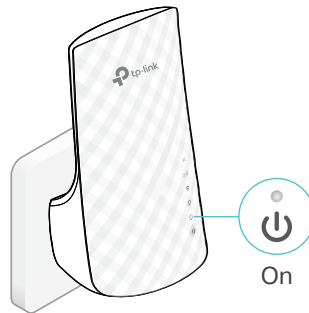

2.2. Set Up the Extender


There are three ways to set up the extender: via the TP-Link Tether app, via a web browser, or via the WPS button.

2.2.1. Method 1: Via the TP-Link Tether App


1. Launch the Apple App Store or Google Play Store and search [TP-Link Tether](#) or simply scan the QR code to download and install the app.




2. Go to Wi-Fi Settings and connect your device to the extender's wireless network: [TP-Link_Extender](#).

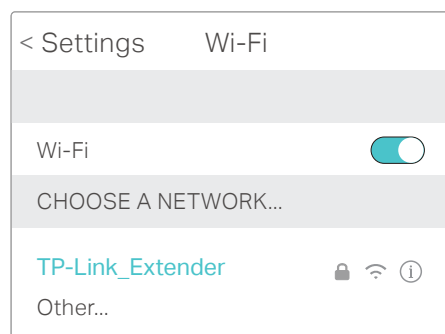

3. Launch Tether and select your extender from the Local Device list.

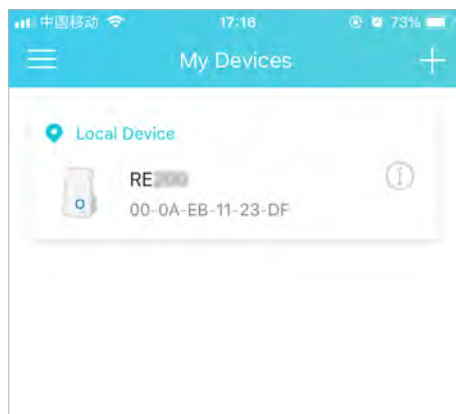

4. Create a password to log in.

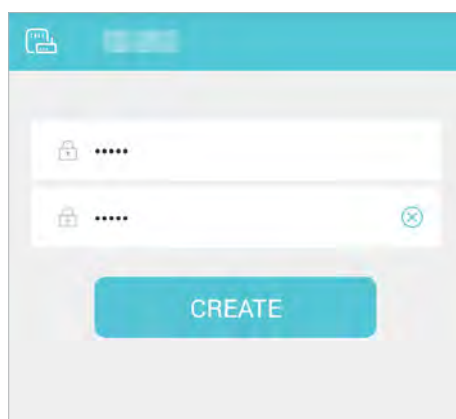

5. Follow app instructions to set up and relocate your extender.


Tips:

For more intuitive location assistant, access extender settings via Tether and go to [Tools > Location Assistant](#). You can also manage your extender via Tether, such as controlling LEDs, sharing passwords of your networks and blocking devices.

2.2.2. Method 2: Via a Web Browser


1. Connect your computer to the extender via your Ethernet cable, or connect wirelessly as follows:

- For Windows Users
 - 1) Unplug the Ethernet cable from your computer (if any).
 - 2) Click the Wi-Fi icon on the taskbar and connect to the extender's wireless network: [TP-Link_Extender](#).

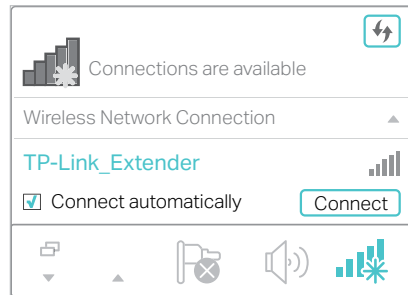


- For Mac OS X Users

- 1) Unplug the Ethernet cable from your computer (if any).
- 2) Click the Wi-Fi icon in the top right corner of the screen, and connect to the extender's network: **TP-Link_Extender**.

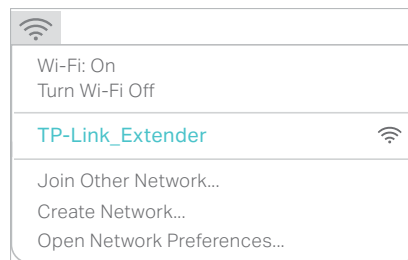

2. Follow the instructions of the Quick Setup Wizard to connect the extender to your host router.

- 1) Launch a web browser, enter <http://tplinkrepeater.net> or <http://192.168.0.254> in the address bar, and then create a password to log in.

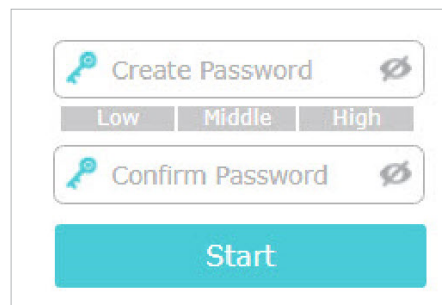

💡 Tips: If the login window does not appear, please refer to [FAQ](#).

- 2) Select your host router's 2.4GHz SSID (network name), enter its password (NOT the password you just created for management), and click **Next**.

Select a 2.4GHz host network to extend. [Can't find your Wi-Fi?](#)

ID	SSID	Signal	MAC Address	Security
1	AFREEWIFI1		be-84-c6-27-fe-98	
2	TP-Link_0969		00:0a:eb:13:09:69	

Host 2.4GHz Password:

[Next](#)

[Exit](#) [Other...](#) [Rescan](#) [Skip](#)

- 3) Select your host router's 5GHz SSID (network name), enter its password (NOT the password you just created for management), and click [Next](#).

Select a 5GHz host network to extend. [Can't find your Wi-Fi?](#)

ID	SSID	Signal	MAC Address	Security
1	AFREEWIFI1		be-84-c6-27-fe-98	
2	TP-Link_0969_5G		00:0a:eb:13:09:69	

Host 5GHz Password:

[Next](#)

[Exit](#) [Other...](#) [Rescan](#) [Skip](#)

 **Tips:** If your host router does not support 5GHz wireless network, please click [Skip](#) to continue.

- 4) Confirm your host network password.

Please confirm your host network password.

2.4GHz Host Network	5GHz Host Network
SSID: TP-Link_0969	SSID: TP-Link_0969_5G
Password: 123456789	Password: 123456789

[Back](#) [Confirm](#)

- 5) Either keep the default SSIDs (network names) or customize them for the extended networks, and then click [Next](#).

Set the extended network names (SSIDs).

Extended 2.4GHz SSID:

Extended 2.4GHz Password: 12345678
(Same as your host network password)

Extended 5GHz SSID:


Extended 5GHz Password: 12345678
(Same as your host network password)

[Back](#) [Next](#)

- 6) Follow web instructions to relocate your extender for optimal Wi-Fi coverage and performance, and then click [Done](#).

Relocate your extender to optimize Wi-Fi coverage and performance.

- Plug in the extender about halfway between your router and the Wi-Fi dead zone. The location you choose must be within the range of the host network.
- Wait for about 2 minutes until the Signal LED turns solid green. If it doesn't, relocate the extender closer to the router to achieve better signal quality.

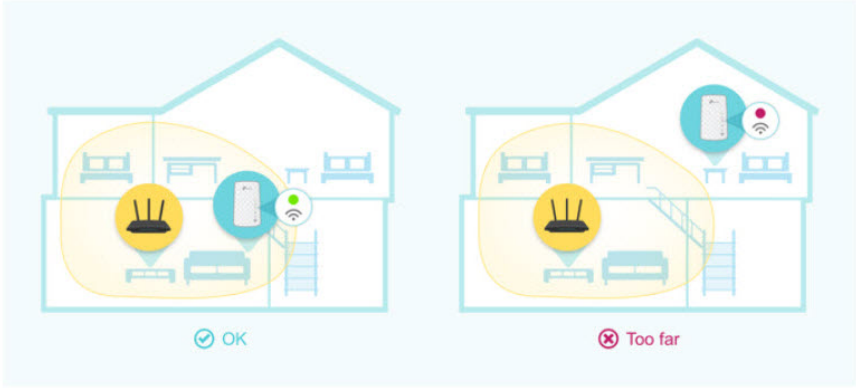

[Done](#)

- 7) [Enjoy!](#) Connect to the extended network and enjoy the internet.

Now connect to the extended network, then click **Finish**.

2.4GHz Extended Network		5GHz Extended Network	
SSID:	TP-Link_0969_EXT	SSID:	TP-Link_0969_5G_EXT
Password:	123456789	Password:	123456789

☒ I have connected to the extended network.


Finish

2.2.3. Method 3: Via the WPS Button

Use this way if your router has a WPS button. The button might look like one of these:



1. Press the WPS button on your host router, and then press the WPS button on the extender for 1 second within 2 minutes.

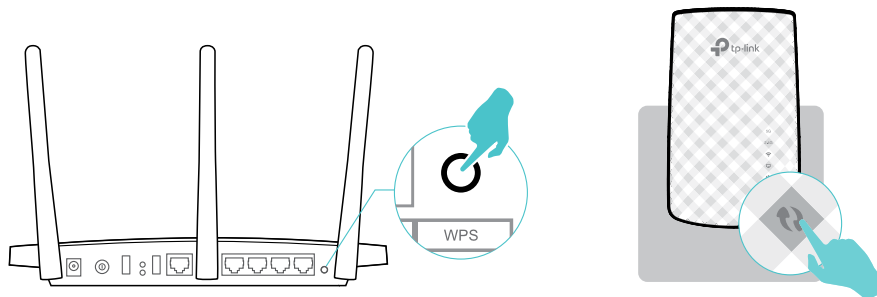

Note:


For more information about using WPS button on your host router, please refer to the router manufacturer's user guide.

2. Wait until the WPS LED  changes to solid on, which indicates that the WPS connection is successful.

Note:

If the LED does not turn solid on, try again or refer to [Method 1: Via the TP-Link Tether App](#) or [Method 2: Via a Web Browser](#).

3. If the extender connects to a dual band router, repeat steps 1 and 2 above to connect to the other band.
4. Wait until the Signal LED  turns solid on, setup is done.

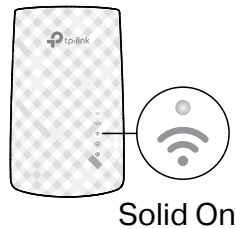

Extended Network Names:

Router's network name with _EXT at the end

Passwords:


Same as your router

Note:

If you want to customize the extended network name, refer to [Configure Wireless Network](#).

5. Relocate your extender for optimal Wi-Fi coverage and performance.

- 1) Plug in the extender about halfway between your router and the Wi-Fi dead zone. The location you choose must be within the range of your router.
- 2) Wait for about 2 minutes until the Signal LED  turns solid green. If it doesn't, relocate the extender closer to the router to achieve better signal quality.

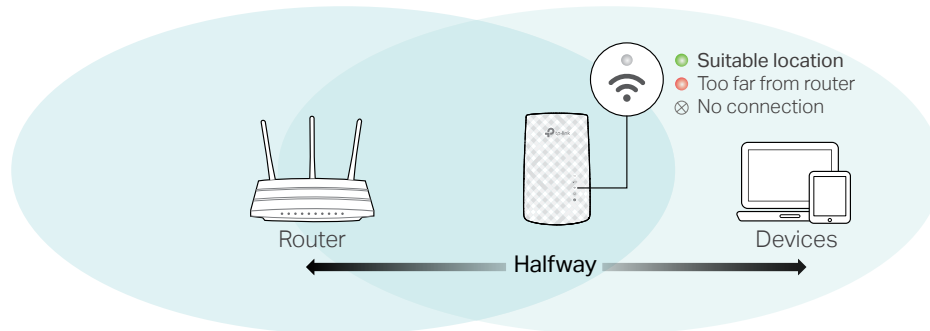

Tips:

To minimize signal interference, please choose a location which is far away from Bluetooth devices and other household electronic devices, such as cordless phones, microwave ovens and baby monitors.

6. **Enjoy!** Connect to the extended network and enjoy the internet.

Chapter 3

Customize Your Network

This chapter guides you on how to configure network settings that are available for this extender.


It contains the following sections:

- [Check Internet Status](#)
- [Configure Wireless Network](#)
- [Change LAN Settings](#)
- [Specify DHCP Server Settings](#)
- [Adjust Wi-Fi Coverage](#)
- [Set Access Control](#)
- [Set High Speed Mode](#)


3.1. Check Internet Status

You can view the internet status of your extender to check whether you have successfully set up the extended network(s).


1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
 2. Go to [Settings](#) > [Status](#) to view the internet status of your extender.
- The extender runs normally.

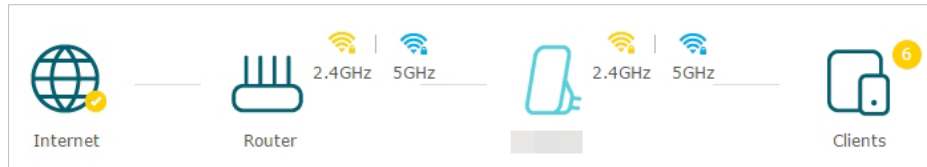


- The extender fails to connect to the host networks. Please go to [Settings](#) > [Wireless](#) > [Connect to Network](#) to check whether the host network passwords are correct. If the problem still exists, relocate the extender closer to the router to achieve better signal quality.

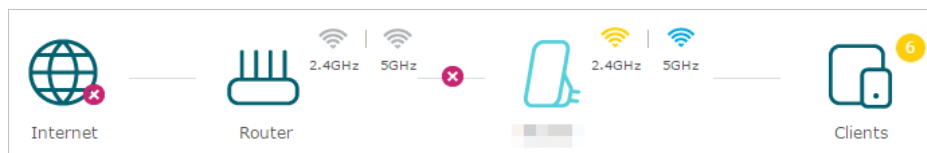

- The extender is connected to the host networks, but is not transmitting data. Please check the internet connection of your router.

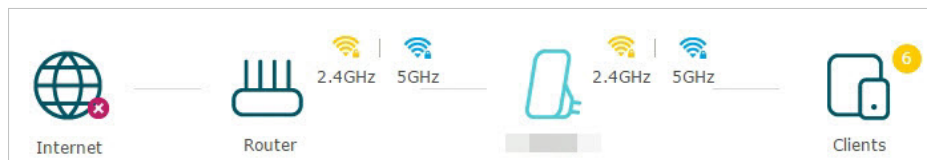

- The extender is connected to the router abnormally. Please go to [Settings](#) > [Network](#) and try setting your extender to obtain an IP address automatically.

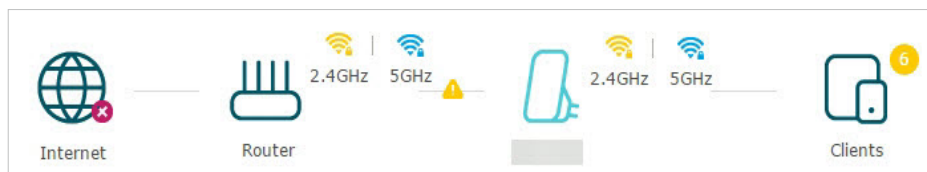

Click the icon of the Internet/Router/Range Extender/Clients to view corresponding information.

3.2. Configure Wireless Network

If you want to extend another host network after Quick Setup, you can refer to this section. Moreover, you can change the wireless settings for your extended networks.

Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.

■ **Note:**

Here we take the configuration of the 2.4GHz network as an example. If the 5GHz network is available on your extender, please refer to the instructions to set your 5GHz network.

➤ **To extend another host network:**

1. Go to [Settings > Wireless > Connect to Network](#).
2. Enable [Connect to 2.4GHz Network](#) and click [Wireless Scanner](#) to find all available networks.

Connect to Host Network

2.4GHz Network: ☒ [Connect to 2.4GHz Network](#)

[Wireless Scanner](#)

Host 2.4GHz SSID:

Host 2.4GHz Security:

Host 2.4GHz Password:

5GHz Network: ☒ [Connect to 5GHz Network](#)

[Wireless Scanner](#)

Host 5GHz SSID:

Host 5GHz Security:

Host 5GHz Password:

[Save](#)

3. Select the 2.4GHz host network you want to extend.

■ **Note:**

If the network you want to extend is on but not listed, please try the following steps.

- Move the extender closer to your router, and click [Rescan](#) in the top-right corner of the list.
- You can manually enter the SSID (network name) and password of the network you want to extend, and click [Save](#).

4. Once a host network is selected, the SSID and security type will be automatically filled in. If the selected network is encrypted, enter the password in the [Password](#) field.

5. Click [Save](#).

➤ **To enable or disable the extended network:**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Extended networks are enabled by default. If you want to disable the wireless function of a certain band, just clear the [Enable](#) checkbox. In this case, all the wireless settings of this band will be invalid.
3. Click [Save](#).

➤ **To change the wireless network name (SSID):**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Create a new SSID in [Extended 2.4GHz SSID](#) or click [Copy Host SSID](#). The value is case-sensitive.
3. Click [Save](#).

■ **Note:**

If you have changed the wireless settings via a wireless device, you will be disconnected after the settings are applied. Please write down the new SSID for future use.

➤ **To hide the SSID of the extended network:**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Select [Hide SSID broadcast](#), and the corresponding SSID will not be displayed when wireless devices scan for local wireless networks. You need to manually enter the SSID to join the network.
3. Click [Save](#).

3.3. Change LAN Settings

The extender is preset with a default LAN IP 192.168.0.254, with which you can log in to the web management page. The LAN IP address, together with the Subnet Mask, also defines the subnet that the connected devices are on. If the IP address conflicts with another device on your local network or your network requires a specific IP subnet, you can change it.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Network](#).
3. Select [Use the following IP address](#).
4. Enter a new IP Address as needed and leave the [Subnet Mask](#) as the default settings and enter the gateway that is in the same subnet as the IP address. The gateway is usually the LAN IP address of your extender.



The Network Settings form has a title bar 'Network Settings'. Below it are two radio buttons: 'Obtain an IP address automatically' (unselected) and 'Use the following IP address' (selected). Under the selected option, there are three input fields: 'IP Address:' with value '192.168.0.254', 'Subnet Mask:' with value '255.255.255.0', and 'Default Gateway:' with value '192.168.0.254'. A 'Save' button is at the bottom right.


5. Click [Save](#).

3. 4. Specify DHCP Server Settings

By default, the DHCP (Dynamic Host Configuration Protocol) Server is enabled and the extender acts as a DHCP server; it dynamically assigns TCP/IP parameters to client devices from the IP Address Pool. You can change the settings of the DHCP Server if necessary.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Network](#).

➤ **To specify the IP address that the extender assigns:**

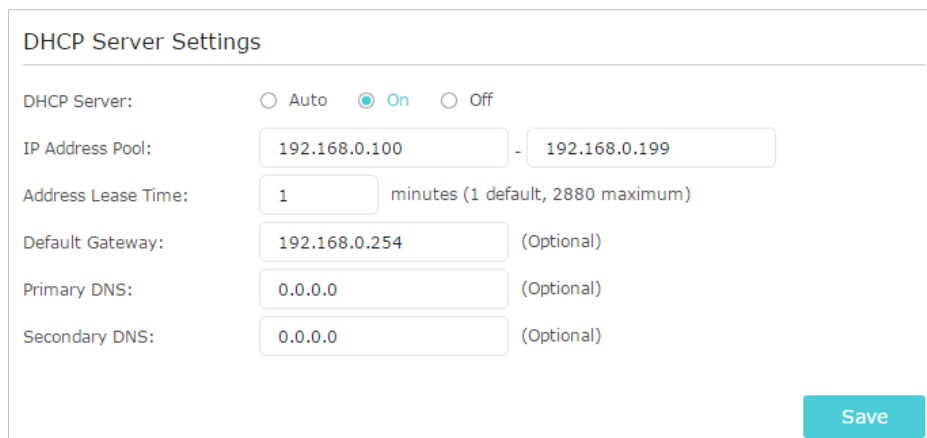

The DHCP Server Settings form has a title bar 'DHCP Server Settings'. Below it are three radio buttons: 'Auto' (unselected), 'On' (selected), and 'Off' (unselected). Under the 'On' option, there are several input fields: 'IP Address Pool:' with values '192.168.0.100' and '192.168.0.199', 'Address Lease Time:' with value '1' and text 'minutes (1 default, 2880 maximum)', 'Default Gateway:' with value '192.168.0.254' and '(Optional)', 'Primary DNS:' with value '0.0.0.0' and '(Optional)', and 'Secondary DNS:' with value '0.0.0.0' and '(Optional)'. A 'Save' button is at the bottom right.

1. Select [Auto](#) (recommended) or [On](#) to enable the DHCP Server.
2. Enter the starting and ending IP addresses in the [IP Address Pool](#).
3. Enter other parameters if the ISP requires them. The [Default Gateway](#) is automatically filled in and is the same as the LAN IP address of the extender.
4. Click [Save](#).

➤ **To view the DHCP Client List:**

You can view the information of the DHCP clients connected to the extender in the DHCP Client List.

DHCP Client List				
Client Number: 1			 Refresh	
ID	Client Name	MAC Address	Assigned IP Address	Lease Time
1		FC-AA-14-C4-3D-0C	192.168.0.100	00:00:43


3. 5. Adjust Wi-Fi Coverage

You can set the extender's Wi-Fi coverage depending on how large you want your Wi-Fi area to be.

1. Visit <http://tplinkrepeater.net> and log in with the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Wi-Fi Coverage](#).
3. Select your desired Wi-Fi coverage level for the extender.

Wi-Fi Coverage

Set the Wi-Fi coverage of your extender as needed.

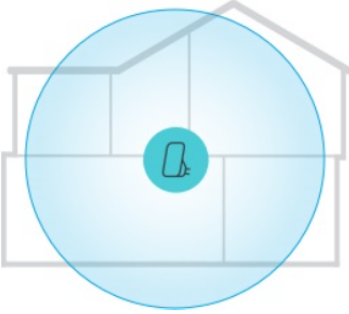

- ☒ **Maximum Coverage**
The extender will provide a long-range Wi-Fi signal but use up more power.
- ☐ **Intermediate Coverage**
The extender will provide a medium-range Wi-Fi signal.
- ☐ **Minimum Coverage**
The extender will provide a short-range Wi-Fi signal and use up less power.


Save

4. Click [Save](#).

3.6. Set Access Control

Access Control allows you to permit or block specific devices from accessing the internet for a specific period.

1. Visit <http://tplinkrepeater.net> and log in with the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Access Control](#).
3. Enable [Access Control](#).

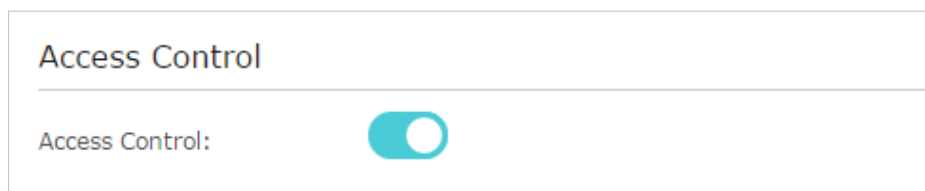


➤ To block specific device(s):


Note:

Devices connected to the extender via an Ethernet cable cannot be blocked.

1. Select [Blacklist](#) and click [Save](#).

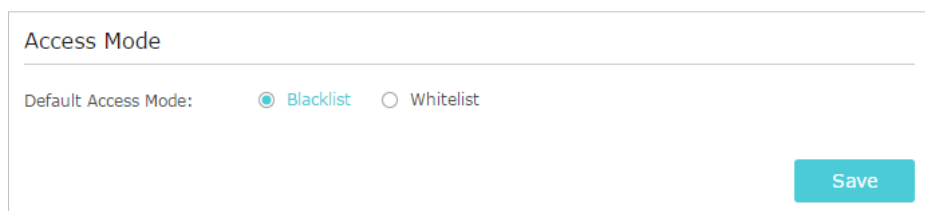

2. Select the device to be blocked in the [Online Devices](#) table by ticking the corresponding checkbox.
3. Click [Block](#) and the selected device(s) will be added to the [Devices in Blacklist](#) table.

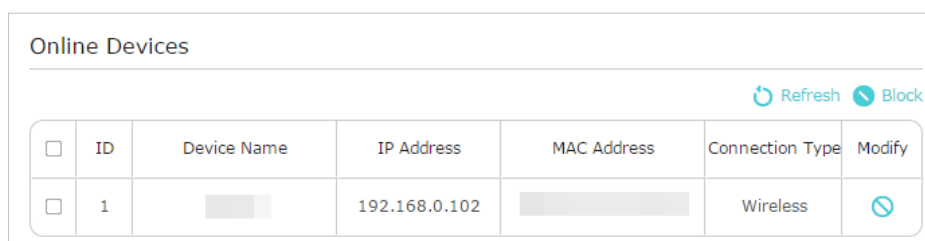

Online Devices					
	ID	Device Name	IP Address	MAC Address	Connection Type
☐	1		192.168.0.102		Wireless

4. Click [Block](#) in the [Devices in Blacklist](#) table to set the [Effective Time](#) for a certain entry as needed.

Device Name:

MAC Address:

Effective Time: ☐ Cannot access at any time
☒ Cannot access based on the time schedule

Time: : - :

Day(s): ☐ Monday ☐ Tuesday
☐ Wednesday ☐ Thursday
☐ Friday ☐ Saturday
☐ Sunday

5. Click **OK**.

➤ **To permit specific device(s):**

1. Select **Whitelist** and click **Save**.

Access Mode

Default Access Mode: ☐ Blacklist ☒ Whitelist

2. Click **Add** in the **Devices in Whitelist** table. Enter the **Device Name** and **MAC Address**. And you can set the **Effective Time** for a certain entry as needed.

Device Name:

MAC Address:

Effective Time: ☐ Access at any time
☒ Access based on the time schedule

Time: : - :

Day(s): ☐ Monday ☐ Tuesday
☐ Wednesday ☐ Thursday
☐ Friday ☐ Saturday
☐ Sunday

3. Click **OK**.

3.7. Set High Speed Mode

The High Speed feature switches off one of the wireless bands to leave one high-performance, super-fast network, ideal for HD streaming and gaming applications.

If most of your devices are connected to one wireless band, this feature can increase the overall performance of your wireless network.

■ **Note:**

Before enabling this feature, please go to [Settings > Wireless > Extended Network](#) and check that the 2.4GHz and 5GHz bands are both enabled. Additionally, if you are going to disable the 2.4GHz network, it's recommended to first make sure all your wireless devices support 5GHz network connection.

1. Visit <http://tplinkrepeater.net> and log in with the password you set for the extender.
2. Go to [Settings > Advanced Settings > High Speed](#).
3. Enable [High Speed Mode](#).
4. Select the [Auto](#) mode. The extender will decide which band the high-speed network will work on based on its wireless connection to your host router. The other band will be disabled.

High Speed

High Speed Mode: ☒ [Enable](#)
☒ [Auto](#)

Note: With High Speed enabled, the 5GHz band of extender will be switched off.



```
graph LR; Router[Router] -- 5GHz --> Extender[Range Extender]; Extender -- 2.4GHz --> Clients[Clients]
```

☐ [Manual](#)

[Save](#)

5. Click [Save](#).

Chapter 4

More Features of Your Extender

This chapter explains how to use the extender as a wireless adapter and as an access point .

It contains the following sections:

- [Use Your Extender as a Wireless Adapter](#)
- [Transform Your Existing Wired Network to a Wireless One](#)


4. 1. Use Your Extender as a Wireless Adapter

The extender can be used as a wireless adapter to connect any wired-only device, such as a Blu-ray player, game console, DVR, or smart TV, to your wireless network.

After configuration, you can connect an Ethernet-enabled device to the extender via an Ethernet cable.

Note:

Extenders that have no Ethernet port do not support this feature.

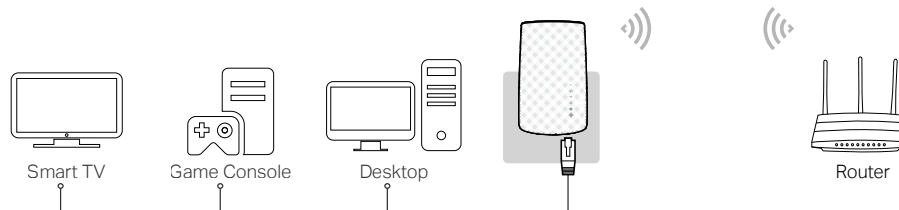

By default, the Ethernet port of the extender is connected to the 5GHz wireless network.

➤ **To change the connected wireless frequency:**

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to **Settings > Network**.
3. Select **2.4GHz** or **5GHz** and click **Save**.

Ethernet Port

Host Network for the Ethernet port: ☒ 2.4GHz ☐ 5GHz


Save

4. 2. Transform Your Existing Wired Network to a Wireless One

The extender can work as an access point, transforming your existing wired network to a wireless one.

4. 2. 1. To Set Up the Extender as an Access Point

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Click **Mode** in the top right corner of the page. Select **Access Point** and click **Save**.
The extender will reboot and switch to Access Point mode.

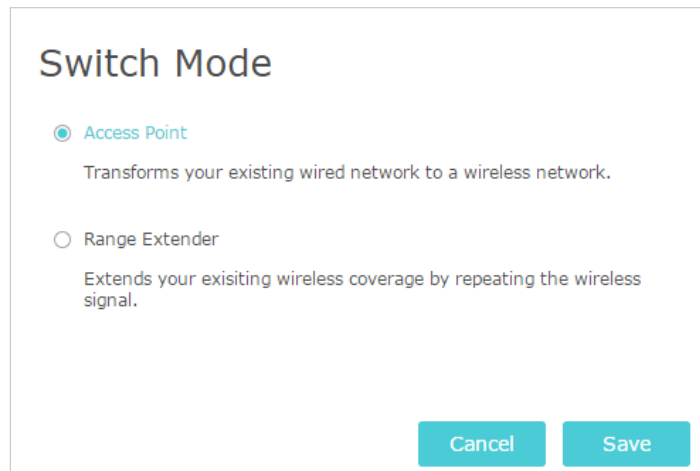

Switch Mode


☒ **Access Point**
Transforms your existing wired network to a wireless network.

☐ **Range Extender**
Extends your existing wireless coverage by repeating the wireless signal.

Cancel **Save**

3. After rebooting, connect the extender to your modem or wired router via an Ethernet cable.
4. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
5. Go to **Quick Setup** to configure your extender.

- 1) Select your time zone, and click **Next**.

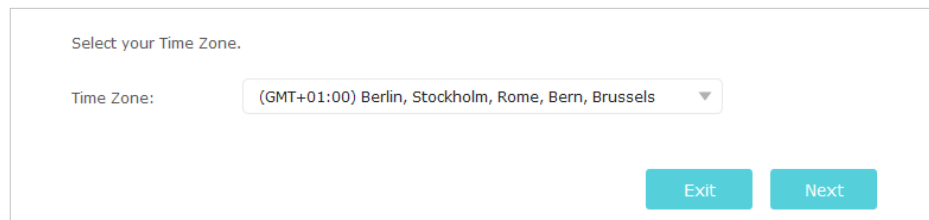


Select your Time Zone.

Time Zone: (GMT+01:00) Berlin, Stockholm, Rome, Bern, Brussels ▼

Exit **Next**

- 2) Configure your wireless settings and click **Next**.

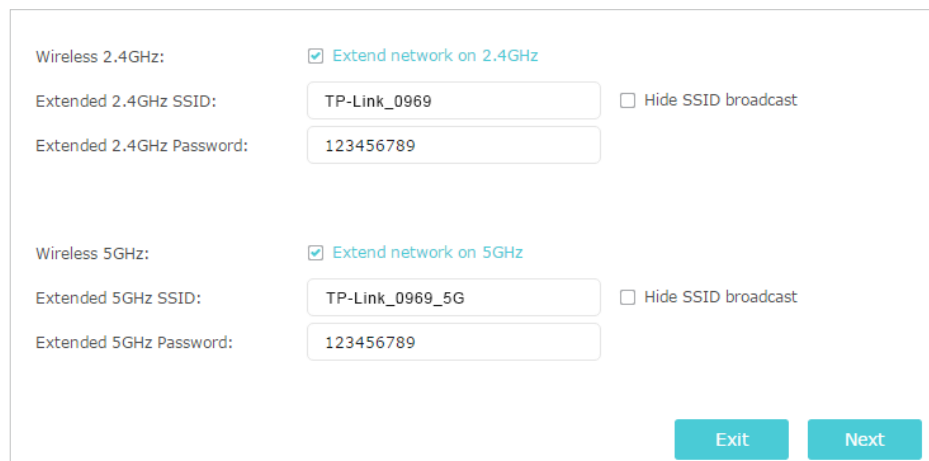

Wireless 2.4GHz: ☒ **Extend network on 2.4GHz**

Extended 2.4GHz SSID: TP-Link_0969 ☐ Hide SSID broadcast

Extended 2.4GHz Password: 123456789

Wireless 5GHz: ☒ **Extend network on 5GHz**

Extended 5GHz SSID: TP-Link_0969_5G ☐ Hide SSID broadcast

Extended 5GHz Password: 123456789

Exit **Next**

- 3) Confirm the information and click **Finish**. Now, you can enjoy Wi-Fi.

2.4GHz Extended Network		5GHz Extended Network	
Extend network on 2.4GHz:	On	Extend network on 5GHz:	On
Extended 2.4GHz SSID:	TP-Link_0969	Extended 5GHz SSID:	TP-Link_0969_5G
Hide SSID:	Off	Hide SSID:	Off
Extended 2.4GHz Password:	123456789	Extended 5GHz Password:	123456789
		Back Finish	

4.2.2. To Connect Your Wireless Devices to the Extender via WPS

Wi-Fi Protected Setup (WPS) provides an easier way to set up a secure Wi-Fi connection. Wireless devices that support WPS, including Android phones, tablets, and most USB network cards, can be connected to your extender through this method (not supported by iOS devices).

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to **Settings > Wireless > WPS**.
3. Enable **WPS**.

WPS

Enable WPS: ☒

4. Connect via WPS:

- **AP's PIN:** Enable **AP's PIN** and enter the PIN on your device. You can click **Generate** to get a new PIN or click **Default** to restore the PIN to its factory one.

AP's PIN

AP's PIN: ☒

PIN: 65214749

Generate Default

- **Push Button (Recommended):** Click **Connect** and push the WPS button on the client device.

WPS Wizard

Select a WPS connection method: ☒ Push Button (Recommended) ☐ PIN code

[Connect](#)

- PIN code: Enter the client's PIN, and click [Connect](#).

WPS Wizard

Select a WPS connection method: ☐ Push Button (Recommended) ☒ PIN code

Client's WPS PIN code:

[Connect](#)

Chapter 5

Manage Your Extender

This chapter presents how to manage and maintain your extender.

It includes the following sections:

- [Set System Time](#)
- [Control LEDs](#)
- [Set Power Schedule](#)
- [Upgrade the Firmware](#)
- [Backup and Restore Configuration Settings](#)
- [Change Login Password](#)
- [Check System Log](#)


5.1. Set System Time

The System Time of the extender will be used for time-based function such as the Power Schedule function. If you have enabled the Daylight Saving Time feature, the system time will be synchronized with the daylight saving time you configure.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Time Settings](#).

➤ **To get system time:**

1. Select your local [Time Zone](#) from the drop-down list.

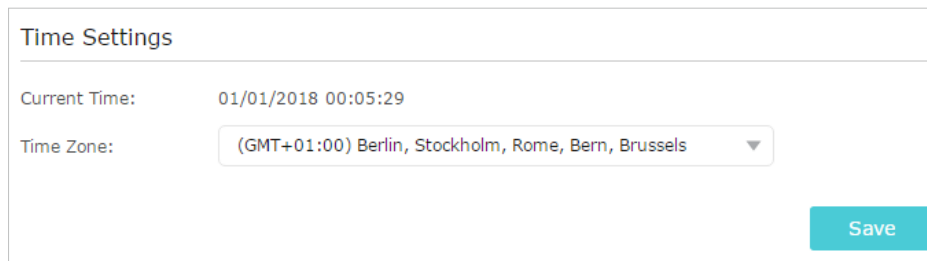

Time Settings

Current Time: 01/01/2018 00:05:29


Time Zone: (GMT+01:00) Berlin, Stockholm, Rome, Bern, Brussels ▼

Save

2. Click [Save](#).

➤ **To set up Daylight Saving Time:**

1. Select [Enable Daylight Saving Time](#).

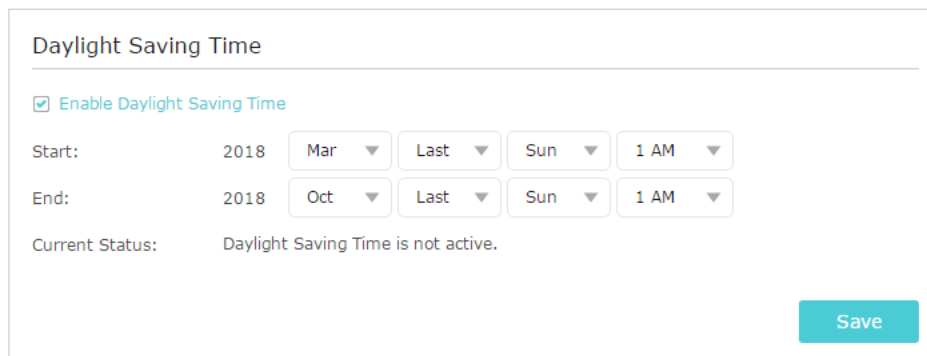

Daylight Saving Time

☒ Enable Daylight Saving Time

Start: 2018 Mar ▼ Last ▼ Sun ▼ 1 AM ▼

End: 2018 Oct ▼ Last ▼ Sun ▼ 1 AM ▼

Current Status: Daylight Saving Time is not active.

Save

2. Select the [Start](#) and [End](#) date and time of the daylight saving time at your local time zone.
3. Click [Save](#).

5.2. Control LEDs

The LEDs of the extender indicate its activities and status. You can turn off LEDs when you don't need them.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.

2. Go to [Settings](#) > [System Tools](#) > [LED Control](#).

➤ **To turn off the LEDs:**

Disable [LED Status](#).




LED Control

LED Status: ☐

➤ **To specify a time period when LEDs are off:**

1. Select [Night Mode](#).
2. Specify the LED off time period.
3. Click [Save](#).

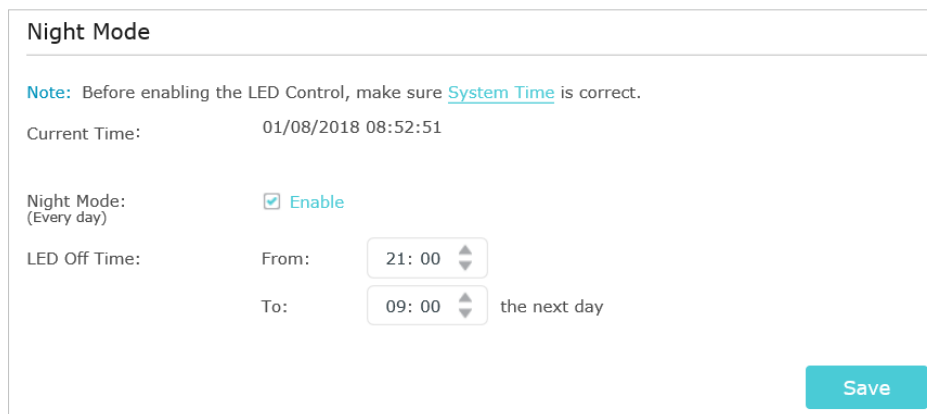

Night Mode

Note: Before enabling the LED Control, make sure [System Time](#) is correct.

Current Time: 01/08/2018 08:52:51

Night Mode: (Every day) ☒ [Enable](#)

LED Off Time: From: 21:00 To: 09:00 the next day

[Save](#)

5.3. Set Power Schedule

The Power Schdule feature allows you to specify a time period during which the extender is off.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Power Schedule](#).

➤ **To specify a time period when the extender is off:**

1. Click [Add](#).
2. Specify the power off time period and repetitive days.

Power Schedule

Note: Before enabling Power Schedule, please make sure the [System Time](#) is correct.

Current Time: 01/08/2018 07:59:11

+ Add
 - Delete

☐	ID	Power Off Time	Repeat	Status	Modify
☐	--	--	--	--	--

Power Off Time

From: 21 : 00

To: 09 : 00 (the next day)

Repeat:

Mon

Tue

Wed

Thu

Fri

Sat

Sun

Cancel

Save

3. Click [Save](#).


5.4. Upgrade the Firmware

TP-Link is committed to improving product features, giving you a better network experience. You can download the latest firmware file from the [Support](#) page at our website www.tp-link.com and upgrade the extender to the latest firmware version.

Note:

- Make sure the latest firmware file is matched with the hardware version (as shown in the download section of the Support page).
- Make sure that you have a stable connection between the extender and your computer. It is NOT recommended to upgrade the firmware wirelessly.
- Backup your extender configuration.
- Do NOT power off the extender during the firmware upgrade.

1. Download the latest firmware file for the extender from our website www.tp-link.com.
2. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
3. Go to [Settings](#) > [System Tools](#) > [Firmware Upgrade](#).
4. Click [Browse](#) to locate the downloaded new firmware file, and then click [Upgrade](#).

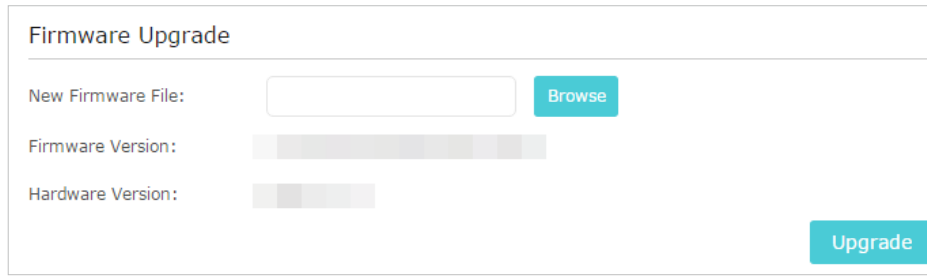The 'Firmware Upgrade' interface features a title bar at the top. Below it, there is a 'New Firmware File:' label followed by a text input field and a 'Browse' button. Underneath, the 'Firmware Version:' is shown with a progress bar. The 'Hardware Version:' is also displayed with a progress bar. An 'Upgrade' button is located in the bottom right corner.

Firmware Upgrade

New Firmware File: [Browse](#)

Firmware Version:

Hardware Version:

[Upgrade](#)

5. Wait a few minutes for the firmware upgrade to complete and the extender to reboot.


5.5. Backup and Restore Configuration Settings

The configuration settings are stored as a configuration file in the extender. You can backup the configuration file and restore the extender to the previous settings from the backup file when needed. Moreover, if necessary, you can erase the current settings and reset the extender to the default factory settings.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Backup & Restore](#).

➤ **To backup configuration settings:**

Click [Backup](#) to save a copy of the current settings to your local computer. A '.bin' file of the current settings will be stored on your computer.

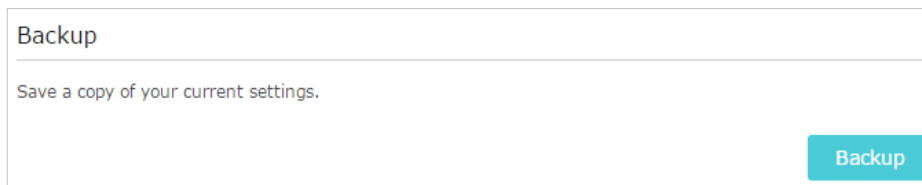The 'Backup' interface has a title bar. Below the title bar, it says 'Save a copy of your current settings.' and a 'Backup' button is in the bottom right corner.


Backup

Save a copy of your current settings.

[Backup](#)

➤ **To restore configuration settings:**

1. Click [Browse](#) to locate the backup configuration file stored on your computer, and click [Restore](#).

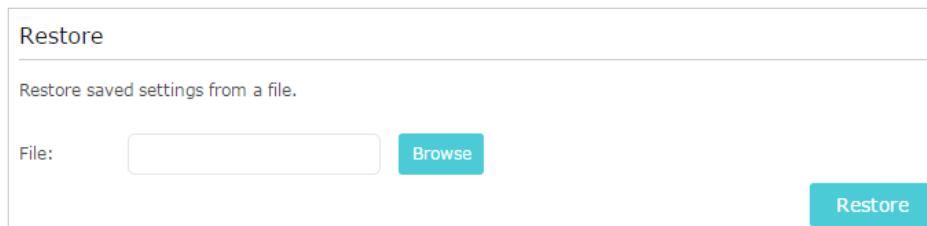The 'Restore' interface has a title bar. Below the title bar, it says 'Restore saved settings from a file.' There is a 'File:' label followed by a text input field and a 'Browse' button. A 'Restore' button is in the bottom right corner.

Restore

Restore saved settings from a file.

File: [Browse](#)


[Restore](#)

2. Wait a few minutes for the restore and reboot.

■ **Note:** During the restore process, do not power off or reset the extender.

➤ **To reset the extender to factory default settings:**

1. Click [Factory Restore](#) to reset the extender.

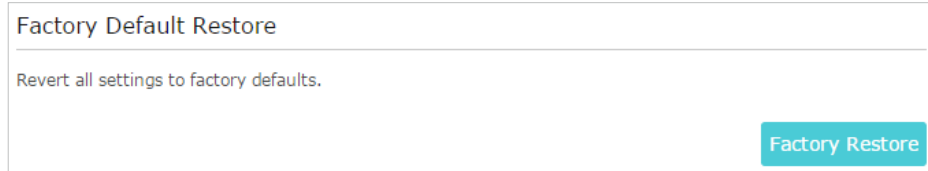

Factory Default Restore

Revert all settings to factory defaults.

Factory Restore

2. Wait a few minutes for the reset and reboot.


Note:

1. During the reset process, do not power off or reset the extender.
2. We strongly recommend you backup the current configuration settings before resetting the extender.

5. 6. Change Login Password

The account management feature allows you to change your login username and password of the web management webpage.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Admin Account](#).
3. Enter the old password. Then enter the new password twice (case-sensitive) and click [Save](#).

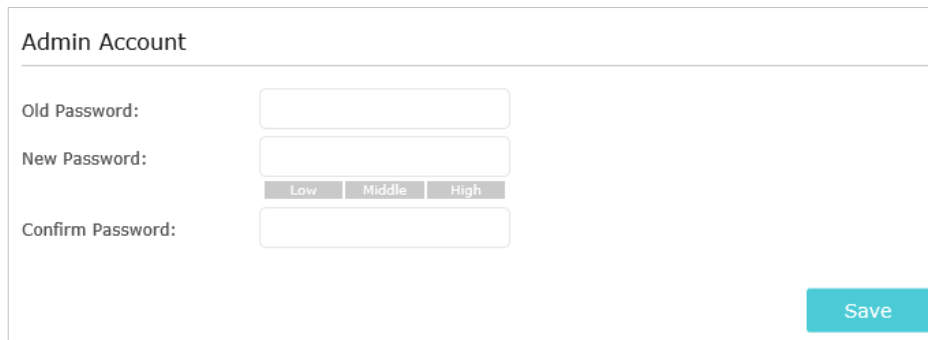

Admin Account

Old Password:

New Password:

Low Middle High

Confirm Password:

Save

4. Use the new password for future logins.

5. 7. Check System Log

If the extender is not working properly, you can save the system log and send it to our technical support team.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [System Log](#).

➤ **To save the system log locally:**

1. Choose the type and level of the system log as needed.
2. Click [Save Log](#) to save the system logs to a local disk.

System Log

Log Filter: Type =

ALL

 Level =

ALL

Refresh

Delete All

ID	Time	Type	Level	Content
5	0 days 00:10:59	DHCPC	ERROR	DHCP detection failed.
4	0 days 00:10:56	DHCPC	INFO	Sent a detection for DHCP.
3	0 days 00:10:53	DHCPC	INFO	Sent a detection for DHCP.
2	0 days 00:10:50	DHCPC	INFO	Sent a detection for DHCP.
1	0 days 00:10:47	OTHERS	INFO	User cleared up all the logs.

Save Log

FAQ

Q1. How to reset the extender to its factory default settings?

- With the extender powered on, use a pin to press the [RESET](#) button for 1 second. The extender will reboot.
- Log in to the extender's web management page. Go to [System Tools](#) > [Restore & Backup](#) and click [Factory Restore](#).

Q2. What should I do if I forget my login password?

Refer to FAQ > Q1 to reset the extender, and then visit <http://tplinkrepeater.net> to create a new login password.

Note: The extender must be reconfigured after a reset to access the internet. Please note down your login password for future logins.

Q3. What should I do if I forget my wireless password?

In Range Extender mode, the extender shares the same wireless passwords as those of your host networks.

In Access Point mode, please connect your computer to the extender using an Ethernet cable and follow the steps below:

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Wireless](#) > [Wireless Settings](#) to retrieve or reset your wireless password.

Q4. What should I do if I can't access the web management page?

This can happen for a variety of reasons. Please try the methods below to log in again.

- If your computer is wirelessly connected, make sure that you have connected to the extender's SSID.
- If your computer is connected via an Ethernet cable, please make sure that the connection is stable.
- Make sure your computer is configured as [Obtain an IP address automatically](#) and [Obtain DNS server address automatically](#).
- Verify that <http://tplinkrepeater.net> or <http://192.168.0.254> is correctly entered in the web browser and press [Enter](#).
- Use the IP address to access the extender. The default IP is [192.168.0.254](#). If the extender is connected to the router, you should go to your router's DHCP client list to obtain the extender's current IP address.
- Reset the extender and try again.

Q5. I have enabled wireless MAC filter, wireless access control, or access control list (ACL) on my router. What should I do before configuring the extender?

When a device connects through the extender to your router, the MAC address of the device shown on the router is translated to another MAC address. If your router's MAC filter, wireless access control, or ACL is enabled, the devices connected to the extender cannot get an IP address from the extender and cannot access the Internet.

To solve this problem, please follow the steps below:

1. Log in to your router and disable the MAC filter, wireless access control or ACL.

 **Note:** For more information about how to disable your router's MAC filter, wireless access control or ACL, please refer to your router's user guide.

2. Power on your extender, and run the [Quick Setup](#) to configure your extender.
3. Connect all of your devices to the extended network, and make sure the router's Link LED remains lit.
4. On your router, add all the Online Devices' MAC addresses to your router's MAC filter table.
5. Enable the router's MAC filter, wireless access control, or ACL to complete the configuration.

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2018 TP-Link Technologies Co., Ltd. All rights reserved.

FCC compliance information statement



Product Name: AC750 Wi-Fi Range Extender

Model Number: RE200 / RE220

Responsible Party:

TP-Link USA Corporation, d/b/a TP-Link North America, Inc.

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <http://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: sales.usa@tp-link.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

This device is restricted in indoor environment only.

We, TP-Link USA Corporation, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 2018-12-26

Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution:

1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

Avertissement:

1. Le dispositif fonctionnant dans la bande 5150-5250 MHz est réservé uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

Korea Warning Statements

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice & BSMI Notice

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

於5.25GHz至5.35GHz區域內操作之無線設備的警告聲明
工作頻率5.250~5.350GHz該頻段限於室內使用。

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

限用物質含有情況標示聲明書

產品元件名稱	限用物質及其化學符號					
	鉛 Pb	鎘 Cd	汞 Hg	六價鉻 CrVI	多溴聯苯 PBB	多溴二苯醚 PBDE
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應板	-	○	○	○	○	○
備考1. "超出0.1 wt %" 及 "超出0.01 wt %" 系指限用物質之百分比含量超出百分比含量基準值。						
備考2. "○"系指該項限用物質之百分比含量未超出百分比含量基準值。						
備考3. " - " 系指該項限用物質為排除項目。						



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use the device where wireless devices are not allowed.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

Explanations of the symbols on the product label

Symbol	Explanation
	Class II equipment
	AC voltage
	Indoor use only
	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.
	Protection earth