G56 GEARit Sport In-Ear True Wireless Earbuds with Wireless Charging

User Manual



Warning

Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to.

To reduce the risk of injury:

Keep batteries out of reach of children.

Do not heat, open, or dispose of battery pack in fire.

Do not allow metal objects to touch the battery on the device.

Do not expose battery pack to excessive heat.

Product Specification

Product model: G56

Bluetooth solutions: JL6973DBluetooth version:V5.3+BR+EDR

Bluetooth decoding: SBC, AAC

Bluetooth working frequency:2.402GHz-2.480GHz

• Frequency response:20Hz-20KHz

Speaker size: F10Impedance: 32Ω

Effective distance: 10m

Earphones battery capacity: 30mAh



- Charing case battery capacity: 300mAh
- Playing time:about 4-5hours
- Talk time:4-5hours
- Earphone charging time: about 1.5 hours
- Charging times for the case: about 3 times

Paring

1: Auto Pairing

Opening the charging case and take earphones out, and then the earphones will automatically turn on and pair. Open up Bluetooth setting on your smart device and scan for **GEARit Sport W111**.

Operation

1: Power on/off.

Open the charging case and take out earphones, automatically power on;

Place earphones into charging case and close the case, automatically power off.

Press and hold the touch button for 3 seconds to power on

Press and hold the touch button for 5 seconds to shut down

2: Play/Pause music.

When listening to music.

Tap the left/right earphones twice to play or pause the music.

3: Volume -/+

When listening to music.

Long press the left earphones to decrease the volume.

Long press the right earphones to increase the volume.

4: Previous /Next Song

Press left earphones 3 times to previous song.

Press right earphones 3 times to next song.

5: Answer/Hang up

When there is an incoming call.

Tap the left/right earphones twice to answer the call.

Tap the left/right earphones twice again to end the call.

5: Reject

When there is an incoming call.

Long press left or right earphones for 2 seconds to reject the call.

6:Voice assistant

Triple Tap the left or right earphone to activate voice assistant.

Charging Function

Fully charge the case and earphones before using for the first time.

- 1: Charging the charging case
- (a) There is a Type-C cable included in the packaging. Connect it to the Type-C charging port and the other end into a USB powered source to charge your case.
- (b) charging (The indicator light is white): While 0< Charging box power <25%, led1 white light flashing;
- (c) blue 25% Scharging box power <50%, led1 white light always on, led2 Flashing;
- (d) blue 50%≤Charging box power <75%,led1,led2 white light always on, led3 Flashing;
- (e) blue 75%≤Charging box power <90%,led1,led2,led3 white light always on, led4 Flashing;
- (f) The charging box is fully charged 90-100%, all led lights always on

2:Earphone charging

When battery is low, you will listen to a warning sign. It will power off when the earphones completely out of battery.

- (a) Place the earphones into the charging case.
- (b) When charging the earphone, the white light will be on, and the green light will be on when fully charged.

FCC ID: 2BKO4-G56

FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

- --Increase the separation between the device and receiver.
- --Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment