

User Manual for PF-3693

This device is installed in vehicle. Since it is not sold to general end users directly, there is no user manual of this device.

The following statements must be described on the user manual of the host vehicle of this device;

[for FCC]


FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.


Audio set

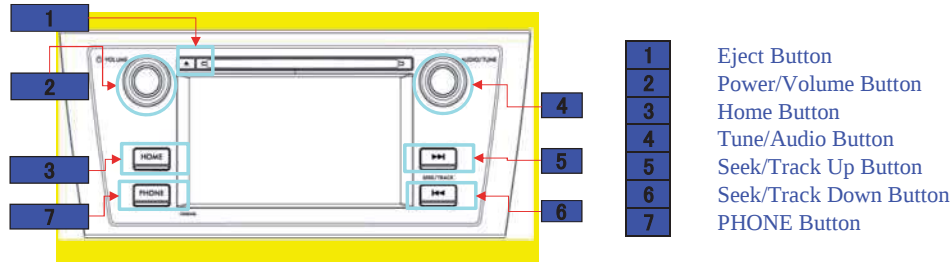


Power and audio controls

- 1 Eject Button**
Press the “▲” button to eject a disc loaded in the audio set.
- 2 Power/Volume Button**
Push the dial for ON or OFF. Turn the dial to control volume.
- 3 Home Button**
Press the button to indicate main menu.
- 4 Tune/Audio Button**
Turn “Tune” dial clockwise to increase the tuning frequency and turn the “Tune” dial counterclockwise to decrease it. Press switch to select desired tone and balance control modes.
- 5 Seek/Track Up Button**
Press the button and hold 2s, the radio will automatically search for a receivable station and stop at the first one it finds. Press the button to select the next folder. Press the button to select the previous.
- 6 Seek/Track Down Button**
Press the button and hold 2s, the radio will automatically search for a receivable station and stop at the first one it finds. Press the button to select the previous.
- 7 PHONE Button**
Press the button to pair with your cell phone.

FM MODE

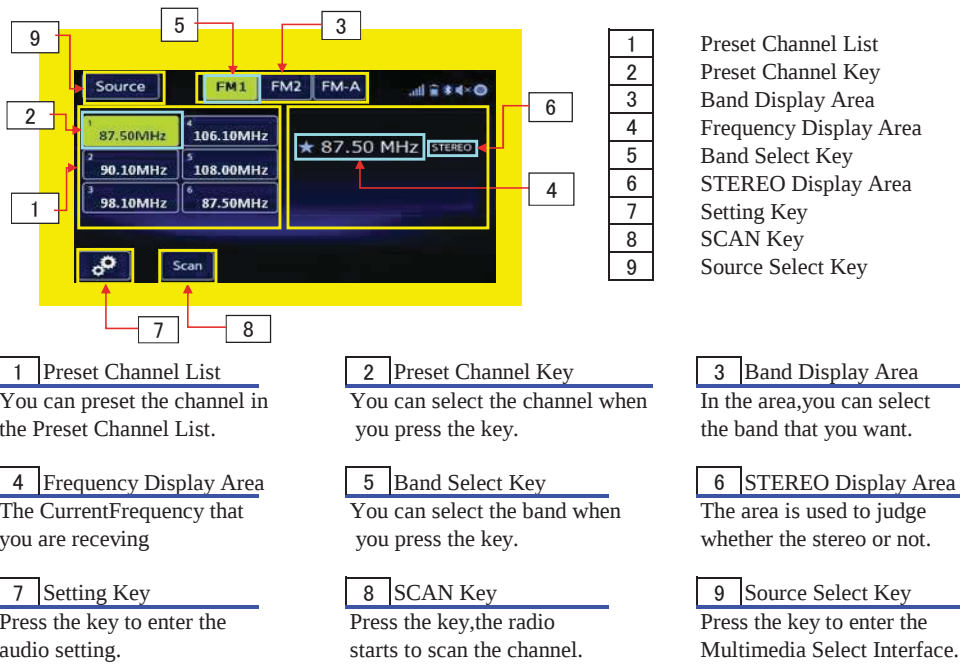

AM MODE

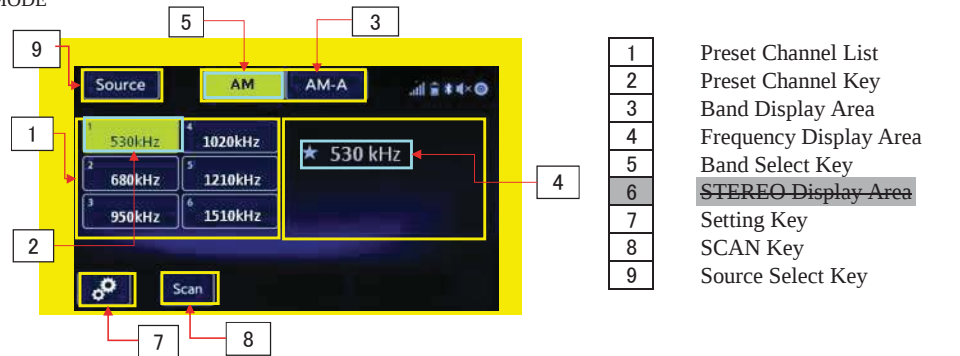

1 Preset Channel List
You can preset the channel in the Preset Channel List.

4 Frequency Display Area
The CurrentFrequency that you are receving

7 Setting Key
Press the key to enter the audio setting.

2 Preset Channel Key
You can select the channel when you press the key.

5 Band Select Key
You can select the band when you press the key.

8 SCAN Key
Press the key,the radio starts to scan the channel.

3 Band Display Area
In the area,you can select the band that you want.

9 Source Select Key
Press the key to enter the Multimedia Select Interface.

CD



1 CD Key
Press the key to enter CD mode.



1 Source Select Key

The diagram shows a multimedia interface with the following components and functions:

- 1 Source Select Key**: Press the key to enter the Multimedia Select Interface.
- 2 Audio Information Display**: In the area, audio information is showed.
- 3 Trick Play Key**: Press the key to select the trick.
- 4 Playing Time Display**: It shows the current play time.
- 5 Track Number**: It shows the playing song's order and the total songs' number.
- 6 Time Of Track**: It shows the track's play time.
- 7 Progress Bar**: It shows the progress of track.
- 8 List Key**: Press the key to enter the list.
- 9 SCAN Key**: Press the key, Scan mode lets you listen to the first 10 seconds of each track/file. To cancel it, press the button again.

USB

The diagram shows a USB/iPod interface with the following components and functions:

- 1 USB/iPod Key**: Press the key to enter USB mode.
- 1 USB (Source Name)**: It shows the current mode.
- 2 Source Select Key**: Press the key to enter the Multimedia Select Interface.
- 3 Quasi Album artwork**: It is the quasi album art work.
- 4 SCAN Key**: Press the key, Scan mode lets you listen to the first 10 seconds of each track/file. To cancel it, press the key again.
- 5 Track Number**: It shows the playing song's order and the total songs' number.
- 6 List Key**: Press the key to enter the list.
- 7 Audio Information Display**: In the area, audio information is showed.
- 8 Trick Play Key**: Press the key to select the trick.
- 9 CurrentPlayTime Display Ar**: It shows the current play time.
- 10 Folder up Key**: Press the key to select the previous.
- 11 Folder Number**: It shows the total folder number.
- 12 Folder down Key**: Press the key to next folder.
- 13 Time Of Track**
- 14 Progress Bar**

It shows the track's play time.

It shows the progress of track.

Ipod



1 USB/iPod Key
Press the key to enter Ipod mode.



6	1	Source Name
7	2	Source Key
10	3	Album artwork
11	4	CurrentPlayTime Display Area
12	5	TotalPlayTime Display Area
13	6	Audio Information Area
	7	Trick play key
	8	List key
	9	TrackNumber Display Area
	10	Title Display Area
	11	ArtistName Display Area
	12	Album Display Area
	13	GenreName Display Area

1 Source Name
It shows the current mode.

2 Source Select Key
Press the key to enter the Multimedia Select Interface.

3 Album artwork
It is the quasi album art work.

4 CurrentPlayTime Display Area
It shows the currentplay time.

5 TotalPlayTime Display Area
It shows the track's play time.

6 Audio Information Display
In the area,audio information is showed.

7 Trick Play Key
Press the key to select the trick.

8 List Key
Press the key to enter the list.

9 TrackNumber Display Area
It shows the total folder number.


10 Title Display Area
It shows the song's title.

11 ArtistName Display Area
The area shows the artist name.


12 Album Display Area
It shows the album about the son

13 GenreName Display Area
It shows the GenreName about the song.


BT

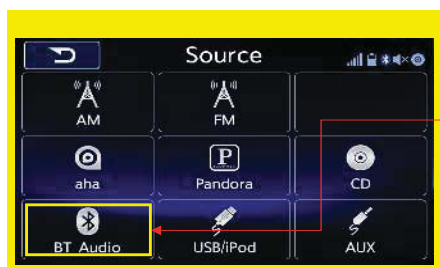

 
1 BT Audio Key
Press the key to enter BT mode.



1	Song Name Display
2	Artist Name Display
3	Album Name Display
4	CurrentPlayTime Display Area

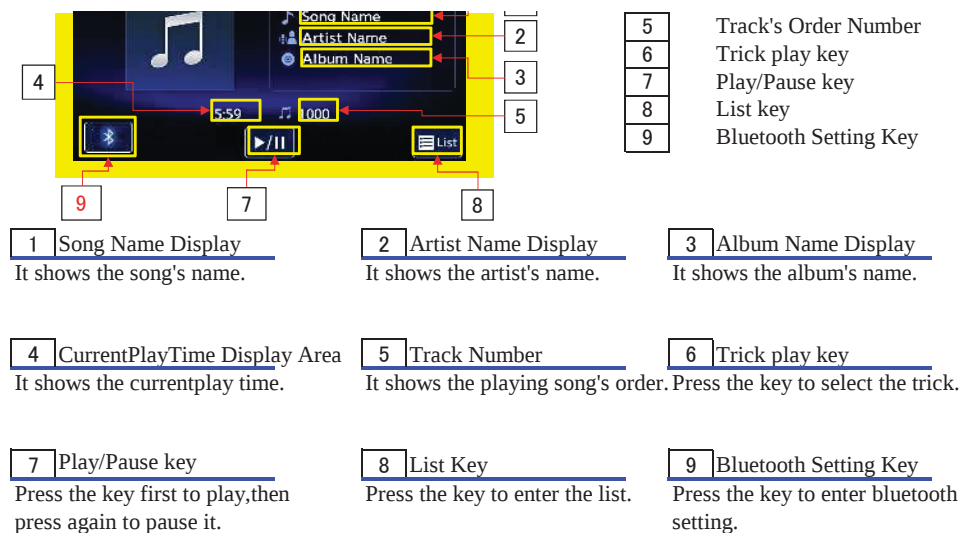

Aha

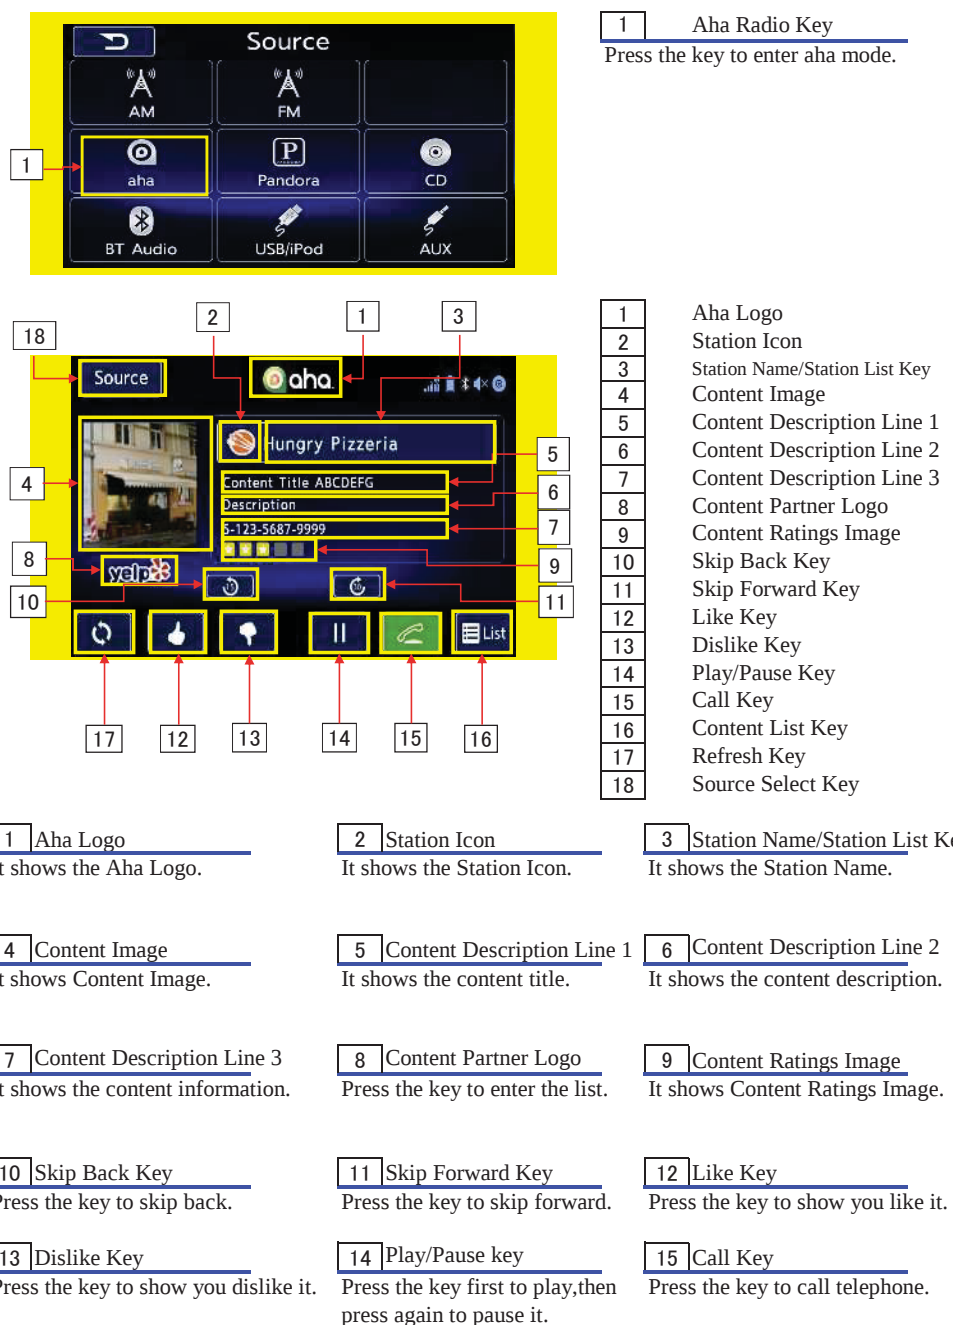

16 Content List Key

Press the key to enter the content list.


17 Refresh Key

Press the key to refresh.

18 Source Select Key

Press the key to enter the Multimedia Select Interface.

AUX

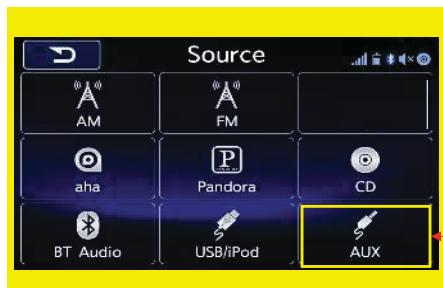

1 AUX Key

Press the key to enter AUX mode.



1 SOURCE Key
2 Setting Key

1 SOURCE Key

Press the key to enter the Multimedia Select Interface.

2 Setting Key

Press the key to enter the audio setting.