


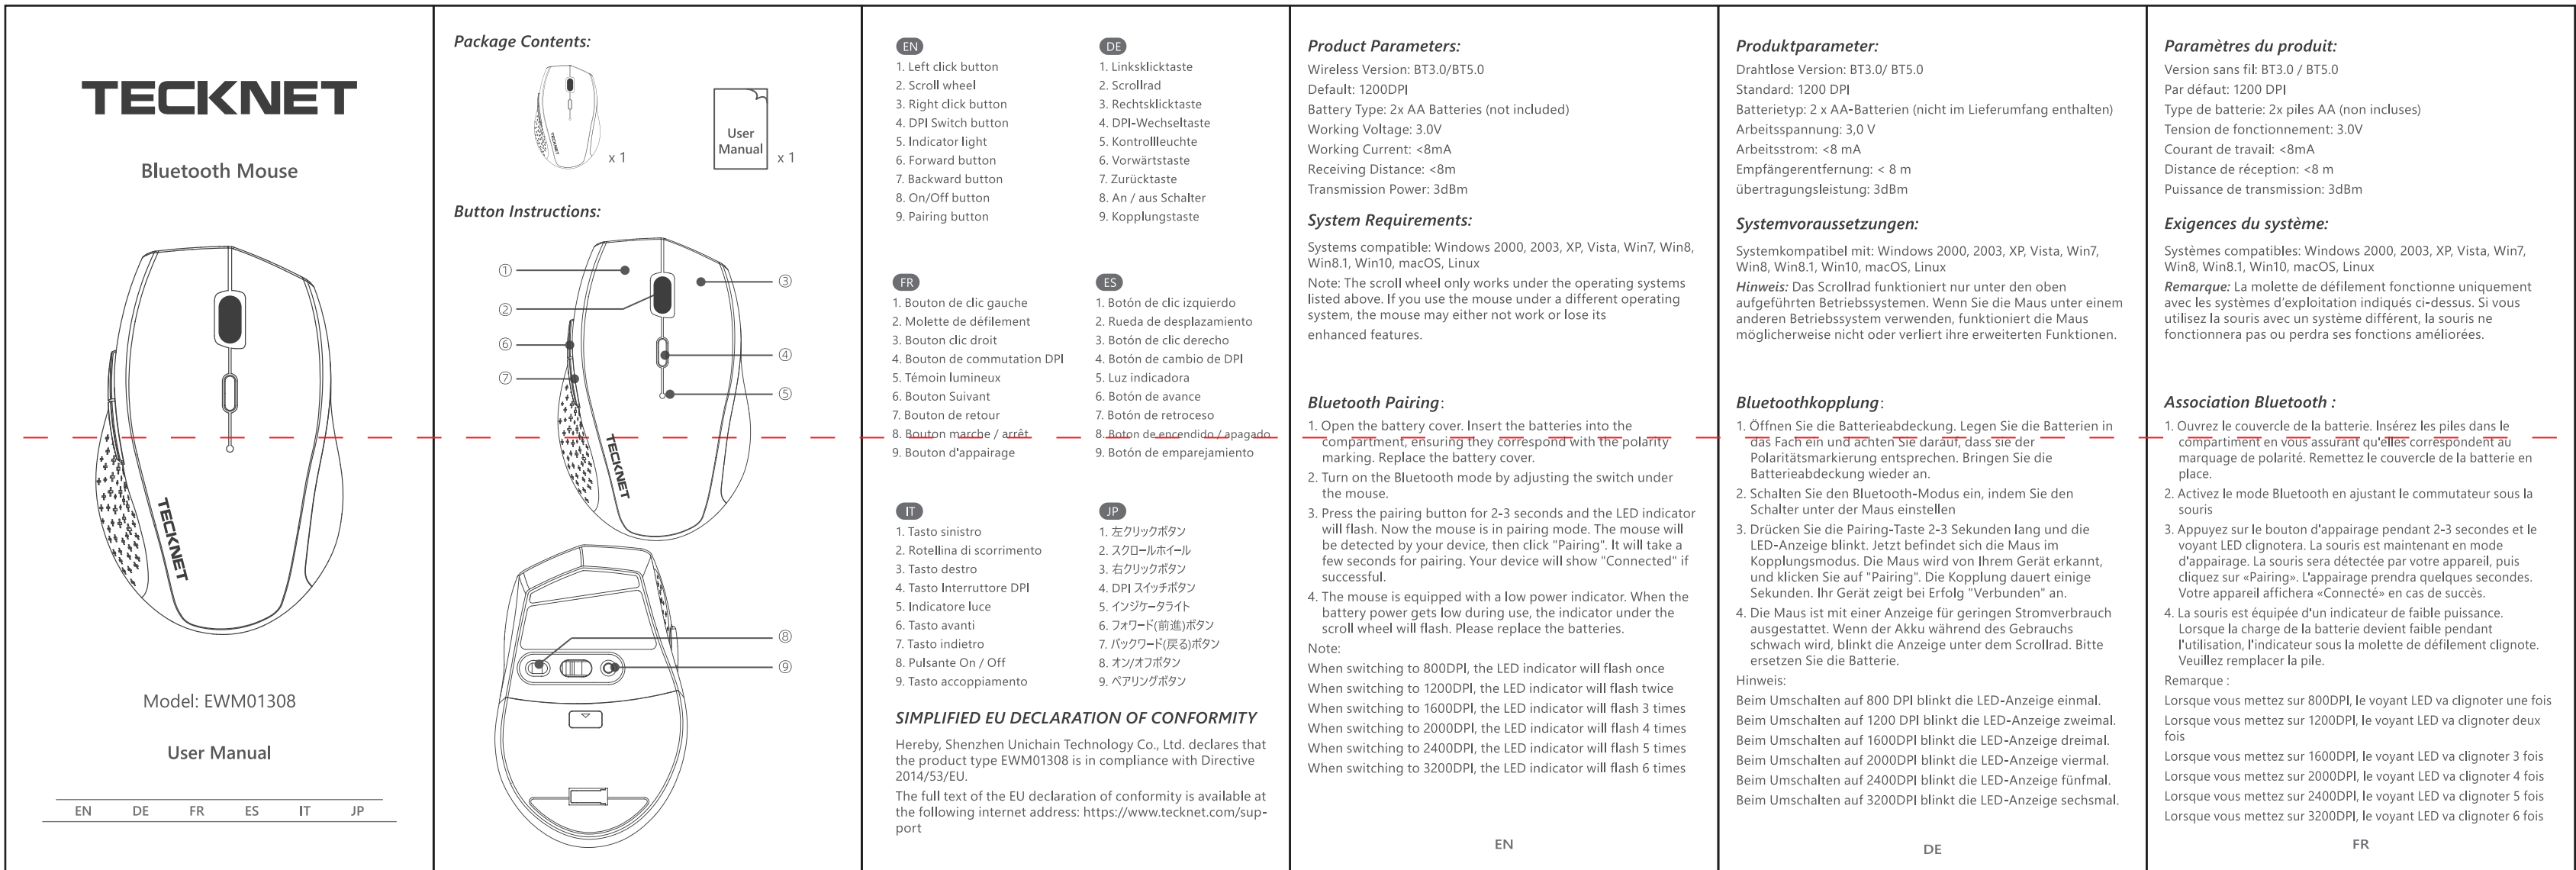

Parámetros del producto: Versión inalámbrica: BT3.0/BT5.0 Por defecto: 1200DPI Tipo de batería: 2 pilas AA (no incluidas) Voltaje de funcionamiento: 3.0V Corriente de trabajo: <8mA Distancia de recepción: <8m Poder de transmisión: 3dBm Requisitos del sistema: Sistemas compatibles: Windows 2000, 2003, XP, Vista, Win7, Win8, Win8.1, Win10, macOS, Linux Nota: La rueda de desplazamiento solo funciona en los sistemas operativos enumerados anteriormente. Si usa el mouse en un sistema operativo diferente, el mouse puede no funcionar o perder sus características mejoradas. Emparejamiento Bluetooth: - Abra la tapa de la batería. Inserte las baterías en el compartimiento, asegurándose de que correspondan con la marca de polaridad. Vuelva a colocar la tapa de la batería. - Active el modo Bluetooth ajustando el interruptor debajo del mouse - Presione el botón de emparejamiento durante 2-3 segundos y el indicador LED parpadeará. Ahora el mouse está en modo de emparejamiento. El dispositivo detectará el mouse y, a continuación, haga clic en "Emparejar". El emparejamiento tardará unos segundos. Su dispositivo mostrará "Conectado" si tiene éxito. - El mouse está equipado con un indicador de baja potencia. Cuando la energía de la batería se agota durante el uso, el indicador debajo de la rueda de desplazamiento parpadeará. Reemplace la batería. Nota: Al cambiar a 800 DPI, el indicador LED parpadeará una vez Al cambiar a 1200DPI, el indicador LED parpadeará dos veces Al cambiar a 1600DPI, el indicador LED parpadeará 3 veces Al cambiar a 2000DPI, el indicador LED parpadeará 4 veces Al cambiar a 2400DPI, el indicador LED parpadeará 5 veces Al cambiar a 3200DPI, el indicador LED parpadeará 6 veces	Parametri del prodotto: Versione Wireless: BT3.0/BT5.0 Predefinito: 1200DPI Tipo Batteria: 2 batterie AA (non incluse) Tensione di Funzionamento: 3.0V Corrente di Funzionamento: <8mA Distanza di Ricezione: <8 metri Potenza di trasmissione: 3dBm Requisiti di Sistema: Sistemi compatibili: Windows 2000, 2003, XP, Vista, Win7, Win8, Win8.1, Win10, macOS, Linux Nota: La rotellina di scorrimento funziona solamente con i sistemi operativi di cui sopra. Se si usasse il mouse con un sistema operativo differente, il mouse potrebbe non funzionare o perdere le sue funzionalità avanzate. Accoppiamento Bluetooth: - Aprire il coperchio del vano batteria. Inserire le batterie nel vano, facendo attenzione affinché corrispondano ai segni della polarità. Rimettere il coperchio del vano batteria. - Attivare la modalità Bluetooth regolando l'interruttore che si trova sotto il mouse - Premere il tasto di accoppiamento per 2-3 secondi e la spia LED lampeggerà. Ora il mouse è in modalità di accoppiamento. Il mouse verrà rilevato dal dispositivo, quindi fare clic su "Pairing" ("Accoppiamento"). L'accoppiamento richiederà alcuni secondi. Il dispositivo mostrerà "Connesso" in caso di esito positivo. - Il mouse ha una spia a basso consumo. Quando la carica della batteria è bassa durante l'uso, l'indicatore sotto la rotellina di scorrimento lampeggia. Sostituire la batteria. Nota: Quando si passa a 800DPI, la spia LED lampeggia una volta Quando si passa a 1200DPI, la spia LED lampeggia due volte Quando si passa a 1600DPI, la spia LED lampeggia 3 volte Quando si passa a 2000DPI, la spia LED lampeggia 4 volte Quando si passa a 2400DPI, la spia LED lampeggia 5 volte Quando si passa a 3200DPI, la spia LED lampeggia 6 volte	製品の仕様: 無線バージョン: BT3.0/BT5.0 既定: 1200DPI 電池の種類: 単3電池x 2本 (別売) 動作電圧: 3.0V 動作電流: <8mA 受信距離: <8m 送信電力: 3dBm システム要件: 対応システム: Windows 2000、2003、XP、Vista、Win7、Win8、Win8.1、Win10、macOS、Linux メモ: スクロールホイールは上記のオペレーティングシステムでのみ動作します。それ以外のオペレーティングシステムでマウスを使用されると、マウスが動作しない、または拡張機能が使えない場合があります。 Bluetooth ペアリング: - 電池ケースのカバーを開きます。電池の極性と陰極の向きに合わせて電池を装填し、電池ケースのカバーを戻してください。 - マウスの下側にあるスイッチを動かして Bluetooth モードにします。 - ペアリングボタンを 2-3 秒押すとLED インジケータが点滅します。これでマウスがペアリングモードになりました。端末によりマウスが検出されたら、「Pairing（ペアリング）」をクリックします。ペアリングには数秒かかる場合があります。ペアリングに成功すると、端末に「Connected（接続済み）」と表示されます。 - このマウスには電池残量インジケータが備わっています。ご使用中に電池の残量が少なくなると、スクロールホイールの下にあるインジケータが点滅します。電池を交換してください。 メモ: 800DPI に切り替えると、LED インジケータが1回点滅します。 1200DPI に切り替えると、LED インジケータが2回点滅します。 1600DPI に切り替えると、LED インジケータが3回点滅します。 2000DPI に切り替えると、LED インジケータが4 回点滅します。 2400DPI に切り替えると、LED インジケータが5回点滅します。 3200DPI に切り替えると、LED インジケータが6回点滅します。	IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS. 1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions. 2. Before using the product, read all instructions and caution markings on the product, accessories and device using our product. 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. 4. Children should be supervised to ensure that they do not play with the appliance. 5. Keep the product away from fire or explosion may occur. 6. Do not place the product in or near inflammable, explosive or hazardous object. 7. Do not place in or near water, rain, excess moisture or extreme heat. 8. Do not operate the product with damaged cord or plug. 9. Do not operate the product if it has been damaged in any way. 10. Do not disassemble the product. Disassembly may result in a risk of safety hazards. 11. Do not throw or shake the product.	Limited 12-Month Warranty What this warranty covers. Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TeckNet product that the product shall be free of defects in design, assembly, material, or workmanship. What the period of coverage is. Unichain warrants the TECKNET product for 12 Months. What will we do to correct problems? Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). What is not covered by this warranty? All above warranties are null and void if the TeckNet product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TeckNet product has been improperly installed, altered in any way, or tampered with. The TeckNet Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration. How to claim the warranty Please contact retailers or visit TECKNET website or email support@tecknet.com for more information. To extend the warranty period, please visit TECKNET website and register your TECKNET products within 90 days of purchase. Disclaimer Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.	FCC Statement: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures: - Reorient the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into and outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment. Correct Disposal of This Product (Waste Electrical& Electronic Equipment) This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.
ES	IT	JP			

尺寸: 74.5 X 75 MM

材质: 80g 书纸 单色印刷 风琴折

