

User's Manual

Dear customer:

Thank you for choosing this mobile phone. This mobile phone incorporates the latest world advanced functions, enabling simple and convenient operation, satisfying your special requirements.

The mobile phone supports T-FLASH (memory) card and Dual SIM standby. It integrates the following available functions: SMS, MP3, MP4, Camera, FM radio, Video recorder and Calendar, enabling you arranging your work, study and life freely; with long standby duration, as well as Alarm and Calculator, your communication will be easier and smoother; powerful File manager allows you managing the files conveniently. In addition, the chord ringtone allows you selecting music to set as ringtone; the personalized appearance also can satisfy your selection.

Note: *User's Manual is just to guide the user about the functionality of the phone. Some functions may vary due to modifications and up gradations of software or due to print mistake.*

Keys functions

Keys	Functions
Left soft key	Press this button to enter standby mode shortcuts; Press this key to confirm the function you choose; Press this key to answer a call.
Right soft key	Press this key to enter phonebook list under standby mode; Press this key to go back to previous menu; Press this key to reject a call.
Call key	Press this key to call out; Press to pick up phone when there is an incoming call; Press to enter call logs under standby mode.
End key	Power Off: Long press to power off under standby mode; Power On: Long press to power on if the phone is power off; Press this key to go back to standby screen.
Navigation keys	Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate. Under standby mode, press a direction key to enter the specified function page. You can also customize direction keys to match the desired functions.
OK key	Press OK key to confirm and enter main menu. long press ‘OK’ this key to open/close the torch.
Number keys	Dial numbers under standby mode and enter numbers and characters in editing mode. Under standby mode.
* key	Under standby mode, press * key twice to display “+” to call international numbers;”P” and “W” to call extension numbers. Help to lock the keypad with pressing left soft key first. press * key to decrease volume.
# key	Under standby mode, press and hold this key to switch between general mode and meeting mode. Under players and FM mode, press # key to increase volume.

Call

Under standby interface, input a phone number and press the Call key to make a call by SIM1/SIM2. To end or reject a receiving call, press the End key. s

Message

Enter this menu, you can view: Write message, Inbox, Drafts, Outbox, Sent messages, Templates, SMS settings. The capacity of messages is due to maximum storage capacity built in mobile phone and external SIM cards. And you can check the memory status of the SIM cards or mobile phone.

Contacts

Phone can store up to 100 phone number , While SIM cards contact capacity depends on the network operator, please consult the local operator. Press Options, you can View: View, Send text message, Call, Edit, Delete, Copy, Add to Blacklist, Mark several, Phonebook Settings.

Camera

Camera supports photographing function .you can take pictures with the embedded camera and adjust the camera settings. The camera lens is in the rear side of the mobile phone and the screen is the viewfinder window. The pictures are taken in JPG format. After downloading to PC, please view with appropriate software. If the mobile phone memory is insufficient, please delete certain pictures or other files in “File manager”.

Call history

In the main menu, you can view Missed /Dialed /received /All calls /Delete call logs and Call timers.

Tools

Enter this Tools, you can view: Alarm, Calendar, Calculator and Torch. It is convenient and good for you to arrange your life orderly every day and make your life become lively and beautiful.

Multimedia

◆ Photos

With this function, you can select any picture and press left soft key to perform the following operations: View, Send, Use as, Rename, Delete, Image Information.

◆ Audio player

Enter Audio player. Press left soft key to enter options: Play, Add, Remove, Remove all and Settings.

◆ Video player

Enter Video player. Press left soft key to enter options: Play, Send, Rename, Delete and Storage.

◆ Video recorder

Press OK key to start video recording. The recording time depends on the time limit and the capacity of the memory card. Enter options to perform the following settings: Switch to camera, Video settings, Video quality and Storage and.

◆ Sound recorder

Enter Sound recorder. press left soft key and you can do: New record, List.

◆ FM radio

To use the FM Radio, please insert the earphone first and then listen to it. You can perform the followings operations as your need: Channel list, Manual input, Auto search, Settings, Record and File list.

File manager

File Manager explores the files in phone and external memory card. In this menu, you can manage the pictures, MP3 files and other folders etc in this menu.

Connectivity

Go to this menu and you can view: Bluetooth, SIM toolkit.

Settings

- ◆ Phone settings: Mobile phone in Two languages, English and Chinsese. In this menu, you can perform: Time and date; Language; Pref. input method; Display; Shortcut; Dedicated keys; Flight mode.

- ◆ Profiles: This mobile phone is provided with several profiles. You can customize the ringtone according to events and environment. You can customize a profile and activate it. Available options are
 - General
 - Silent
 - Meeting
 - Outdoor
- ◆ Dual SIM settings: Due to dual SIM cards phone design, user can set SIM card by 'Dual SIM settings', Such as Dual SIM open, Only SIM1 open, Only SIM2 open. There Are Prayer mode.
- ◆ Call settings: Enter This Call settings, you can view: Blacklist and Answer mode.
- ◆ Security settings: To protect personal privacy, you can set SIM security and Phone security.
- ◆ Restore settings: To reset the factory setting, please input the password '1122'.

FCC Warning

Specific Absorption Rate (SAR) information SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum

value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this mobile phone has been tested and meets the FCC RF

exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 0.5cm from the body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.