


DIP Switch Settings:

Switches 1 thru 4 select among sixteen different ID codes.
Switches 1 thru 3 select among eight different frequencies.
Switch 3 ON means the inside speaker switch works.
Switch 4 ON means the tower speaker switch works.

DipSwitch Chart

1	2	3	MHz
ON	ON	ON	903.37
OFF	ON	ON	906.37
ON	OFF	ON	907.87
OFF	OFF	ON	909.37
ON	ON	OFF	912.37
OFF	ON	OFF	915.37
ON	OFF	OFF	919.87
OFF	OFF	OFF	921.37

Receiver may be mounted directly to the side of a building.
Flanges may be drilled to mount on a mast clamp, etc.
If box is drilled, it must be sealed with UV resistant sealant.
Antenna should be vertical and in the line-of sight with the customer's intended transmitting location(s).
Receiver should be as far as possible (min 15ft) from all sources of electromagnetic interference and as high as practical.
Indoor or other unusual locations may be tested by observing the brightness of the signal strength LED.

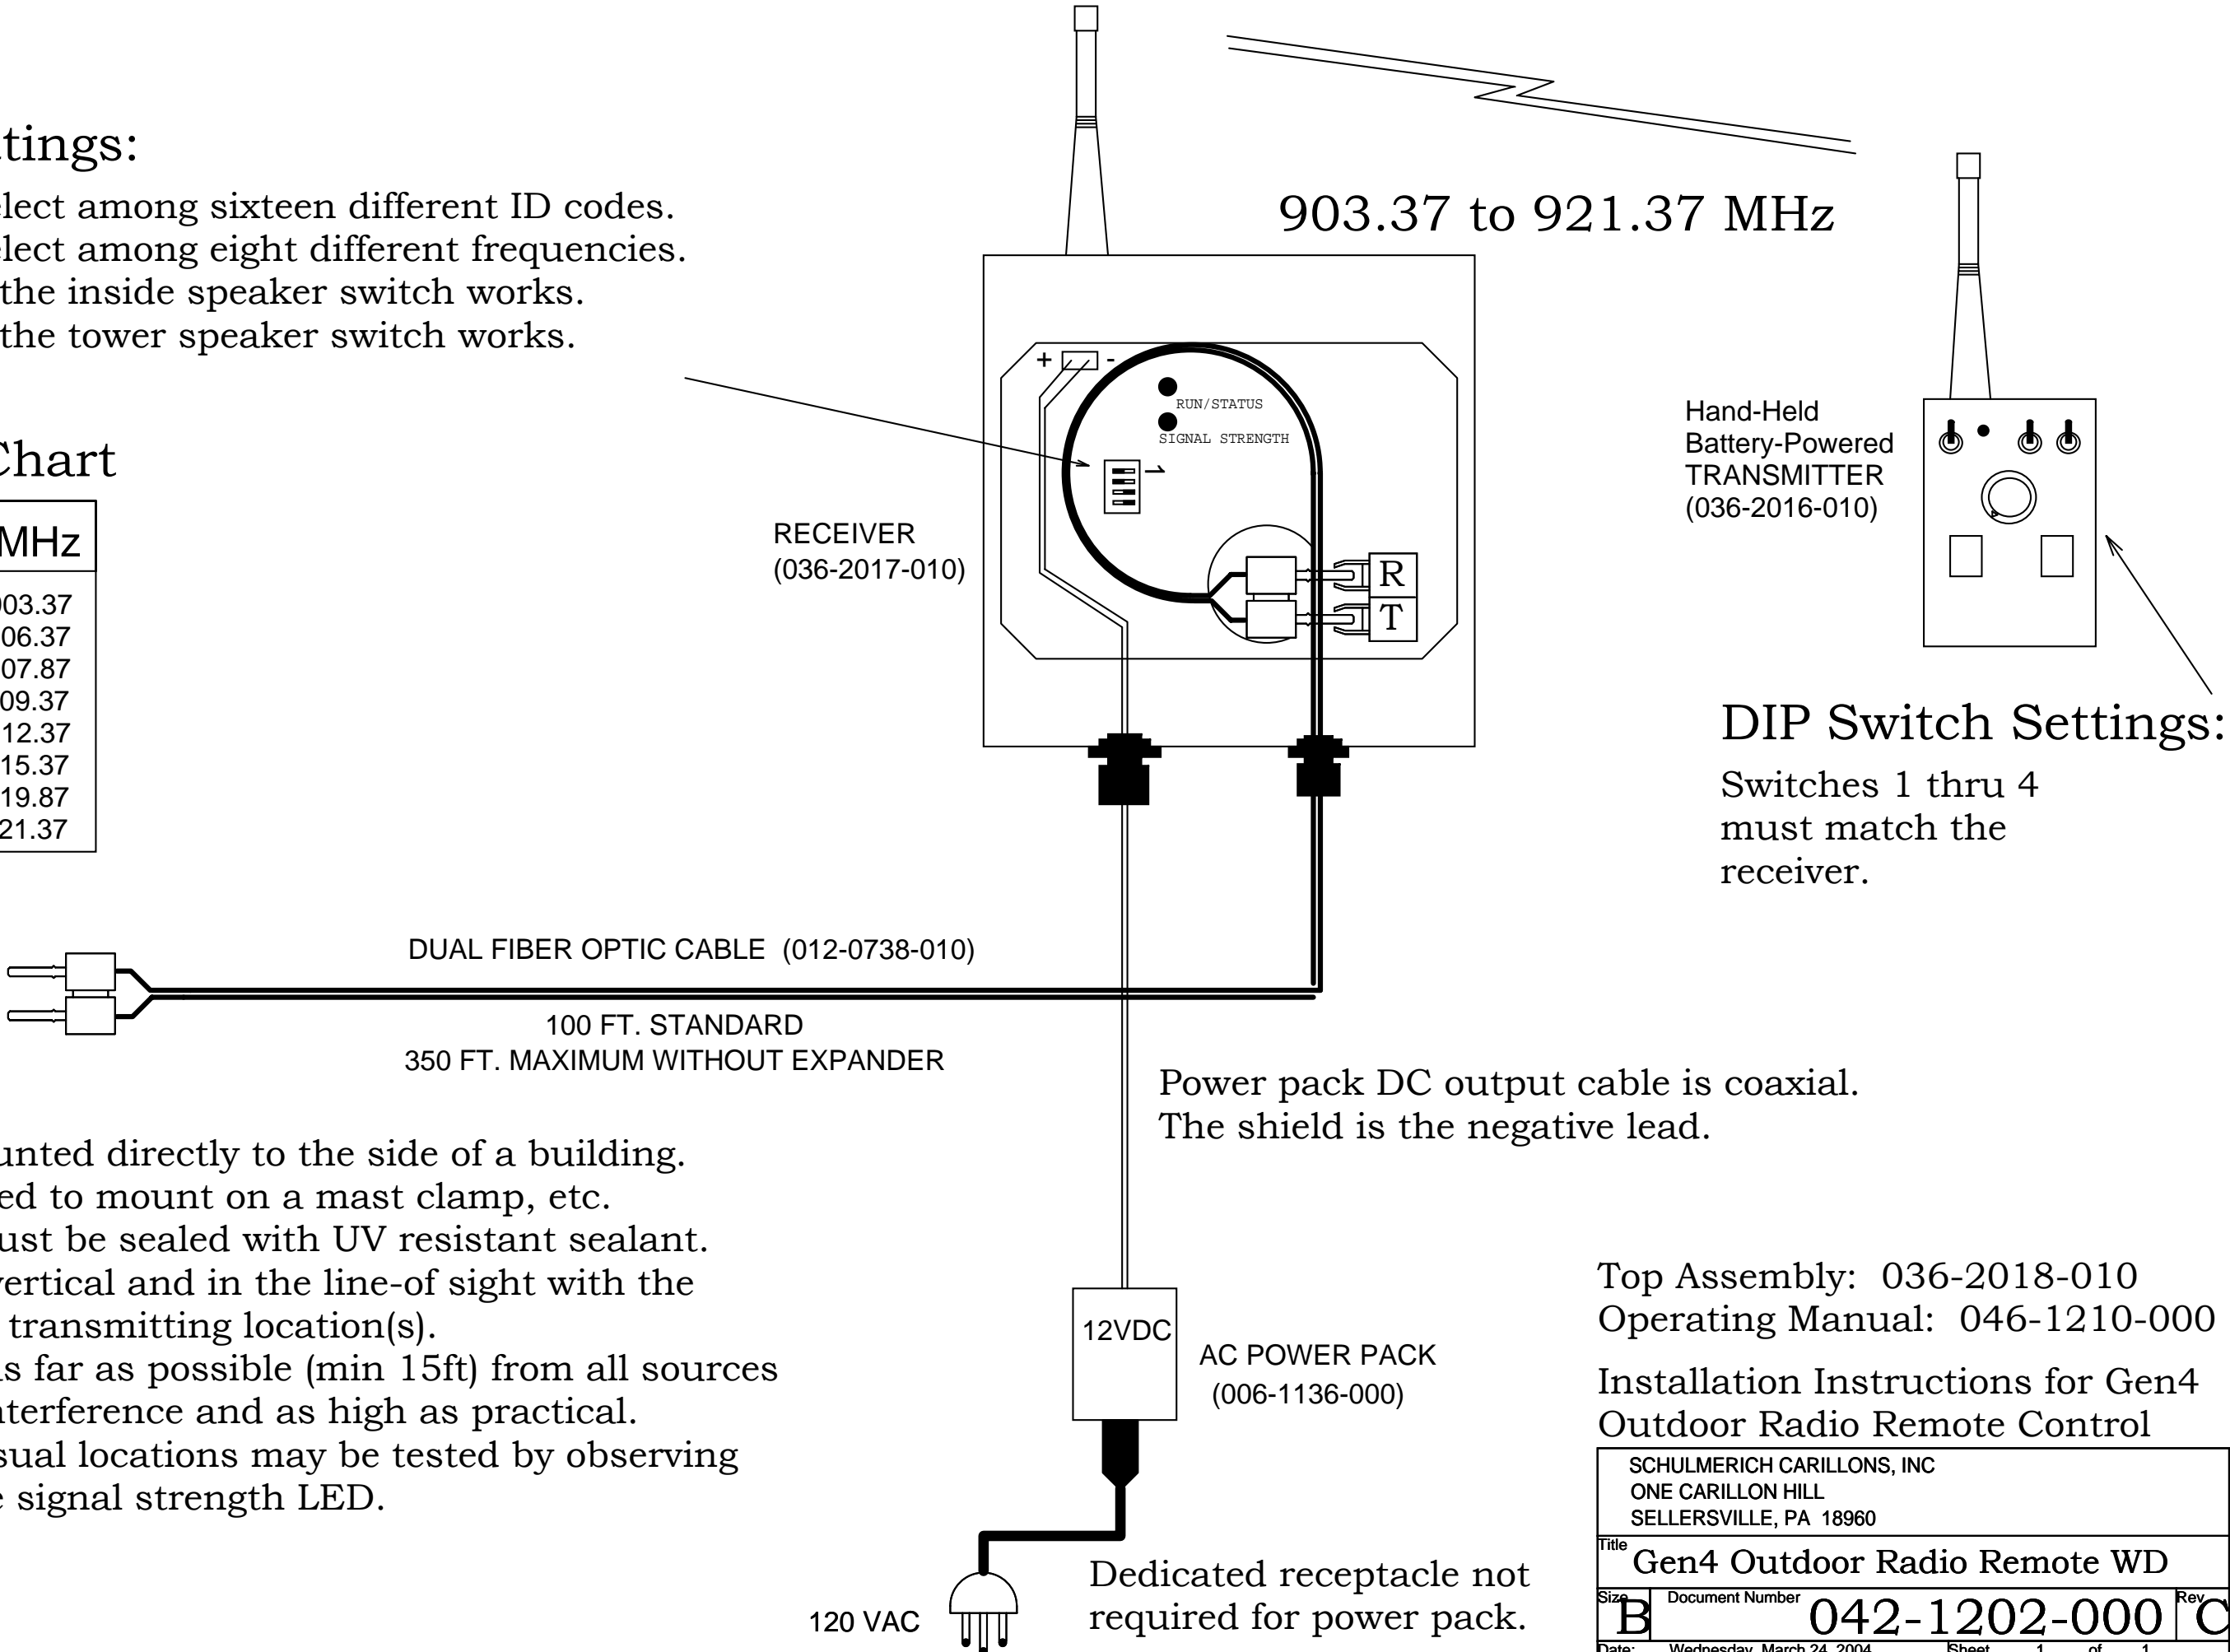

DIP Switch Settings:

Switches 1 thru 4 must match the receiver.

Top Assembly: 036-2018-010
Operating Manual: 046-1210-000
Installation Instructions for Gen4
Outdoor Radio Remote Control

SCHULMERICH CARILLONS, INC ONE CARILLON HILL SELLERSVILLE, PA 18960		
Title	Gen4 Outdoor Radio Remote WD	
Size	Document Number	Rev
B	042-1202-000	C
Date:	Wednesday, March 24, 2004	Sheet 1 of 1