


N747RX user manual

System Requirements:


- IBM® compatible system.
- Microsoft Windows® 2000, Me, XP.
- Available USB port.

Hardware Installation

1. Insert USB Dongle into the USB port of computer.

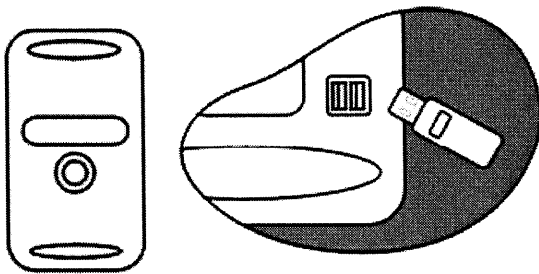

2. Press the connect button of the USB Dongle.

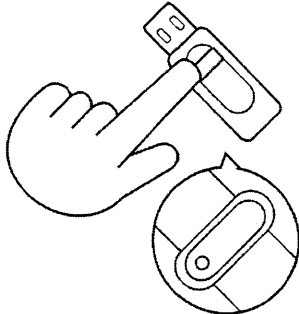

3. The USB Dongle will be connected with the transmitter.

Trouble Shooting

- If the USB Dongle doesn't work, please make sure the Dongle's connectors are plugged correctly into your computer.
- Press the connect button of the USB Dongle.
- Unplug the USB Dongle from the computer, then repeat the steps of the "Hardware Installation".

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

The user manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.